



## About This Document

---

This guide describes the provisioning of the Cisco Unified IP Conference Phone 8831 for Third-Party Call Control:

- [Purpose, page v](#)
- [Document Audience, page v](#)
- [Organization, page v](#)
- [Document Conventions, page vi](#)

## Purpose

The Cisco Unified IP Conference Phone 8831 for Third-Party Call Control can be remotely provisioned or preprovisioned by using the information in this document.

## Document Audience

This document is written for service providers who offer services by using the Cisco VoIP products and specifically for administrative staff responsible for remote provisioning and preprovisioning Cisco Telephony devices.

## Organization

This document is divided into the following chapters and appendices.

Chapter	Contents
<a href="#">Chapter 1, “Deployment and Provisioning”</a>	Introduces Cisco VoIP products.
<a href="#">Chapter 2, “Creating Provisioning Scripts for Configuration Profile”</a>	Describes how to work with Cisco provisioning scripts and configuration profiles.

Chapter	Contents
<a href="#">Chapter 3, “In-House Preprovisioning and Provisioning Servers”</a>	Describes the features and functionality available when preprovisioning Cisco IP Telephony devices in-house and provisioning them remotely.
<a href="#">Chapter 4, “Provisioning Examples”</a>	Step-by-step procedures for using the scripting language to create a configuration profile.
<a href="#">Chapter 5, “Provisioning Parameters”</a>	A systematic reference for each parameter on the Provisioning tab of the administration web server.
<a href="#">Appendix A, “Sample Configuration Profiles”</a>	A sample profile that you might find helpful.
<a href="#">Appendix B, “Acronyms”</a>	The expansions for the acronyms used in this document.
<a href="#">Appendix C, “Related Documentation”</a>	Links to resources for information and support.

## Document Conventions

The following typographic conventions are used in this document.

Typographic Element	Meaning
<b>Boldface</b>	An option on a menu or a literal value to be entered in a field.
<parameter>	Angle brackets (<>) identify parameters that appear on the configuration pages of the administration web server.
<i>Italic</i>	A variable that should be replaced with a literal value.
Monospaced Font	A code sample or system output.