



Cisco Unified SIP Proxy Module EXEC Commands

Last Updated: December 11, 2015

- [cusp](#)
- [shutdown graceful](#)
- [ip route](#)
- [show license smart udi](#)
- [show license smart summary](#)
- [show license smart status application cusp](#)
- [license smart destinationAddr](#)
- [license smart httpProxyAddr](#)
- [license smart activate cusp](#)
- [license smart register token_id](#)

cusp

To enter Cisco Unified SIP Proxy EXEC mode, use the **cusp** command in module EXEC mode. To exit Cisco Unified SIP Proxy EXEC mode, use the **exit** command.

cusp

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	1.0	This command was introduced.

Examples The following example accesses the Cisco Unified SIP Proxy module and enters Cisco Unified SIP Proxy EXEC mode:

```
Router# service-module integrated-service-engine 1/0 session
se-10-0-0-0> cusp
se-10-0-0-0(cusp)>
```

Related Commands	Command	Description
	configure	Enters Cisco Unified SIP Proxy configuration mode.
	exit	Exits out of a Cisco Unified SIP Proxy configuration or management mode and returns to the higher mode.

shutdown graceful

To perform a graceful shutdown of the Cisco Unified SIP Proxy module, use the **shutdown graceful** command in module EXEC mode.

shutdown graceful [*timeout*]

Syntax Description	<i>timeout</i>	(Optional) Specifies the timeout value for the Cisco Unified SIP Proxy module. The valid range is 10 to 180 seconds. The default is 32 seconds.
---------------------------	----------------	---

Command Default The default timeout value is 32 seconds.

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	1.0	This command was introduced.

Usage Guidelines The timeout value specifies how long the Cisco Unified SIP Proxy waits for pending tasks to complete before exiting.

Examples The following example executes a graceful shutdown of the Cisco Unified SIP Proxy module, specifying a timeout value of 120 seconds:

```
se-10-0-0-0# shutdown graceful 120
```

Related Commands	Command	Description
	reload	Restarts the Cisco Unified SIP Proxy system after the shutdown command has been used and activates the uploaded file information after the restore command has been used.

ip route

To establish static routes to Cisco Unified SIP Proxy's virtual interfaces and other routers, use the **ip route** command in module configuration mode.

```
ip route destination-ip destination-mask {gigabitethernet | ip-address}
```

Syntax Description

<i>destination-ip</i>	Destination network address.
<i>destination-mask</i>	Destination network address mask.
gigabitethernet	Virtual interface to which to route.
<i>ip-address</i>	Forwarding router's address.

Command Default

No static routes are established.

Command Modes

Module configuration (config)

Command History

Cisco Unified SIP Proxy Version	Modification
1.0	This command was introduced.

Usage Guidelines

The last argument specifies the forwarding address which is either the virtual interface to route to or the forwarding router's address.

Examples

The following example establishes a static route to Cisco Unified SIP Proxy's Gigabit Ethernet interface 0.2:

```
se-10-0-0-0(config)# ip route 10.10.10.2 255.255.255.0 GigabitEthernet0.2
```

The following example establishes a static route to the router whose IP address is 10.10.20.2:

```
se-10-0-0-0(config)# ip route 10.10.10.2 255.255.255.0 10.10.20.2
```

show license smart udi

To display the Unique Device Identifier (UDI) of Cisco Unified SIP Proxy, use the **show license smart udi** command in module EXEC mode.

show license smart udi

Syntax Description This command has no arguments or keywords.

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Examples The following example shows the Cisco Unified SIP Proxy software UDI:

```
se-9-41-12-29# show license smart udi
UDI: UC_CUSP:VJQ6q77nQod
Serial Number: VJQ6q77nQod
Product ID: UC_CUSP
```

show license smart summary

To show current state of the Cisco Unified SIP Proxy licensing application, entitlement count, time left in evaluation mode (if applicable), product specific details, authorization and registration related timers, and to capture recent failures with communication related to licensing server, use the **show license smart summary** command in module EXEC mode.

show license smart summary

Syntax Description This command has no arguments or keywords.

Command Modes Module EXEC (>)

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Examples The following example shows current state of the Cisco Unified SIP proxy licensing application:

```
se-10-104-45-238# show license smart summary
Smart Agent is Enabled: true
Current State of the Agent: UNIDENTIFIED
Is Evaluation Mode: true
Requested license count: 25
Entitlement tag: CUSP-5-TAG-1
Configured destination
address:https://tools.cisco.com/its/service/oddce/services/DDCEService
Transport Mode: TransportCallHome
Enforcement Mode: Eval
Evaluation period : 1890
```

show license smart status application cusp

To capture the current state of the licensing agent, use the **show license smart status application cusp** command in module EXEC mode.

show license smart status application cusp

Syntax Description This command has no arguments or keywords.

Command History

Cisco Unified SIP Proxy Version	Modification
9.0	This command was introduced.

Examples

The following example shows current state of the licensing agent:

```
se-10-104-45-238# show license smart status application cusp
Smart Agent is Enabled: true
```

```
Smart Agent current state: UNIDENTIFIED
```

license smart destinationAddr

To specify the smart manager URL, use the **license smart destinationAddr** command in module EXEC mode.

license smart destinationAddr *url*

Syntax Description	<i>url</i>	Connects to the central licensing server.
---------------------------	------------	---

Command Default	None
------------------------	------

Command Modes	Module EXEC (>)
----------------------	-----------------

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	Use this command to configure the central license URL.
-------------------------	--

Examples	The following example configures the smart manager URL:
-----------------	---

```
se-10-0-0-0# license smart destinationAddr
https://tools.cisco.com/its/service/oddce/services/D
DCEService
```


license smart httpProxyAddr

To set the HTTP(S) proxy server address for smart licensing, use the **license smart httpProxyAddr** command in module EXEC mode.

license smart httpProxyAddr *url*

Syntax Description	<i>url</i>	Specifies the HTTP proxy address.
---------------------------	------------	-----------------------------------

Command Default	None
------------------------	------

Command Modes	Module EXEC (>)
----------------------	-----------------

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	If HTTP Proxy is required to connect to the smart manager, use this command to set the proxy address through which the request will be sent.
-------------------------	--

Examples	The following example specifies the HTTP(S) proxy server address for smart licensing: <pre>se-10-0-0-0# license smart httpProxyAddr 10.1.1.1</pre>
-----------------	---

license smart activate cusp

To enable smart agent licensing in Cisco Unified SIP Proxy, use the **license smart activate cusp** command in module EXEC mode. To enable call routing through Cisco Unified SIP Proxy, this command must be enabled. Else, the calls will drop.

license smart activate cusp *count*

Syntax Description	<i>count</i>	Specifies the maximum calls per second. The value should be a multiple of 5.
---------------------------	--------------	--

Command Default	None
------------------------	------

Command Modes	Module EXEC (>)
----------------------	-----------------

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	Set license smart destinationAddr before running this command. If HTTP proxy is required, execute license smart httpProxyAddr before you execute this command.
-------------------------	--

Examples	The following example sets the maximum calls per second:
-----------------	--

```
se-10-0-0-0# license smart activate cusp 100
```

license smart register token_id

To register the device instance with the Cisco licensing cloud, use **license smart register token_id** in module EXEC mode. Execute **license smart activate cusp** before you execute this command.

license smart register token_id token

Syntax Description	<i>token</i>	Specifies the token generated in smart manager.
---------------------------	--------------	---

Command Default	None
------------------------	------

Command Modes	Cisco Unified SIP Proxy configuration (cusp-config)
----------------------	---

Command History	Cisco Unified SIP Proxy Version	Modification
	9.0	This command was introduced.

Usage Guidelines	Use this command to register the device instance with the Cisco licensing cloud.
-------------------------	--

Examples	The following example registers and sets the token ID required for registration of smart agent on Cisco Unified SIP Proxy:
-----------------	--

```
se-10-0-0-0# license smart register token_id
MjgXZjdK4Y2RtMwY5Ny00YTk4LOI2N2MtNjcxNmYaMTkzZGFhLHE0
MjA3MjY0%0AMjI5N34Z8OVAOdmNzSjdIeG4MMHIZTmZubNFzMHhK
OTYyeH1UZWQzQzVIM3Jk%0AHV3k3MD0A3D%0N
```

■ license smart register token_id