



# Command Line Interface

---

Unified CCX provides a command line interface as an alternative to the web administration page to configure and troubleshoot the system.

- [Command Line Interface Basics, on page 1](#)
- [Show Commands, on page 4](#)
- [Set Commands, on page 24](#)
- [run Commands, on page 36](#)
- [Utils Commands, on page 38](#)
- [File Commands, on page 65](#)
- [High Availability Commands, on page 70](#)
- [Cisco Finesse Commands, on page 79](#)
- [Cisco Unified Intelligence Center Commands, on page 104](#)
- [Cloud Connect, on page 118](#)
- [Specific License Reservation Commands, on page 125](#)

## Command Line Interface Basics

### Start CLI Session

Access the Cisco Unified Contact Center Express (Unified CCX) Command Line Interface (CLI) either remotely or locally using one of these two methods:

- From an SSH-enabled client workstation, use SSH to connect securely to the Unified CCX.
- Access the Unified CCX CLI directly or by using a terminal server that is connected to the serial port. Use this method if a problem exists with the IP address.

To start a CLI session:

#### Procedure

---

**Step 1** Perform one of the following tasks:

- From a remote system, use SSH to connect securely to the Cisco CCX Platform. In your SSH client, enter

```
ssh adminname@hostname
```

where *adminname* specifies the platform administrator ID and *hostname* specifies the hostname that was entered during installation.

For example, **ssh admin@ccx-1**.

- From a direct connection, you receive this prompt automatically:

```
ccx-1 login:
```

where **ccx-1** represents the hostname of the system.

Enter your administrator ID.

In either case, the system prompts you for a password.

**Step 2** Enter password.

The CLI prompt displays. The prompt represents the administrator ID, for example:

```
admin:
```

## Get Help with Commands

You can get two kinds of help for any command:

- Detailed help that includes a definition of the command and an example of its use.
- Short query help that includes only command syntax.

To get detailed help, at the CLI prompt, enter

**help** *command*

where *command* specifies the command name or the command and parameter.

### Detailed Help Example:

```
admin:help file list activelog help: This will list active logging files options
are: page - pause output detail - show detailed listing reverse - reverse sort
order date - sort by date size - sort by size file-spec can contain '*' as
wildcards
```

```
admin:file list activelog platform detail 02 Dec,2004 12:00:59 <dir> drf 02
Dec,2004 12:00:59 <dir> log 16 Nov,2004 21:45:43 8,557 enGui.log 27 Oct,2004
11:54:33 47,916 startup.log dir count = 2, file count = 2
```



**Note** If you enter the **help** *command* without specifying the name of a particular command as the optional parameter, the system provides information about the CLI system.

To query only command syntax, at the CLI prompt, enter

*command* ?

where *command* represents the command name or the command and parameter.

### Query Example

```
admin:file list activelog?Syntax: file list activelog file-spec [options] file-spec
mandatory file to view options optional page|detail|reverse|[date|size]
```




---

**Note** If you enter a ? after a menu command, such as **set**, it acts like the **Tab** key and lists the commands that are available.

---

## Exit Command with Ctrl-C Key Sequence

You can stop most interactive commands by entering the **Ctrl-C** key sequence.

```
admin:utils system upgrade initiate Warning: Do not close this window without
first exiting the upgrade command. Source: 1) Remote Filesystem 2) DVD/CD q) quit
Please select an option (1 - 2 or "q"): Exiting upgrade command. Please wait...
Control-C pressed admin:
```




---

**Note** If you execute the command **utils system switch-version** and enter **Yes** to start the process, entering **Ctrl-C** exits the command but does not stop the switch-version process.

---

## End CLI Session

To end the CLI session, enter **quit** at the CLI prompt.

If you are logged in remotely, you get logged off, and the SSH session is terminated. If you are logged in locally, you get logged off, and the login prompt appears.

## Additional CLI Commands

Besides the commands available on Unified CCX , more commands are available that can be executed as a part of Unified Operating System. For detailed information about all the CLI commands available for the Cisco Unified Operating System, see the *Command Line Interface Reference Guide for Cisco Unified Communications Solutions* available here:

[https://www.cisco.com/en/US/products/sw/voicesw/ps556/prod\\_maintenance\\_guides\\_list.html](https://www.cisco.com/en/US/products/sw/voicesw/ps556/prod_maintenance_guides_list.html)

The following Unified Operating System commands are **not applicable** to Unified CCX :

- delete dscp
- file delete license
- file get license

- file list license
- file view license
- set cert bulk
- set dscp
- set network cluster publisher
- set network dhcp
- set network ipv6 dhcp
- set network ipv6 service
- set network ipv6 static\_address
- show ctl
- show dscp
- show itl
- show network ipv6 settings
- show tech ccm\_service
- run loadxml
- utils sso unavailable




---

**Important**

When **file get** CLI command is used with the **abstime** as an option to collect log files, this filters the files based on the last modified timestamp. If the last modified time is updated, this CLI may not give desired results. Use the log collection feature in RTMT instead to collect the log files.

---

## Show Commands

Custom values are set on the VVB servers by the `VoiceBrowser.properties` and `SIPSubsystem.properties` properties files. The following commands may reset the custom values to their default values:

```
show vvb cache *
show vvb call *
show vvb mrp *
show vvb http client response timeout
```

## show uccx version

This command displays the Unified CCX versions on the active partition and the inactive partition. The inactive version is displayed only if the inactive partition is available.

### Command syntax

**show uccx version**

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:show uccx version
Active UCCX Version: 10.5.0.95000-152
Inactive UCCX Version: NA
Command successful.
```

## show uccx jtapi\_client version

This command displays the JTAPI client version that the Unified CCX is using on the active and the inactive partitions. The inactive version is displayed only if the inactive partition is available.

**Command syntax**

```
show uccx jtapi_client version
```

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:show uccx jtapi_client version
Active: Cisco JTAPI version 9.0(0.96000)-4 Release
Inactive: NA
Command successful.
```

## show uccx components

This command displays the various components in Unified CCX for which tracing can be turned on or off from CLI commands. This command is useful when you need the list of components to modify the trace settings of Unified CCX.

**Command syntax**

```
show uccx components
```

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:show uccx components
Various UCCX components are as follows -

UCCXEngine
UCCXCVD
UCCXEditor
JTAPI_CLIENT
UCCXAppAdmin
```

## show uccx subcomponents

This command displays the various subcomponents in specific Unified CCX component. This command is useful when you need the list of subcomponents to modify the trace settings of Unified CCX.

### Command syntax

**show uccx subcomponents** *component* [options]

### Options

- **component**—(Mandatory) Component such as UCCXEngine or UCCXEditor. For example, some of the UCCX subcomponents for 'UCCX\_ENGINE' component are:
  - APP\_MGR
  - ARCHIVE\_MGR
  - BOOTSTRAP\_MGR
  - CFG\_MGR
  - CHANNEL\_MGR and so on
- **page**—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx subcomponents uccxengine
```

## show uccx license

This command displays various licenses that are configured for Unified CCX and the features which have been activated. This command works only if the Unified CCX Cluster View Daemon (CVD) is running.



**Note** This command does not display license-expiry information. For more information about viewing licenses, see the *Cisco Unified Contact Center Express Administration and Operations Guide* .

This command is not applicable when you are using Smart Licensing.

### Command syntax

**show uccx license**

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx license
Configured Licenses:

Package: Cisco Unified CCX Premium
IVR Port(s): 300
Cisco Unified CCX Premium Seat(s): 300
High Availability : Enabled
Cisco Unified CCX Preview Outbound Dialer: Enabled
Cisco Unified CCX Quality Manager Seat(s): 300
Cisco Unified CCX Advanced Quality Manager Seat(s): 300
Cisco Unified CCX Workforce Manager Seat(s): 300
Cisco Unified CCX Compliance Recording Seat(s): 300
Cisco Unified CCX Maximum Agents: 400
Cisco Unified CCX Licensed Outbound IVR Port(s): 150
Cisco Unified CCX Licensed Outbound Agent Seat(s): 150
For dynamic content like the Inbound ports In Use and Outbound IVR Ports/Agent
Seats In Use please check using the Cisco Unified CCX Administration.

Command successful.
```

## show uccx trace levels

This command displays the names and trace levels of the various Unified CCX components and subcomponents. If the optional component is specified, then the trace settings of all the subcomponents of the specified component are displayed. If both the optional component and subcomponent are specified, then the trace settings of the specified subcomponent of the specified component are displayed.

### Command syntax

**show uccx trace levels [options]**

### Options

- **Component**—Displays the trace levels of all the subcomponents of this component
- **Sub-component**—Displays the trace levels of this subcomponent for the specified component. The trace levels can be displayed only if the component was specified
- **page**—Displays the output one page at a time

- **file**—Stores the output to a file instead of showing it on the console. The name of the file is displayed after the completion of the command

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx trace levels UCCXEngine
Trace settings for component 'UCCX_ENGINE' and module are
ALARM = true
DEBUGGING = false
XDEBUGGING1 = false
XDEBUGGING2 = false
XDEBUGGING3 = false
XDEBUGGING4 = false
XDEBUGGING5 = false

Command successful.
```

```
admin:show uccx trace levels UCCXEngine
Trace settings for component 'UCCX_ENGINE' and module are
ALARM = true
DEBUGGING = false
XDEBUGGING1 = false
XDEBUGGING2 = false
XDEBUGGING3 = false
XDEBUGGING4 = false
XDEBUGGING5 = false

Command successful.
```

## show uccx provider ip axl

This command shows the Unified CCX AXL provider IP address.

### Command syntax

**show uccx provider ip axl**

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin: show uccx provider ip axl
Cisco Unified Communications Manager IP is 10.78.14.140

Command Successful.
```

## show uccx provider ip jtapi

This command shows the Unified CCX JTAPI provider IP address.

### Command syntax

**show uccx provider ip jtapi**

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin: show uccx provider ip jtapi
UCCX JTAPI Provider is 10.78.14.140

Command Successful.
```

## show uccx provider ip rmcm

This command shows the Unified CCX Resource Manager-Contact Manager provider IP address.

### Command syntax

**show uccx provider ip rmcm**

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin: show uccx provider ip rmcm
UCCX RMCM Provider is 10.78.14.140

Command Successful.
```

## show uccx trace file size

This command shows the trace file size for the specified component.

### Command syntax

**show uccx trace file size *[component]***

### Options

component—(Mandatory) Component such as UCCXEngine or UCCXEditor

### Requirements

Level privilege: 1  
Command privilege level: 1  
Allowed during upgrade: Yes

### Example

```
admin: show uccx trace file size UCCXEngine
Trace file size for UCCXEngine is 3000000 bytes.

Command Successful.
```

## show uccx trace file count

This commands shows the trace file count for the specified component, which is the maximum number of trace files. The new file overwrites the older files.

### Command syntax

**show uccx trace file count [component]**

### Options

**component**—(Mandatory) Component such as UCCXEngine or UCCXEditor

### Requirements

Level privilege: 1  
Command privilege level: 1  
Allowed during upgrade: Yes

### Example

```
admin: show uccx trace file count UCCXEngine
Trace file count for UCCXEngine is 300.

Command Successful.
```

## show uccx livedata connections

This command displays the status of the Socket.IO service and the following details of the LiveData connection:

- Total Active Client Connections to Socket.IO server.
- Total Long Polling clients connected to Socket.IO server.

### Command syntax

**show uccx livedata connections**

### Requirements

Level privilege: 0  
Command privilege level: 0  
Allowed during upgrade: Yes

### Example

```
admin:show uccx socketio connection
Server Status: Active
Client Count: 2 (polling: 1)

Command successful.
```

## show tls server min-version

This command allows you to show the minimum TLS version in the server that is currently configured.

### Command syntax

```
show tls server min-version [tls server minVersion]
```

### Options

**tls server minVersion**—Refers to 1.2 (TLS Version 1.2)

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:show tls server min-version
The server tls min-version is set to 1.2
Command successful
```

## show tls client min-version

This command allows you to show the minimum TLS version in the client that is currently configured.

### Command syntax

```
show tls client min-version [tls client minVersion]
```

### Options

**tls client minVersion**—Refers to 1.2 (TLS Version 1.2)

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:show tls client min-version
The client tls min-version is set to 1.2
Command successful
```

## show uccx tech dbserver all

This command runs the commands **show uccx tech dbserver log diagnostic** and **show uccx tech dbserver status** in succession and stores the output of the commands in a file.

### Command syntax

**show uccx tech dbserver all**



**Note** The name of the file containing the output from each **show uccx tech** command run is automatically generated by the command script. The file path and filename are displayed after the completion of the operation.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx tech dbserver all
This operation may take a few minutes to complete. Please wait...

Output is in file: uccx/cli/DbServerAll_1250664874580.txt

Command successful.
```

## show uccx tech dbserver log diagnostic

This command checks for the existence of Informix assertion failure and shared memory dump logs. If logs exist, the name and path of the log files are displayed.

### Command syntax

**show uccx tech dbserver log diagnostic [options]**

### Options

**page**—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx tech dbserver log diagnostic
This operation may take a few minutes to complete. Please wait...

The following diagnostic logs are available for the UC database server.
  core/log.txt
```

```
core/gskit.log
Command successful.
```

## show uccx tech dbserver status

This command outputs a detailed status report of the Unified CCX database server (IDS engine) instance, that is **onstat -a** to a txt file.

### Command syntax

**show uccx tech dbserver status**



---

**Note** The name of the file is automatically generated by the command script. The file path and filename are displayed after the completion of the operation.

---

### Requirements

Level privilege—0

Command privilege level—0

Allowed during upgrade—Yes

### Example

```
admin:show uccx tech dbserver status
This operation may take a few minutes to complete. Please wait...

Output is in file: uccx/cli/DbServerStatus_1250666138379.txt

Command successful.
```

## show uccx dbcontents

This command dumps the contents of the specified database. This command can be used to recreate a customer database on a test system for troubleshooting. For each Unified CCX database table, a dump csv file is created. Because there are huge numbers of files, these files are created in a subdirectory which will have the name as DbContents\_<TIMESTAMP>. After the completion of the command, the subdirectory name and subdirectory path are displayed.

### Command syntax

**show uccx dbcontents database\_name**

### Arguments

**database\_name**—(Mandatory) Database whose contents will be output to CSV file

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:show uccx dbcontents db_cra
This operation may take a few minutes to complete. Please wait...
Database contents dump is in directory: uccx/cli/DbContents_1250666234370

Command successful.
```

## show uccx dbtable schema

This command displays the column names of the specified table.

### Command syntax

**show uccx dbtable schema database\_name table\_name [options]**

### Arguments

**database\_name**—(Mandatory) Name of the database (db\_cra, db\_cra\_repository etc.) in which the table resides

**table\_name**—(Mandatory) Name of the table

### Options

**page**—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx dbtable schema db_cra_repository documentsfiletbl
List of columns in table 'documentsfiletbl' in database 'db_cra_repository' is -
filename (nvarchar)
parentfolderid (nvarchar)
payload (blob)
lastmodifystamp (datetime year to fraction(3))
lastmodifyuser (nvarchar)
length (int)
checksum (int)

Command successful.
```

## show uccx dbschema

This command outputs the schema for all the tables, views, and stored procedures in the specified database to a text file. The output consists of SQL statements that are necessary to replicate a specified database. The IDS “dbschema” utility is used to create the file. This command only displays the DB schema; it does not provide any data in the tables.

### Command syntax

**show uccx dbschema database\_name****Arguments**

**database\_name**—(Mandatory) Name of the database whose schema will be output



---

**Note** The name of the file containing the schema is automatically generated by the command script. The file path and filename are displayed after the completion of the operation.

---

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:show uccx dbschema db_cra
Output is in file: uccx/cli7/schema_db_cra_080212-110543.txt
```

## show uccx dbtable list

This command displays the names of all the tables contained in the specified Unified CCX IDS database. The database names can be db\_cra, db\_cra\_repository, FCRasSvr, sysmaster.

**Command syntax**

**show uccx dbtable list database\_name [options]**

**Arguments**

**database\_name**—(Mandatory) Database name where tables reside

**Options**

**page**—Displays the output one page at a time

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:show uccx dbtable list
db_craList of tables in database 'db_cra' is -
agentconnectiondetail
agentroutingsetting
agentstatedetail
application
areacode
campaign
campaignsqmap
```

```

configlog
configschema
configschemacolumn
configseed
...
...
teamcsqmapping
workflowtask
Command successful.

```

## show uccx dbserver disk

This command displays information for each storage space (chunks and dbspaces).

### Command syntax

**show uccx dbserver disk [options]**

### Options

**page**—Displays the output one page at a time

**file**—Outputs the information to a .txt file. The filename is generated dynamically at runtime and the filename and path are displayed to user after the completion of the operation.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```

admin:show uccx dbserver disk
SNO. DATABASE NAME          TOTAL SIZE (MB) USED SIZE (MB) FREE SIZE (MB) PERCENT
FREE
-----
1      rootdbs                358.4           66.3           292.1
81%
2      log_dbs                 317.4           307.3           10.1
3%
3      db_cra                  512.0            8.8           503.2
98%
4      db_hist                 13000.0         3651.4         9348.6
71%
5      db_cra_repository       10.2             2.9             7.3
71%
6      db_frascal              512.0            2.8           509.2
99%
7      temp_uccx              1572.9           0.1           1572.7
99%
8      uccx_sbospace          3145.7           2988.1         157.6
5%
9      uccx_er                 204.8            0.1           204.7
99%
10     uccx_ersb              1572.9           1494.1         78.8
5%

```

CHUNK NO.	OFFSET	TOTAL SIZE (MB)	FREE SIZE (MB)	FILENAME
1	0	358.4	292.1	/var/opt/cisco/uccx/db/root_uccx_dbs
2	0	317.4	10.1	/var/opt/cisco/uccx/db/log_dbs
3	0	512.0	503.2	/var/opt/cisco/uccx/db/db_cra_dbs
4	0	13000.0	9348.6	/common/var-uccx/dbc/db_hist_dbs
5	0	10.2	7.3	/var/opt/cisco/uccx/db/db_cra_repository_dbs
6	0	512.0	509.2	/var/opt/cisco/uccx/db/db_frascal_dbs
7	0	1572.9	1572.8	/common/var-uccx/dbc/temp_uccx_dbs
8	0	3145.7	157.6	/var/opt/cisco/uccx/db/uccx_sbospace_dbs
9	0	204.8	204.7	/common/var-uccx/dbc/uccx_er_dbs
10	0	1572.9	78.8	/common/var-uccx/dbc/uccx_ersb_dbs

## show uccx dbserver sessions all

This command displays detailed session and SQL-related information for each database user session. The content of the information displayed is equivalent to running the IDS command **onstat -g ses** for each active session.

### Command syntax

**show uccx dbserver sessions all [options]**

### Options

- **page**—Displays the output one page at a time
- **file**—Outputs the information to a txt file. The filename is generated dynamically at runtime and the filename and path are displayed to user after the completion of the operation.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx dbserver sessions all
IBM Informix Dynamic Server Version 10.00.UC5XD  -- On-Line -- Up 58 days 02:26:37
-- 444676 Kbytes

session
id      user      tty      pid      hostname  #RSAM   total    used    dynamic
27      cudbeven -        6750     crslnx   1        151552  75400   explain
off

tid     name      rstcb    flags    curstk    status
75      sqlxec   52477164 Y--P---  4208     cond wait(netnorm)
```

```

Memory pools      count 2
name              class addr      totalsize freesize #allocfrag #freefrag
27                V      5309a020 147456   73704    148       50
27*00            V      5442f020 4096    2448     1         1

name              free      used      name              free      used
overhead          0         3296     scb                0         96
opentable         0         6456     filetable          0        1088

sqscb info
scb              sqscb      optofc      pdqpriority sqlstats optcompind directives
52fda4d0 53234018 0           0           0         0           1

Sess  SQL              Current      Iso Lock      SQL  ISAM F.E.
Id    Stmt type         Database     Lvl Mode      ERR  ERR  Vers Explain
27   -                uccxdirdb   CR  Wait 30    0   0   9.03 Off

Last parsed SQL statement :
SELECT FIRST 100 *, CAST(Timestamp AS varchar(32)) AS strTimestamp,
CAST(Object_Id AS varchar(64)) AS strObject_Id FROM
UccxDB: DbChangeEventQ WHERE EventId > ? ORDER BY EventId ASC

```

## show uccx dbserver session

This command displays detailed session and SQL-related information for a specific session, which represents a user connected to the database server. The content of the information displayed is equivalent to running the IDS command **onstat -g ses** for an active session specified by the session-id.

### Command syntax

**show uccx dbserver session session\_id [options]**

### Arguments

**session\_id**—(Mandatory) The Informix session ID number

### Options

**page**—Displays the output one page at a time

**file**—Outputs the information to a .txt file. The filename is generated dynamically at runtime and the filename and path are displayed to user after the completion of the operation.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```

admin:show uccx dbserver session 58
IBM Informix Dynamic Server Version 11.50.UC4      -- On-Line -- Up 14 days 04:43:40
-- 254160 Kbytes

session              effective      #RSAM      total      used
dynamic
id      user      user      tty      pid      hostname threads  memory  memory

```

```

58      explain
      uccxuser -          -          -1          sakkumar 1          126976          107496
      off

tid      name      rstcb      flags      curstk      status
93      sqlexec  4b2deca0  Y--P---   5680      cond wait  netnorm  -

Memory pools      count 2
name      class addr      totalsize freesize #allocfrag #freefrag
58      V      4caa9028 122880    17064    332      18
58*00    V      4c9d0028 4096      2416     1         1

name      free      used      name      free      used
overhead  0         3360     scb       0         96
opentable 0         8344     filetable 0         1104
ru        0         464      log       0         16512
temprec   0         21600    keys      0         1392
ralloc    0         5120     gentcb    0         1240
ostcb     0         2600     sqscb     0         29384
sql       0         40       rdahead   0         848
hashfiletab 0         280     osenv     0         1552
sqtcb     0         7464     fragman   0         368
GenPg     0         592      udr       0         5136

sqscb info
scb      sqscb      optofc      pdqpriority sqlstats optcompind directives
4c907018 4cc92018 1           0           0           2           1

Sess      SQL      Current      Iso Lock      SQL ISAM F.E.
Id      Stmt type      Database      Lvl Mode      ERR ERR Vers Explain
58      -          db_cra      LC Not Wait   0 0 9.28 Off

Last parsed SQL statement :
select campaignen0_.campaignID as campaignID3_, campaignen0_.profileID as
profileID3_, campaignen0_.recordID as recordID3_, campaignen0_.active as
active3_, campaignen0_.ansMachineRetry as ansMachi5_3_,
campaignen0_.cacheSize as cacheSize3_, campaignen0_.callbackTimeLimit as
callback7_3_, campaignen0_.campaignName as campaign8_3_,
campaignen0_.createDateTime as createDa9_3_, campaignen0_.dateInactive as
dateIna10_3_, campaignen0_.description as descripl1_3_,
campaignen0_.enabled as enabled3_, campaignen0_.endTime as endTime3_,
campaignen0_.maxAttempts as maxAttel14_3_,
campaignen0_.missedCallbackAction as missedC15_3_,
campaignen0_.privateData as privatel16_3_, campaignen0_.startTime as
startTime3_ from Campaign campaignen0_ where campaignen0_.active=?
Command successful.

```

## show uccx dbserver sessions list

This command displays a one-line summary of each active Unified CCX database session. The summary includes the database name, username, session ID, and process ID. The session ID information can be used to display more detailed information about a specified session using the **show uccx dbserver session** command.

### Command syntax

**show uccx dbserver sessions list** [options]

### Options

**page**—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx dbserver sessions list
-----
DATABASE          USERNAME          SESSION  PROCESS ID
-----
db_cra            uccxuser         49       -1
db_cra            uccxuser         44       -1
db_cra            uccxuser         46       -1
db_cra            uccxuser         61       -1
db_cra            uccxuser         24       -1
db_cra            uccxuser         18       -1
db_cra            uccxhruser       31224    -1
db_cra            uccxuser         62       -1
db_cra            uccxuser         60       -1
db_cra            uccxuser         47       -1
db_cra            uccxuser         59       -1
db_cra            uccxuser         58       -1
db_cra            uccxuser         48       -1
db_cra            uccxuser         50       -1
db_cra            uccxcliuser      31616    -1

Command successful.
```

## show uccx dbserver user list

This command displays a one-line summary of each active uccx database user. The summary includes the database name, session ID and process ID. The session ID information can be used to display more detailed information about a specified user session using the **show Unified CCX dbserver session** command.

### Command syntax

**show uccx dbserver user list [option]**

### Option

**page**—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx dbserver user list
-----
DATABASE          USERNAME          SESSION  PROCESS ID
-----
sysadmin          informix          15       0
sysadmin          informix          16       0
sysadmin          informix          17       0
sysmaster         uccxuser         18       -1
db_cra            uccxuser         18       -1
```

```

sysmaster          uccxuser          24          -1
db_cra             uccxuser          24          -1
db_cra_repository uccxuser          25          -1
sysmaster          uccxuser          25          -1
fcrassvr           uccxuser          26          -1
sysmaster          uccxuser          26          -1
sysmaster          uccxuser          44          -1
db_cra             uccxuser          44          -1
db_cra_repository uccxuser          45          -1
sysmaster          uccxuser          46          -1
db_cra             uccxuser          46          -1
sysmaster          uccxuser          47          -1
db_cra             uccxuser          47          -1
db_cra             uccxuser          48          -1
sysmaster          uccxuser          48          -1
sysmaster          uccxuser          49          -1

```

```
Command successful.
```

## show uccx dbserver user waiting

This command displays a one-line summary of each Unified CCX database user and also displays whether a user session is waiting for a resource.

### Command syntax

```
show uccx dbserver user waiting [option]
```

### Option

page—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```

admin:show uccx dbserver user waiting
-----
USERNAME      SESSION ID  LATCH  LOCK  BUFFER  CHECKPOINT  TRANSACTION  INCRITICAL
-----
informix      16         N      N      N      N           N             N
informix      17         N      N      N      N           N             N
informix      15         N      N      N      N           N             N
uccxcliuser   33927      N      N      N      N           N             N
uccxcliuser   32784      N      N      N      N           N             N
uccxcliuser   32737      N      N      N      N           N             N
uccxcliuser   32631      N      N      N      N           N             N
uccxcliuser   34424      N      N      N      N           N             N
uccxcliuser   32522      N      N      N      N           N             N
uccxcliuser   34364      N      N      N      N           N             N
uccxcliuser   32508      N      N      N      N           N             N
uccxcliuser   32480      N      N      N      N           N             N
uccxcliuser   31616      N      N      N      N           N             N
uccxcliuser   31601      N      N      N      N           N             N
uccxcliuser   34327      N      N      N      N           N             N
uccxcliuser   34071      N      N      N      N           N             N

```

```
uccxcliuser      33981      N      N      N      N      N      N
uccxcliuser      33939      N      N      N      N      N      N
uccxhruser       31224      N      N      N      N      N      N
uccxuser         30278      N      N      N      N      N      N
uccxuser         60         N      N      N      N      N      N
```

```
Command successful.
```

## show uccx tech dbserver log message

This command displays the most recent messages in the Informix message log. The number of messages displayed is determined by the lines parameter.

### Command syntax

```
show uccx tech dbserver log message [lines] [option]
```

### Arguments

**lines**—(Optional) Number of lines from message log that will be displayed. Defaults to 20.

### Option

**page**—Displays the output one page at a time

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx tech dbserver log message 10
Message Log File: online.uccx.log

The last 10 lines of the log file are -

16:05:19 Maximum server connections 33
16:05:19 Checkpoint Statistics - Avg. Txn Block Time 0.000, # Txns blocked 0,
Plog used 21, Llog used 12

16:10:19 Checkpoint Completed: duration was 0 seconds.
16:10:19 Wed Aug 19 - loguniq 8, logpos 0x93c018, timestamp: 0xb0244c Interval:
4106

16:10:19 Maximum server connections 33
16:10:19 Checkpoint Statistics - Avg. Txn Block Time 0.000, # Txns blocked 0,
Plog used 2, Llog used 2

Command successful.
```

## show uccx dbtable contents

This command displays the contents of the specified table.

### Command syntax

**show uccx dbtable contents database\_name table\_name [option]****Arguments**

database\_name—(Mandatory) Name of the database for example, db\_cra, db\_cra\_repository in which the table resides

table\_name—(Mandatory) Name of the table

**Option**

page—Displays the output one page at a time

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:show uccx dbtable contents db_cra resource
Output is in file: uccx/cli/resource_Contents_1250666550481.csv

Command successful.
```

## show vmtools version

This command displays the current version of the vmtools that are installed on the system.

**Command syntax**

```
show vmtools version
```

**Requirements**

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

**Example**

```
admin:show vmtools version
Current VMWare Tools running version: 10.0.9.55972 (build-3917699)
```

## show uccx asr sessions

This command shows the number of concurrent active ASR sessions.

**Command syntax**

```
show uccx asr sessions
```

**Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:show uccx asr sessions
10.11.12.13 : Concurrent = 0 , Aggregate [Success = 0 , Failure = 0 ]
11.12.13.14 : Concurrent = 0 , Aggregate [Success = 0 , Failure = 0 ]
Total : Concurrent = 0 , Aggregate [Success = 0 Failure = 0 ]

Command successful.
```

## show uccx tts sessions

This command shows the number of concurrent active TTS sessions.

### Command syntax

**show uccx tts sessions**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:show uccx tts sessions
10.11.12.13 : Concurrent = 0 , Aggregate [Success = 0 , Failure = 0 ]
11.12.13.14 : Concurrent = 0 , Aggregate [Success = 0 , Failure = 0 ]
Total : Concurrent = 0 , Aggregate [Success = 0 Failure = 0 ]

Command successful.
```

## Set Commands

### set uccx trace defaults

This command sets the default trace levels for all components and subcomponents in Unified CCX. If the optional component is specified, it sets the default trace levels only for all the subcomponents of the specified component. If both the optional component and subcomponent are specified, it sets the default trace levels only for the specified subcomponent under the component.

### Command syntax

**set uccx trace defaults [component] [subcomponent]**

### Options

- **Component**—(Mandatory) Sets the default trace levels for all the subcomponents of this component. The various components are UCCXEngine, UCCXCvd, UCCXAppAdmin and JTAPI\_CLIENT.

- **Sub-component**—(Optional) Sets the default trace levels for this subcomponent for the specified component. This trace level can be specified only if the component was specified preceding it.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set uccx trace defaults uccxengine
SS_HTTP
Default traces restored successfully for the module.
```

## set uccx trace file size component size

This command sets the trace file size for the specified component.

### Command syntax

```
set uccx trace file size [component] [size]
```

### Parameters

**component**—(Mandatory) The component such as UCCXEngine or UCCXEditor

**size**—(Mandatory) Specifies the file size in bytes

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set uccx trace file size uccxengine 3145728
Trace file size for uccxengine is set to 3145728 bytes.
```

## set uccx trace file count component no-of-files

This command sets the trace file count for the specified component, that is the maximum number of trace files after which older files will start getting overwritten.

### Command syntax

```
set uccx trace file count [component] [no-of-files]
```

### Arguments

- **component**—(Mandatory) The component such as UCCXEngine or UCCXEditor.
- **no-of-files**—(Mandatory) Specifies the number of files after which older files will get overwritten.

**Requirements**

Level privilege—1

Command privilege level—1

Allowed during upgrade—No

**Example**

```
admin:set uccx trace file count uccxengine 300
Trace file count for uccxengine is set to 300
```

**set uccx trace enable**

Enables the specified logging level for the sub-component in the component mentioned in the command. The user can enter multiple levels of logging by separating them by commas.

After the completion of the command, a message is displayed showing the current log trace settings enabled.

Restart the Unified CCX services for the trace changes to take effect.

**Command syntax**

**set uccx trace enable** [*component*] [*sub-component*] [*level*]

**Options**

**component**—(Mandatory) The component such as UCCXEngine or UCCXEditor or JTAPI\_CLIENT

**sub-component**—(Mandatory) The subcomponent within the component such as JTAPI Subsystem within the UCCXEngine component. For the JTAPI\_CLIENT component, there are no sub-components.

**sub-component**—(Mandatory) The subcomponent within the component such as SS\_SIP within the UCCXEngine component. For the SS\_SIP component, there are no sub-components.

**Level**—(Mandatory) The logging level which will be enabled. Tracing levels are Debugging, XDebugging1, XDebugging2, XDebugging2, XDebugging3, XDebugging4 and XDebugging5. For the JTAPI\_CLIENT, the tracing levels are Warning, Informational, Debug, Jtapi\_Debug, JtapiImpl\_Debug, Cti\_Debug, CtiImpl\_Debug, Protocol\_Debug and Misc\_Debug.

**Level**—(Mandatory) The logging level which will be enabled. Tracing levels are Debugging, XDebugging1, XDebugging2, XDebugging2, XDebugging3, XDebugging4 and XDebugging5.

**Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

**Example 1**

```
admin:set uccx trace enable uccxengine SS_VB debugging
Trace for uccxengine:SS_VB:debugging is enabled.
Command successful.
```

**Example 2**

```
admin:set uccx trace enable UCCXEngine SS_SIP XDEBUGGING1,XDEBUGGING2
Trace for uccxengine:SS_SIP:XDEBUGGING1 is enabled
Trace for uccxengine:SS_SIP:XDEBUGGING2 is enabled
Command successful.
```

## set uccx trace disable

Disables the specified logging level for the subcomponent in the component mentioned in the command. The user can enter multiple levels of logging by separating them by commas. You cannot use this command to turn off Alarm tracing.

After the completion of the command, a message is displayed showing the current log trace settings enabled.

Restart the Unified CCX services for the trace changes to take effect.

### Command syntax

```
set uccx trace disable [component] [sub-component] [level]
```

### Options

**Component**—The component such as UCCXEngine or UCCXEditor or JTAPI\_CLIENT.

**Sub-component**—The subcomponent within the component such as JTAPI Subsystem within the UCCXEngine component. For the JTAPI\_CLIENT component, there are no subcomponents.

**Sub-component**—The subcomponent within the component such as SS\_SIP within the UCCXEngine component.

**Level**—(Mandatory) The logging level which will be disabled. Tracing levels are Debugging, XDebugging1, XDebugging2, XDebugging2, XDebugging3, XDebugging4 and XDebugging5. The tracing levels will also be available as part of the help of the command.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example 1

```
admin:set uccx trace disable uccxengine SS_VB debugging
Trace for uccxengine:SS_VB:debugging is disabled.
Command successful.
```

### Example 2

```
set uccx trace disable UCCXEngine SS_SIP XDEBUGGING1,XDEBUGGING2
Trace for uccxengine:SS_SIP:XDEBUGGING1 is disabled
Trace for uccxengine:SS_SIP:XDEBUGGING2 is disabled
Command successful.
```

## set password user security

This command changes the security/SFTP password on Unified CCX. In addition to changing the security password, it also changes the passwords of the internal Unified CCX users.

### Command syntax

**set password user security**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set password user security
Please enter the old password: *****
Please enter the new password: *****
Reenter new password to confirm: *****
WARNING:
Please make sure that the security password on the publisher is changed first.
The security password needs to be the same on all cluster nodes,
including the application server, therefore the security password on all nodes
need to be changed.

After changing the security password on a cluster node, please restart that node.

Continue (y/n)?y

Please wait...

Command successful.
```

## set tls server min-version

This command allows you to configure the minimum TLS version in the server that can be used for inbound SSL connections. You must restart the system for the changes to take effect.




---

**Note** In a high availability (HA) deployment, run this CLI command on both the nodes of the cluster. Restart both the nodes after executing the CLI command.

---

### Command syntax

**set tls server min-version [tls server minVersion]**

### Options

**tls server minVersion**—Refers to 1.2 (TLS Version 1.2)

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set tls server min-version 1.2
**WARNING** If you are lowering the TLS version it can lead to security issues
**WARNING**
Do you really want to continue (yes/no) ? yes
Execute this command in the other nodes of the cluster.
Restart the system using the command 'utils system restart' for the changes to
take effect
Command successful
```

## set tls client min-version

This command allows you to configure the minimum TLS version in the client that can be used for outbound SSL connections. You must restart the system for the changes to take effect.



---

**Note** In a high availability (HA) deployment, run this CLI command on both the nodes of the cluster. Restart both the nodes after executing the CLI command.

---

### Command syntax

**set tls client min-version [tls client minVersion]**

### Options

**tls client minVersion**—Refers to 1.2 (TLS Version 1.2)

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set tls client min-version 1.2
**WARNING** If you are lowering the TLS version it can lead to security issues
**WARNING**
Do you really want to continue (yes/no) ? yes
Execute this command in the other nodes of the cluster.
Restart the system using the command 'utils system restart' for the changes to
take effect
Command successful
```

## set uccx provider ip axl

This command sets the Unified CCX AXL provider IP address. Use this command only when the IP address of Unified Communications Manager has been changed and Unified CCX is being pointed to the new IP address.



---

**Note** After you run this command, restart the Unified CCX Engine service. After Unified CCX Engine service starts successfully, restart Cisco Tomcat using the CLI command **utils service restart Cisco Tomcat**.

---

#### Command syntax

**set uccx provider ip axl [ip-address]**

#### Arguments

**[ip-address]**—The IP address of the AXL provider.

#### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

#### Example

```
admin: set uccx provider ip axl 10.78.14.140
Cisco Unified Communications Manager IP is set to 10.78.14.140

Command Successful.
```

## set uccx provider ip jtapi

This command sets the Unified CCX JTAPI provider IP address. Use this command only when the IP address of Unified Communication Manager has been changed and Unified CCX is being pointed to the new IP address.



---

**Note** After you run this command, restart the Unified CCX Engine service. After Unified CCX Engine service starts successfully, restart Cisco Tomcat using the CLI command **utils service restart Cisco Tomcat**.

---

#### Command syntax

**set uccx provider ip jtapi [ip-address]**

#### Arguments

**[ip-address]**—The IP address of the JTAPI provider.

#### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

#### Example

```
admin: set uccx provider ip jtapi 10.78.14.140
UCCX JTAPI Provider is set to 10.78.14.140

Command Successful.
```

## set uccx provider ip rmc

This command sets the Unified CCX Resource Manager-Contact Manager provider IP address. Use this command only when the IP address of Unified Communications Manager has been changed and Unified CCX is being pointed to the new IP address.



---

**Note** After you run this command, restart the Unified CCX Engine service. After Unified CCX Engine service starts successfully, restart Cisco Tomcat using the CLI command **utils service restart Cisco Tomcat**.

---

### Command syntax

**set uccx provider ip rmc** *[ip-address]*

### Arguments

**[ip-address]**—The IP address of the RMC provider.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin: set uccx provider ip rmc 10.78.14.140
UCCX RMC Provider is set to 10.78.14.140

Command Successful.
```

## set uccx appadmin administrator

Administrator capability can be added to a user in Unified Communications Manager using this command.



---

**Note** Run this command to set the administrator for a configured Unified CCX system only. For a newly installed system, you must login with the platform login password that you specified during installation.

---

### Command syntax

**set uccx appadmin administrator** *[username]*

### Options

**[username]**—Username is set as the Cisco Unified CCX application administration.

**Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

**Example**

```
admin:set uccx appadmin administrator username
UCCX appadmin adminstrator is set to username
```



---

**Note** You cannot assign Administrator capability to a user ID that is the same as the application administrator user ID that you created during the Unified CCX installation. If you assign Administrator capability to such a user ID, a “Command failed” error message is displayed on the console.

---

## set authmode

This command is used to set the authentication mode.

**Command syntax**

**set authmode** <non\_sso>

**Options**

non\_sso - to set authentication to Non-SSO mode.

**Requirements**

Level privilege: 4

Command privilege level: 4

Allowed during upgrade: No

**Example**

```
admin:set authmode non_sso
```

## set uccx asr count clear

This command clears all the counts that were recorded from the ASR hosts.

**Command syntax**

**set uccx asr count clear**

**Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set uccx asr count clear
ASR reset successfully

Command successful.
```

## set uccx tts count clear

This command clears all the counts that were recorded from the TTS hosts.

### Command syntax

**set uccx tts count clear**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:set uccx tts count clear
ASR reset successfully

Command successful.
```

## set webapp session maxlimit

This command sets the maximum limit for the number of concurrent Unified CCX web application sessions per user.

For the new setting to become effective, you must restart the node. Until you restart the node, the system continues to use the old values. In a HA setup, you must run this command on both the nodes. This command prompts you to restart the node.



---

**Note** Restart the nodes during off-peak traffic hours to avoid impact on the system performance.

This setting is preserved during software upgrades on both the nodes.

If the number of sessions is limited to 1 on both nodes, a user is allowed to have one session each on both the nodes.

---

### Command syntax

**set webapp session maxlimit *number***

### Syntax Description

Parameters	Description
<i>number</i>	<p>Specifies the number to limit the concurrent web application sessions.</p> <p>The value ranges from 1 to 10.</p> <p>Default value is 10.</p> <p><b>Note</b> When you exceed the defined limit for maximum number of signed in sessions, the interface sign-in page displays the Logon Status message as: The Session limit has already been reached for &lt;username&gt;. Please logout from those sessions or wait &lt;Value&gt; minutes for inactive sessions to be automatically closed.</p>

### Command Modes

Administrator

### Requirements

Command privilege level: 1

Allowed during upgrade: No

Applies to: Cisco Identity Service Management, Disaster Recovery System, Cisco Unified CCX Administration, Cisco Finesse Administration, Cisco Unified Serviceability, Cisco Unified CCX Serviceability, Cisco Unified OS Administration, and Cisco Unified Intelligence Center.

### Example

```
admin:set webapp session maxlimit 4

*****W A R N I N G*****
The node needs to be restarted for the changes to take effect.This will
disconnect active web sessions and all web applications on this node will be
unavailable
until the node restarts.This node restart will take several minutes to complete.
Do you want to continue (yes/no) ? yes

*****Restarting node*****

The system is going down for reboot in 1 Minute
The webapp session limit has been successfully set to 4.
```

## set webapp session timeout

This command sets the time in minutes to invalidate any inactive Unified CCX web application sessions. After the set time elapses, the users are logged off from any of the inactive Unified CCX web sessions. The default session timeout value is 30 minutes.

For the new setting to become effective, you must restart the node. Until you restart the node, the system continues to use the old values. In a HA setup, you must run this command on both the nodes. This command prompts you to restart the node.



**Note** Restart the nodes during off-peak traffic hours to avoid impact on the system performance.

This setting is preserved during software upgrades on both the nodes.

### Command syntax

**set webapp session timeout** *minutes*

### Syntax Description

Parameters	Description
<i>minutes</i>	Specifies the time, in minutes, that must elapse before a web application times out and logs off the user. <ul style="list-style-type: none"> <li>• Value range: 5-35000 minutes</li> <li>• Default value: 30 minutes</li> </ul>

### Command Modes

Administrator

### Requirements

Command privilege level: 1

Allowed during upgrade: No

Applies to: Cisco Identity Service Management, Disaster Recovery System, Cisco Unified CCX Administration, Cisco Finesse Administration, Cisco Unified Serviceability, Cisco Unified CCX Serviceability, and Cisco Unified OS Administration.

### Example

```
admin:set webapp session timeout 20
Continuing with this operation will set the session-timeout for web sessions to
20 minutes
after the node has been rebooted.
Continue (y/n)?y
web session-timeout updated to 20 minutes.
```

```
The node has to be rebooted for the changes to take effect immediately.
This will disconnect active web sessions.
Continue (y/n)?n
The updated web session time-out would take effect on next reboot
```

The current session-timeout used for web sessions and applications is 30 minutes. The updated session-timeout value of 20 minutes will take effect on restart of the node.

## run Commands

### run uccx hrdataexport

This command dumps the historical reporting data and related configuration information to `csv` files, and a `tar` file is created that contains all the exported `csv` files. The `tar` file is saved in the local file system, under `<active_log>/uccx/log/db/hrdataexport`.

The command output indicates the filename and specific commands that you must run to transfer the generated `tar` file to a remote server and to delete the file from the local disk.

If the Start Date and End Date are specified, then the data between those dates, including the start and end dates, is exported. If only one date parameter is passed, it is considered as start date and all the data from that date onwards is exported.




---

**Note** When the command is executed, any previous `tar` file that was created is deleted. At any point only one Historical Reporting data export file is saved in the local file system. So after the Historical Reporting data is exported, transfer the `tar` file to remote server before running the command again.

---

#### Command Syntax

**run uccx hrdataexport all [Start Date] [End Date]**

Dumps all the historical reporting data.

**run uccx hrdataexport reports *report names* [Start Date] [End Date]**

Dumps all the historical reporting data for given reports.

**run uccx hrdataexport tables *table names* [Start Date] [End Date]**

Dumps all the historical reporting data for given table names.

#### Parameters

**report names**—(Mandatory) Comma separated names of the specific reports for which the corresponding data has to be exported. Enclose the list of report names in “ ” (double quotes).

**table names**—(Mandatory) Comma separated names of the specific tables from which the data is exported. Enclose the list of table names in “ ” (double quotes).

**[Start Date]**—(Optional) Must be in the format “yyyy-MM-dd HH:mm:ss”, including the double quotes.

**[End Date]**—(Optional) Must be in the format “yyyy-MM-dd HH:mm:ss”, including the double quotes.

#### Examples

```
admin:run uccx hrdataexport all "2012-01-01 00:00:00" "2012-02-01 00:00:00"
```

```
admin:run uccx hrdataexport reports "abandoned call detail activity report,aborted
rejected call detail report"
"2012-01-01 00:00:00" "2012-02-01 00:00:00"
```

```
admin:run uccx hrdataexport tables
"agentconnectiondetail,agentstatedetail,contactcalldetail"
"2012-01-01 00:00:00" "2012-02-01 00:00:00"
```

## run uccx sql database\_name sql\_query

Executes an SQL “select” statement from the CLI. Read-only operations are permitted. Insert, Update, Delete and any DML statements are disallowed. This command allows queries to be run against the Unified CCX databases (data stores) and sysmaster database for the Unified CCX Informix instance (IDS engine).

### Command syntax

**run uccx sql database\_name sql\_query [options]**

### Arguments

database\_name—(Mandatory) Database on which the SQL statement is run

sql\_query—(Mandatory) The sql statement to run

### Options

page—Displays the output one page at a time

file—Stores the output to a file instead of showing it on the console. The name of the file is displayed after the completion of the command.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin:run uccx sql db_cra select resourceid,resourcenam from resource
RESOURCEID      RESOURCENAME
-----
1              b
2              agent22
3              sacagent3
4              sacagent1
7              user
8              sacagent2
9              user agent2
10             user rtlitel
11             agent130
14             sk1
15             sk2
24             User RT Pro
```

## run uccx sp database\_name sp\_name

Executes a stored procedure that is specified as a parameter on the database, which is also mentioned as a parameter. This command runs only a stored procedure.

### Command Syntax

**run uccx sp database\_name sp\_name [options]**

### Arguments

database\_name—(Mandatory) Database on which the stored procedure is run

sp\_name—(Mandatory) The stored procedure to be run

### Options

page—Displays the output one page at a time

file—Stores the output to a file instead of showing it on the console. The name of the file is displayed after the completion of the command.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin:run uccx sp db_cra sp_email_contact_detail('2016-12-06 18:30:00','2016-12-07
18:29:59','testemailcsq1','FinesseAgent1','')
CONTACT_ID          SEQUENCE_NUMBER CSQ_NAME          AGENT_NAME          RECEIVED
RETRIEVED          REPLIED DISCARDED FROM_ADDRESS        REPLY_TO_ADDRESS
TO ADDRESS         SUBJECT CONTACT_TYPE CONTACT_DISPOSITION EMAIL_REPLY_TO
EMAIL_REPLY_CC     EMAIL_REPLY_BCC

D82AC14C1000015800000EFF0A4E5D8A          0          testemailcsq1  FinesseAgent1
2016-12-07 07:22:49.0  2016-12-07 07:59:45.051 2016-12-07 08:00:47.06 null
reboottest2@sky13.sm  "RebootTestUser2 Reboot." <reboottest2@sky13.sm>
reboottest1@sky13.sm  test          1          2
reboottest2@sky13.sm, reboottest1@sky13.sm

Command successful.
```

## Utils Commands

### utils uccx notification-service log

This command allows you to enable, disable, and check the status of debug logging for Cisco Unified CCX Notification Service.

By default, debug logging is disabled for Cisco Unified CCX Notification Service. Enable debug logging for Cisco Unified CCX Notification Service when there is an issue in the system related to this service and when

you require detailed logs for troubleshooting. After the troubleshooting is complete, disable logging for Cisco Unified CCX Notification Service.

You can retrieve the logs from the log-collection facility provided by Cisco Unified Real-Time Monitoring Tool.

You can execute **utils uccx notification-service log** only if Cisco Unified CCX Notification Service is running. If the service is not running, start the service first and then execute the command.



- 
- Note**
- Logging for Cisco Unified CCX Notification Service affects system performance; therefore, disable logging when it is not required.
  - Logging is disabled automatically when you restart Cisco Unified CCX Notification Service.
- 

### Command syntax

```
utils uccx notification-service log enable
utils uccx notification-service log disable
utils uccx notification-service log status
```

### Arguments

None

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Examples

#### Check status of logging

```
admin:utils uccx notification-service log status
Cisco Unified CCX Notification Service logging is currently DISABLED.
```

#### Enable logging

```
admin:utils uccx notification-service log enable
WARNING! Enabling Cisco Unified CCX Notification Service logging can affect system
performance and should be disabled when logging is not required.
Do you want to proceed (yes/no)?
Cisco Unified CCX Notification Service logging enabled successfully.
NOTE: Logging will be disabled automatically if Cisco Unified CCX Notification
Service is restarted.
```

#### Disable logging

```
admin:utils uccx notification-service log disable
Cisco Unified CCX Notification Service logging disabled successfully.
```

## utils remote\_account

This command allows you to enable, disable, create, and check the status of a remote account.

### Command Syntax

- `utils remote_account status`
- `utils remote_account enable`
- `utils remote_account disable`
- `utils remote_account create username life`

### Arguments

- **username**—Specifies the name of the remote account. The username can contain only lowercase characters and must be more than six characters long.
- **life**—Specifies the life of the account in days. After the specified number of days, the account expires.

### Usage Guidelines

A remote account generates a pass phrase that allows Cisco support personnel to access the system for the specified life of the account. You can have only one remote account that is enabled at a time.

### Example

```
admin:utils remote_account status
Remote Support
Status      : disabled
Decode Version : 2
```




---

**Caution** Avoid creating remote account usernames starting with "uccx" or "UCCX" because such usernames may conflict with system account names that are used internally within the Cisco Unified Contact Center Express server.

---

## utils reset\_application\_ui\_administrator\_name

This command resets the application user interface administrator name for Serviceability, CUIC Admin property, and CUIC Administrator.

### Command syntax

`utils reset_application_ui_administrator_name`

### Command Modes

Administrator (admin)

**Requirements**

Command privilege level: 0

Allowed during upgrade: Yes



**Note** Restart the service (Cisco Unified Intelligence Center Reporting Service) on all nodes in the cluster to enable the new administrator to log in to Unified Intelligence Center.

```
admin:utils reset_application_ui_administrator_name
----- utils reset_ui_administrator_name -----

Reset user interface administrator user name
New administrator user name:
User_1
Serviceability Administrator user name has been successfully updated to User_1
CUIC Admin property has been successfully updated to User_1
CUIC Administrator user name has been successfully updated to User_1
```

**utils reset\_application\_ui\_administrator\_password**

This command resets the application user interface administrator password.

**Command syntax**

**utils reset\_application\_ui\_administrator\_password**

**Command Modes**

Administrator (admin)

**Requirements**

Command privilege level: 0

Allowed during upgrade: Yes

**Example**

```
admin:utils reset_application_ui_administrator_password
New password:*****
Confirm new Password:*****
```

**utils service**

This command allows start, stop, activate, deactivate, list, auto-restart and restart of the following services:

- System SSH
- Service Manager

- Entropy Monitoring Daemon
- Cisco SCSI Watchdog
- A Cisco DB
- A Cisco DB Replicator
- Cisco AMC Service
- Cisco Audit Event Service
- Cisco CDP
- Cisco CDP Agent
- Cisco CallManager Serviceability
- Cisco Certificate Change Notification
- Cisco Certificate Expiry Monitor
- Cisco Cloud Connect Container Manager
- Cisco Database Layer Monitor
- Cisco DRF Local
- Cisco DRF Master
- Cisco Finesse Tomcat
- Cisco Identity Service
- Cisco Log Partition Monitoring Tool
- Cisco RIS Data Collector
- Cisco RTMT Reporter Servlet
- Cisco Syslog Agent
- Cisco Tomcat
- Cisco Tomcat Stats Servlet
- Cisco Trace Collection Service
- Cisco Trace Collection Servlet
- Cisco Unified Serviceability RTMT
- Cisco Finesse Tomcat
- Cisco Unified CCX Administration
- Cisco Unified CCX CVD Dependent Webapp
- Cisco Unified CCX Cluster View Daemon
- Cisco Unified CCX Configuration API
- Cisco Unified CCX DB Perfmon Counter Service

- Cisco Unified CCX Database
- Cisco Unified CCX Engine
- Cisco Unified CCX Notification Service
- Cisco Unified CCX Perfmon Counter Service
- Cisco Unified CCX SNMP Java Adapter
- Cisco Unified CCX Serviceability
- Cisco Unified CCX Socket.IO Service
- Cisco Unified CCX Voice Subagent
- Cisco Unified CCX WebServices
- Cisco Unified Intelligence Center Reporting Service
- Cisco Unified Intelligence Center Serviceability Service
- Cisco Unified Serviceability RTMT
- Cisco Web Proxy Service
- Docker Engine
- Host Resources Agent
- MIB2 Agent
- Platform Administrative Web Service
- Platform Communication Web Service
- SNMP Master Agent
- SOAP -Log Collection APIs
- SOAP -Performance Monitoring APIs
- SOAP -Real-Time Service APIs
- System Application Agent
- Cisco DirSync
- Cisco Serviceability Reporter

### Command syntax

**utils service [option] [service-name]**

### Arguments

**option**—The option to {start | stop | activate | deactivate | list | auto-restart | restart} a service.

**service-name**—The name of the service.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils service start Cisco Unified CCX Administration
Service Manager is running
Cisco Unified CCX Administration[STARTING]
Cisco Unified CCX Administration[STARTING]
Cisco Unified CCX Administration[STARTED]
Cisco Unified CCX Administration[STARTED]
```

## utils system upgrade

This command allows you to install upgrades and Cisco Option Package (COP) files from both local and remote directories.

### Command syntax

**utils system upgrade [Options]**

### Options

**initiate**—Starts a new upgrade wizard or assumes control of an existing upgrade wizard. The wizard prompts you for the location of the upgrade file for Unified CCX.

**status**—Displays status of the upgrade

**cancel**—Stops the upgrade process

### Example

```
admin:utils system upgrade initiate

Warning: Do not close this window without first canceling the upgrade.

Source:

 1) Remote Filesystem via SFTP
 2) Remote Filesystem via FTP
 3) Local DVD/CD
 q) quit

Please select an option (1 - 3 or "q") :
```

## utils system switch-version

This command restarts and switches the system to the Unified CCX product release that is installed on the inactive partition.

### Command syntax

**utils system switch-version**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

When the user initiates a switch version, system restart, or system shutdown from the CLI, a warning message is displayed and user confirmation is requested before Unified CCX proceeds with the command execution.

This command is applicable for the following scenarios:

- The system detects that a switch version is in progress.
- The system detects that a previous switch version was abruptly terminated.



**Note** A switch version operation is abruptly terminated if a power reset or hard reboot is performed on the Unified CCX system when the operation is in progress.

#### Example

```
admin:utils system switch-version
** There is no inactive side available **
```

## utils uccx database dbserver integrity

This command checks the integrity of the database server disk structures and displays results. It also checks the DB configuration integrity and performs a fix if integrity is broken. Detailed information is output to a text file. The Informix oncheck utility is used for the command.

#### Command Syntax

**utils uccx database dbserver integrity**

#### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

#### Example

```
admin:utils uccx database dbserver integrity
This operation may take a few minutes to complete. Please wait...

Output is in file: uccx/cli/DbServerIntegrity_1372844998930.txt

Command successful.
Starting DB config integrity check
This operation may take a few minutes to complete. Please wait...

Output is in file: uccx/cli/DbConfigIntegrity_1372845048816.txt
Use "file view activelog uccx/cli/DbConfigIntegrity_1372845048816.txt" command
to see output
Command successful.
```




---

**Note** The name of the file containing the output from all the checks performed is automatically generated by the command script. For the filename to be unique, the naming format is DbServerIntegrity\_<TIMESTAMP>.txt. This format ensures the uniqueness across processes and over time. The file path and filename are displayed after the completion of the operation.

---

## utils uccx list license

This command lists the licenses that are uploaded into the uccx system.




---

**Note** This command is not applicable when you are using Smart Licensing.

---

### Command syntax

**utils uccx list license**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx list license
The following licenses are uploaded in the system:
ccx90_pre_demo.lic
UCCXLicense.lic
ccx100_premium_300seat_allfeatures_dummy.lic
ccx90_enh_demo.lic
ccx_10.5-300_Seat_DummyLicense.lic
Command successful.
```

## utils uccx delete license licenseName

This command deletes a license, permanent or temporary, that is already uploaded into the Unified CCX system.




---

**Caution** Use this command with extreme care, because it will delete any license that has been uploaded to the Unified CCX system, without checking whether the license is a temporary or a permanent one. Use this command only to delete wrong or invalid permanent licenses. You can delete temporary licenses by using Unified CCX Administration.

---



---

**Note** For the single-node system, execute the delete command first, and then restart the Unified CCX node. For the HA system, execute the delete command separately on each of the two nodes, and then restart both the Unified CCX nodes in the cluster.

---

### Command syntax

**utils uccx delete license licenseName**

### Arguments

**licenseName** is deleted from the Unified CCX system

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx delete license ccx10_premium_300seat.lic
Warning:
Deleting the license may have adverse effect on the working of the uccx system.
After deleting the license from all UCCX nodes, restart the UCCX nodes in the
cluster.
Are you sure you want to run this command?
Continue (y/n)?n
Exiting the command.
Command successful.
```

## utils uccx jtapi\_client update

This command updates the JTAPI Client version on the active partition on the Unified CCX box to match JTAPI version on the Unified Communications Manager. This command downloads the JTAPI Client from the Unified Communications Manager and checks whether the downloaded version needs to be installed. If the downloaded version needs to be installed, it installs the downloaded JTAPI Client and displays a message that the JTAPI Client was updated with the previous and the current versions. If the downloaded version does not need to be installed, it displays a message saying the same and displays the current JTAPI Client version.

The JTAPI client update occurs only on the local node and not the second node in case of an HA deployment.



---

**Note** After you run this command, you must reboot the Unified CCX server and restart all the Unified CCX services.

---

### Command syntax

**utils uccx jtapi\_client update**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx jtapi_client update
Node ID: 1 -- Cisco JTAPI Client versions are consistent
Command successful.
```

## utils uccx prepend custom\_classpath

This command adds the CustomJarName to the classpath ahead of the system classpath.




---

**Note** You must use this command when there are common classes being used in the custom code as well as by Unified CCX and there is a version mismatch between the common classes that are being used.

---




---

**Caution** You must add the custom classpath only if the Custom class files have a newer version than the class files used by Unified CCX. Adding class files that are of older version at the start of the classpath could lead to system instability.

---

### Command syntax

**utils uccx prepend custom\_classpath** [*CustomJarName*]

### Arguments

**CustomJarName**—Custom jar filename to be prepended to classpath

### Example

```
admin:utils uccx add custom_classpath jsafe.jar
Command successful.
```

## utils uccx switch-version db-check

This command allows you to check whether the database was corrupted after an unsuccessful switch version due to a restart in the middle of a switch version attempt. The command displays the status of last switch version. If there is a database backup available that can be restored, it prints the time stamp of the backup and display the CLI command **utils uccx switch-version db-recover** to recover from this backup.

### Command Syntax

**utils uccx switch-version db-check**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx switch-version db-check
ccx DB was found to be corrupted.

Last switch version was aborted at 05/29/2012 16:18:07
05/29/2012 16:18:07|root:Switch Version 9.0.1.10000-41 to 9.0.10000-42 Aborted

There is a CCX backup with timestamp 2012-05-29 16:16:19.000000000 +0530 that was
taken during a prior switch version.

!!!WARNING!!! IF YOU CHOOSE TO RECOVER FROM THIS BACKUP, ANY CHANGES DONE TO THE
DATABASE AFTER THE TIMESTAMP OF THIS BACKUP WILL BE LOST.

You can run the CLI command "utils uccx switch-version db-recover" to restore the
DB from this backup.
```

## utils uccx switch-version db-recover

This command first checks whether the database was corrupted after an unsuccessful switch version due to the restart in the middle of a switch version attempt. The command displays the status of the last switch version. If there is a database backup available that can be restored, it prints the time stamp of the backup and offer an option to restore the database from this backup. If the restore option is chosen, the command completes after restoring the database from this backup and bringing up all the services.

### Command Syntax

**utils uccx switch-version db-recover**

### Requirements

Level privilege: 1

Command privilege: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx switch-version db-recover
CCX DB was found to be corrupted.

Last switch verison was aborted at 05/29/2012 16:18:07
05/29/2012 16:18:07|root:Switch Version 9.0.1.10000-42 Aborted

There is a CCX DB backup with timestamp 2012-05-29 16:16:19:000000000 +530 that
was taken during a prior switch version.

!!!WARNING!!! IF YOU CHOOSE TO RECOVER FROM THIS BACKUP, ANY CHANGES DONE TO THE
DATABASE AFTER THE TIMESTAMP OF THIS BACKUP WILL BE LOST.

Are you sure you want to continue?
Continue (y/n)?y
This operation may take a few minutes to complete. Please wait
```

## utils uccx syncusers

This command allows you to synchronize the Unified CCX user passwords with the security password.

### Command syntax

**utils uccx syncusers****Example**

```
admin:utils uccx syncusers
Command successful.
```

**utils uccx synctocuic**

Synchronizes the users, teams and grants permissions to the reports and stock folders from Unified CCX to Unified Intelligence Center. The following are the configurations that are pushed from Unified CCX to Unified Intelligence Center:

- Users
- Teams
- Stock folders
- Reports
- Value lists

If you make any changes to the above mentioned configurations in Unified Intelligence Center, then such changes are overwritten during the sync.




---

**Note** If the sync fails, then running this command or the auto sync that is part of the purge schedule will not revoke the permissions for the previously-synced users or user groups.

---

**Command Syntax**

**utils uccx synctocuic**

**Example**

```
admin:utils uccx synctocuic
Warning:
Synchronizing all the data to cuic will take some time.
Are you sure you want to run this command?
Continue (y/n)?y
Synchronization of the data from UCCX to CUIC is in progress...
Command successful.
```

**utils uccx icd clid status**

This command allows you to view the current configuration parameter values for the Caller ID (CLID) feature.

**Command syntax**

**utils uccx icd clid status**

### Example

```
admin:utils uccx icd clid status
CLID Feature: Disabled
CLID Text Header: Caller Details
CLID Text Prefix: Calling Party Number :
```

## utils uccx icd clid enable

This command allows you to enable the CLID feature.

Restart the Unified CCX Engine service for the changes to take effect.

In HA deployments, run this command separately on both the Unified CCX nodes.

After upgrade, run this command again to enable the CLID feature.

### Command syntax

**utils uccx icd clid enable**

### Example

```
admin:utils uccx icd clid enable
Successfully enabled the CLID feature
Please restart the "Cisco Unified CCX Engine" service for changes
to take effect
In case of Cisco Unified CCX HA cluster, enable the CLID feature in
remote node as well by running the CLI command
"utils uccx icd clid enable" on the remote node
```

## utils uccx icd clid disable

This command allows you to disable the CLID feature.

Restart the Unified CCX Engine service for the changes to take effect.

In HA deployments, run this command separately on both the Unified CCX nodes.

After upgrade, run this command again to disable the CLID feature.

### Command syntax

**utils uccx icd clid disable**

### Example

```
admin:utils uccx icd clid disable
Successfully disabled the CLID feature
Please restart the "Cisco Unified CCX Engine" service for changes
to take effect
In case of Cisco Unified CCX HA cluster, disable the CLID feature in
remote node as well by running the CLI command
"utils uccx icd clid disable" on the remote node
```

## utils uccx icd clid header

This command allows you to set the display header on the phone screen.

Restart the Unified CCX Engine service for the changes to take effect.

In HA deployments, run this command separately on both the Unified CCX nodes.

After upgrade, run this command again to set the values for the display header.

If the header string has space, enclose the entire string in double quotes.

You can set the header string to "" if you do not want to provide any values.

### Command syntax

**utils uccx icd clid header <header string>**

### Example

```
admin:utils uccx icd clid header "Caller Details"
Successfully set the CLID text header to "Caller Details"
Please restart the "Cisco Unified CCX Engine" service for changes
to take effect
In case of Cisco Unified CCX HA cluster, set the CLID text header in
remote node as well by running the CLI command
"utils uccx icd clid header <header string>" on the remote node
```

## utils uccx icd clid prefix

This command allows you to set the prefix string for the calling party number displayed on the phone screen.

Restart the Unified CCX Engine service for the changes to take effect.

In HA deployments, run this command separately on both the Unified CCX nodes.

After upgrade, run this command again to set the values for the prefix string.

If the prefix string has space, enclose the entire string in double quotes.

You can set the prefix string to "" if you do not want to provide any values.

### Command syntax

**utils uccx icd clid prefix <prefix string>**

### Example

```
admin:utils uccx icd clid prefix "Calling Party Number : "
Successfully set the CLID text prefix to "Caller Party Number: "
Please restart the "Cisco Unified CCX Engine" service for changes
to take effect
In case of Cisco Unified CCX HA cluster, set the CLID text prefix in
remote node as well by running the CLI command
"utils uccx icd clid prefix <prefix string>" on the remote node
```

## utils uccx security\_filter enable

Run this command to enable Unified CCX administration security filter settings.

In HA deployments, run this command separately on both the Unified CCX nodes.

### Command syntax

**utils uccx security\_filter enable**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx security_filter enable
The status of security filter is: enabled
Please restart Unified CCX service using
'utils service restart Cisco Tomcat' for changes to take effect.
In case of Cisco Unified CCX HA cluster, set the security filter in
remote node as well.
```

## utils uccx security\_filter disable

Run this command to disable Unified CCX administration security filter settings.

In HA deployments, run this command separately on both the Unified CCX nodes.

### Command syntax

**utils uccx security\_filter disable**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx security_filter disable
The status of security filter is: disabled
Please restart Unified CCX service using
'utils service restart Cisco Tomcat' for changes to take effect.
In case of Cisco Unified CCX HA cluster, set the security filter in
remote node as well.
```

## utils uccx security\_filter status

Run this command to check the status of Unified CCX administration security filter flag.

### Command syntax

**utils uccx security\_filter status**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx security_filter status
uccx security filter is :enabled
```

## utils uccx dbreplication dump configfiles

Run this command to append the data of dbreplication configuration files to a text file. This command is only available in the High Availability deployment of Unified CCX.

### Command syntax

#### utils uccx dbreplication dump configfiles

### Requirements

Level privilege: 1

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin:utils uccx dbreplication dump configfiles
Command Started
Output is in file: DbConfigFiles_120813161827.txt
Use "file view activelog uccx/cli/DbConfigFiles_120813161827.txt" command to view
the file
Use "file get activelog uccx/cli/DbConfigFiles_120813161827.txt" command to get
the file
Command Successful
```

## utils uccx database healthcheck

This command runs the database health check script, which checks the health of the Unified CCX database.

After the execution of this command, a health check report is generated. If any issues are found by this script then they are recorded in the health check report. A solution file is also generated that consists of suggested solutions for the problems reported in the health check report file.

### Command syntax

#### utils uccx database healthcheck

### Requirements

Level privilege: 1

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin:utils uccx database healthcheck
Command Started
This command may take few minutes to complete
UCCX database health report is available at:
/var/log/active/uccx/cli/healthcheck.rpt
UCCX database health report suggested solutions is available at:
/var/log/active/uccx/cli/healthcheck.soln
Use "file view activelog uccx/cli/healthcheck.rpt" command to view the file
Use "file get activelog uccx/cli/healthcheck.rpt" command to get the file
Use "file view activelog uccx/cli/healthcheck.soln" command to view the file
Use "file get activelog uccx/cli/healthcheck.soln" command to get the file
Command Successful
```

## utils uccx database dbperf start

Run this command to monitor the CPU and database utilization on the Unified CCX server.

After this command is executed, a successful execution message appears on the screen. This command runs in the background for the total duration specified in the command at periodic intervals and generates a file, which consists of the details related to CPU and database utilization.

### Command syntax

**utils uccx database dbperf start totalHours interval**

### Arguments

- **Interval**— Period of time between the execution / operation.
- **TotalHours**—Total duration of the execution.

### Requirements

Level privilege: 1

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin: utils uccx database dbperf start 10 20
The script runs every 20 minutes over a total duration of 10 hours.
Please collect files after 10 hours
Use "file get activelog uccx/cli/dbperf_250913131546.log" to get the file
Use "file view activelog uccx/cli/dbperf_250913131546.log" to view the file
Command Successful
```

## utils uccx database dbperf stop

Run this command to stop the current active instance of **utils uccx database dbperf start** before it runs to completion.

### Command syntax

**utils uccx database dbperf stop**

### Requirements

Level privilege: 1

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin:utils uccx database dbperf stop
Execution of dbperf has been stopped
Command Successful
```

## utils ids sync-security-config

This command is used to synchronize the security configuration files from the primary node to secondary node.



---

**Note** This CLI is available only on the secondary node(s) in a cluster.

---

### Command Syntax

**utils ids sync-security-config**

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: True

### Example

```
admin:utils ids sync-security-config
```

## utils uccx healthcheck

Run this command to perform checks on the Unified CCX system to ensure that the potential issues are detected at an early stage. When you execute this command, you are prompted to enter the category on which health check must be performed. For example, you can select to check the Unified CCX system hardware usage to detect if it is within the threshold limit and return the health check status. A report can be generated with all the plug-in details.



---

**Note** If you execute **utils uccx healthcheck all**, you are not prompted to select the category. This command will execute health check on all the categories.

---

### Command Syntax

**utils uccx healthcheck****Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

**Available Categories:**

- Hardware Usage
- System Parameters
- Database
- Unified CM Configurations

**Hardware Usage**

This section provides information on the Unified CCX system hardware usage. Plug-ins of this category checks and provides the Unified CCX system CPU usage, memory usage, disk space usage, and disk I/O latency status. If the hardware usage exceeds the threshold limit, then the system will display the appropriate status message.

For example, if the CPU usage in the last ten minutes is within the threshold limit, an OK state is displayed. If the CPU usage in the last ten minutes exceeded the threshold limit, a Not OK state is displayed with the appropriate message.

The following table lists the available plug-ins, their threshold limits and the message displayed when the threshold limit is exceeded.

Plug-in	Threshold Limit	Message Displayed
CPU Usage	System CPU usage exceeds 70 percent.	The CPU usage has exceeded the threshold limit.
Memory Usage	System memory usage exceeds 70 percent.	The memory usage has exceeded the threshold limit.
Disk Space Usage	System disk space usage exceeds 70 percent.	The disk usage has exceeded the threshold limit.
Disk I/O Latency	Time taken to read 1 MB and write 1 MB of data exceeds 500 milliseconds.	Disk I/O exceeded the permissible limit.

**Example**

```
admin:utils uccx healthcheck
Healthcheck is available for the following categories:
1) Hardware Usage
```

```

2) System Parameters
3) Database
4) Unified CM Configurations
q) Quit
Select an option (1 - 4 or "q"):1
  Checking CPU Usage.....OK
  Checking Memory Usage.....OK
  Checking Disk Usage.....OK
  Checking Disk I/O Latency.....Not OK
      Disk I/O exceeded the premissible limit.
Use 'file get activelog healthcheck/report_2019-11-11-09-40-04.json' command to
download the health report.
Command Successful.

```

### CCX Configuration

This section provides information on the Unified CCX system parameters usage. If the configured values for the following system parameters exceeds the threshold limit, then the Unified CCX system will display the appropriate status message. For example, if the configured number of agents is within the capacity limits, an OK state is displayed. If the configured number of agents exceeds the capacity limits, a Not OK state is displayed with the appropriate message.

The following plug-ins check the various configuration limits in the Unified CCX system:

- Configured Agents
- Configured Agents per Team
- Configured CSQs
- Configured Skills per Agent
- Configured Outbound Campaigns
- Configured Supervisors per Team
- Configured Teams per Supervisor
- Configured Contacts per Outbound Campaign
- Configured Contact Service Queues
- Configured Skills
- Configured Skills per CSQ

For more information on team configuration limits, see *Server Capacities and Limits* section in the [Solution Design Guide for Cisco Unified Contact Center Express](#).

### Database

This section provides a list of plug-ins that executes to check the health of database components. The available plug-ins include the following:

- **CCX DB Status:** This plug-in checks if the Unified CCX database service is running. If the Unified CCX database service is down, an appropriate status message is displayed.

- **CCX DB Replication Status:** This plug-in checks if all the Unified CCX database replications are running. If the Unified CCX database replications are not in synchronization, an appropriate status message is displayed.
- **CCX DB Space Usage:** This plug-in checks if all the three Unified CCX database (db\_cra, db\_cra\_repository, and db\_hist) usage is within the threshold limit. If any of the database usage exceeds the threshold limit, the system displays the name of that particular database along with the percentage used.
- **CCX Config DB tables consistency in HA:** This plug-in checks if the Unified CCX configuration tables are in synchronization across the Unified CCX cluster. If any of the configuration tables are not in synchronization, an appropriate status message is displayed.
- **Number of Wallboard/External clients:** This plug-in checks the number of wallboards and external clients that are connected to the database. If the configured number of wallboards and external clients is within the threshold limit, an OK state is displayed. If the configured number of wallboards and external clients exceeds the threshold limit, a Not OK state is displayed with the appropriate message.

### Example

```

admin:utils uccx healthcheck
Healthcheck is available for the following categories:
1) Hardware Usage
2) System Parameters
3) Database
4) Unified CM Configurations
q) Quit
Select an option (1 - 4 or "q"):3
  Checking CCX DB Status.....OK
  Checking CCX DB Replication Status.....OK
  Checking CCX DB Space Usage.....Not OK
  Reason:DB space usage has exceeded the threshold limit of 75% for the
  following:db_hist and db_cra_repository
  Checking CCX Config DB tables consistency in HA.....Not OK
  Reason:DB table(s) out of sync:Skill
         ID in configseed table out of sync:Crsuser
  Checking the number of Wallboard/External Clients.....Not OK
  Reason:Found 3(allowed:1)wallboard/external clients.
Use 'file get activelog healthcheck/report_2019-11-11-09-40-04.json' command to
download the health report.
Command Successful.

```

### Unified CM Configurations

This section provides a list of plug-ins that can be executed to check the configurations of Unified CM configured in Unified CCX.

The available plug-ins include the following:

- **AXL Configuration:**

This plug-in validates the following:

- If the AXL configurations are available in Unified CCX.
- If the configured Unified CM is reachable.
- If the configured Unified CM certificates stored in Unified CCX are correct.

- If the AXL service is running in the configured Unified CM.
  - If the configured user in Unified CM has AXL API Access role.
  - If the configured AXL user is available in Unified CM, if the credentials are valid, or if the user is locked in Unified CM.
- **Telephony Provider (JTAPI) Configuration:**  
This plug-in validates the following:
- If the Telephony Provider configuration is available in Unified CCX.
  - If the configured Unified CM is reachable or if the CTIManager service is running in the configured Unified CM.
  - If the configured Telephony Provider in Unified CCX has Standard CTI Enabled role in Unified CM.
  - If the configured Telephony Provider is available in Unified CM or if the configured Telephony Provider credentials are valid.
  - If the configured Telephony Provider is locked in Unified CM.
- **RmCm Provider Configuration:**  
This plug-in validates the following:
- If the RmCm Provider configuration is available in Unified CCX.
  - If the configured Unified CM is reachable or the CTIManager service is running in the configured Unified CM.
  - If the configured RmCm Provider has the following different Access Control roles in the Unified CM:
    - Standard CTI Allow Call Monitoring.
    - Standard CTI Allow Call Recording.
    - Standard CTI Allow Control of Phones supporting Connected Xfer and conf.
    - Standard CTI Enabled.
  - If the configured RmCm Provider is available in Unified CM or if the credentials are valid.
  - If the configured RmCm Provider is locked in Unified CM.

### Example

```
admin:utils uccx healthcheck
Healthcheck is available for the following categories:
1) Hardware Usage
2) System Parameters
3) Database
4) Unified CM Configurations
q) Quit
Select an option (1 - 4 or "q"):4
```

```
Checking AXL Configuration .....OK
Checking Telephony Provider (JTAPI) Configuration.....OK
Checking RmCm Provider Configuration.....Not OK
Reason:The configured RmCm Provider is not assigned with the following
roles in Unified CM: Standard CTI Allow Call Recording
Checking CCX Config DB tables consistency in HA.....Not OK
Use 'file get activelog healthcheck/report_2019-11-11-09-40-04.json' command
to download the health report.
Command Successful.
```

## utils cloudconnect start

Run this command to start the specified container.

### Command Syntax

**utils cloudconnect start** *container\_name*

### Arguments

**container\_name** - Name of the container that has to be started.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect start dataconn
Starting the container dataconn ...
Container dataconn is started successfully.
```

## utils cloudconnect stop

Run this command to stop the specified container.

### Command Syntax

**utils cloudconnect stop** *container\_name*

### Arguments

**container\_name** - Name of the container that has to be stopped.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect stop dataconn
Stopping the container dataconn ...
Container dataconn is stopped successfully.
```

## utils fips

This command enables, disables, or displays the status of FIPS 140-2 mode. By default, FIPS 140-2 mode is disabled.

**utils fips** {**enable** | **disable**| **status**}

For using FIPS 140-2 mode, consider the following points:




---

**Note** FIPS 140-2 mode is supported only on releases that have been through FIPS compliance.

---

- In a HA setup, FIPS 140-2 mode must be first enabled or disabled on the publisher and then on the subscriber. Before enabling or disabling FIPS 140-2 mode on the subscriber, ensure that all the services are running on the publisher.
- Ensure that SRTP is disabled before enabling or disabling FIPS 140-2 mode in Unified CCX. You can enable SRTP after enabling or disabling FIPS 140-2 mode in Unified CCX.
- When FIPS 140-2 mode is enabled or disabled, the keys and certificates are regenerated, and the Unified CCX server reboots. While rebooting, the system performs the cryptographic modules integrity check, and runs certification self-tests.
- After the FIPS 140-2 mode setting is enabled or disabled, the system reboots automatically. To bring the Live Data datasource online, perform the following:
  - Open the tomcat-trust certificate in Cisco Unified Operating System Administration
  - Restart the Cisco Unified Intelligence Center Reporting Service




---

**Caution** Back up the system before and after enabling FIPS 140-2 mode.

---

If any of the startup self-tests fail, the Unified CCX server halts. Restart the Unified CCX server. If the startup self-test error persists, it indicates that there is a critical problem in the FIPS module and the only option is to use a recovery CD.

---

## utils fips enable

Use this command to enable FIPS 140-2 mode on the system.




---

**Note** Before enabling security modes such as FIPS, Common Criteria, and Enhanced Security, the cluster security password must be at least 14 characters. Update the cluster security password by using the `set password user security` command on all nodes and then run this command.

---



**Caution** After you enable FIPS 140-2 mode on a server, please wait until the server reboots and the phones re-register successfully before enabling FIPS 140-2 mode on the next server.

### Command syntax

#### utils fips enable

#### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

#### Example

```
admin:utils fips enable

Security Warning: The operation will regenerate certificates for
1)Tomcat
2)IPsec

Any third party CA signed certificates that have been uploaded for the above
components will need to be re-uploaded.
If there are other servers in the cluster, please wait and do not change the
FIPS settings on any other node until the FIPS operation on this node is complete
and the system is back up and running.
*****
This will change the system to FIPS mode and will reboot.
*****

WARNING: Once you continue, do not press Ctrl+C. Canceling this operation after
it
starts will leave the system in an inconsistent state; rebooting the system and
running "utils fips status" will be required to recover.
*****

Do you want to continue (yes/no) ? yes

Generating certificates...

Setting FIPS mode in operating system.
FIPS mode enabled.

FIPS mode enabled successfully.
*****
It is highly recommended that after your system restarts,
a system backup is performed.
*****
The system will reboot in a few minutes.
```

## utils fips status

Use this command to know if FIPS 140-2 mode has been enabled on the system. When you run the **utils fips status** command, the system runs the certification self-tests and displays the result.

### Command syntax

**utils fips status****Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

**Example**

The system is operating in FIPS mode. Self test status:

```
- S T A R T -----
Executing FIPS selftests
runlevel is N3
Start time: Thu Apr 9 08:50:59 IST 2020
NSS self tests passed.
Kernel Crypto tests passed.
Operating System OpenSSL self tests passed.
Libreswan self tests passed.
OpenSSL self tests passed.
CryptoJ self tests passed.
```

**utils fips disable**

Use this command to disable FIPS 140-2 mode on the system.

**Command syntax****utils fips disable****Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

**Example**

```
Security Warning : The operation will regenerate certificates for
1) Tomcat
2) IPsec
```

```
Any third party CA signed certificates that have been uploaded for the above
components will need to be re-uploaded.
If there are other servers in the cluster, please wait and do not change the
FIPS settings on any other node until the FIPS operation on this node is complete
and the system is back up and running.
```

```
*****
This will change the system to NON FIPS mode and will reboot.
*****
```

```
WARNING: Once you continue do not press Ctrl+C. Canceling this operation after
it
starts will leave the system in an inconsistent state; rebooting the system and
running "utils fips status" will be required to recover.
*****
```

```

Do you want to continue (yes/no) ? yes

Warning: All IPSEC Policies created in FIPS mode will be retained

Generating certificates...

Setting Non FIPS mode in operating system.

FIPS mode disabled successfully.
*****
It is highly recommended that after your system restarts,
a system backup is performed.
*****
The system will reboot in a few minutes.
=====

```

## Enhanced Security Mode

Enhanced Security Mode runs on a FIPS-enabled system. Unified CCX can be enabled to operate in Enhanced Security Mode, which enables the system with the following security and risk management controls:

- Stricter credential policy is implemented for user passwords and password changes.
- If the protocol for remote audit logging is set to TCP or UDP, the default protocol is changed to TCP. If the protocol for remote audit logging is set to TLS, the default protocol remains TLS. In Common Criteria Mode, strict hostname verification is implemented. So, it is required to configure the server with a fully qualified domain name (FQDN) which matches the certificate.

### Credential Policy Updates

When the Enhanced Security Mode is enabled, a stricter credential policy takes effect for new user passwords and password changes. After Enhanced Security Mode is enabled, administrators can use the set password \*\*\* series of CLI commands to modify any of the following requirements:

- The length of the password must be between 14 and 127 characters.
- A password must have at least one lowercase, one uppercase, one numeral, and one special character.
- Any of the previous 24 passwords cannot be reused.
- Minimum age of the password is one day and maximum age of the password is 60 days.
- Character sequence in the newly-generated password must differ by at least four characters from the character sequence in the old password.

## File Commands

File commands help in creating custom files that are stored in a specific directory in UCCX Filesystem.

### file uccx view

Use this command to view custom files created by Unified CCX scripts.

#### Command syntax

**file uccx view custom\_file file-spec****Arguments**

**file-spec**—(Mandatory) The file to view. The file-spec must resolve to a single file. File-spec can contain asterisks (\*) as wildcards, providing it resolves to a single file.

**Options**

None

**Requirements**

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

**Example**

```
admin:file uccx view custom_file test.txt
```

## file uccx list custom\_file

This command lists custom files that were created by Unified CCX scripts.

**Command syntax**

**file uccx list custom\_file file-spec [options]**

**Arguments**

**file-spec**—(Mandatory) The file to view. File-spec can contain asterisks (\*) as wildcards.

**Options**

*page*—Pauses output

*detail*—Shows detailed listing

*reverse*—Reverses sort order

*date*—Sorts by date

*size*—Sorts by size

**Requirements**

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

**Example**

```
admin:file uccx list custom_file * detail
08 Dec,2009 16:56:11 0 text.txt

dir count = 0, file count = 1
```

## file uccx list prompt\_file

This command lists prompt files created for various locales.

### Command syntax

**file uccx list prompt\_file file\_spec [options]**

### Arguments

**file-spec**—(Mandatory) The file to view. File-spec can contain asterisks (\*) as wildcard.

### Options

**page**—Pauses output

**detail**—Shows detailed listing

**reverse**—Reverses sort order

**date**—Sorts by date

**size**—Sorts by size

### Requirements

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:file uccx list prompt_file system/G711_ULAW/en_US detail
16 May,2012 17:50:19      <dir>    AA
16 May,2012 17:50:19      <dir>    ICD
16 May,2012 17:50:19      <dir>    ICM
16 May,2012 17:50:19      <dir>    SNU
16 May,2012 17:50:19      <dir>    SSA
16 May,2012 17:50:19      <dir>    UserDialog
16 May,2012 17:50:19      <dir>    gen
05 Dec,2002 06:19:03      13,822  continue_enter_number.wav
05 Dec,2002 06:19:03      7,280   credit_of.wav
05 Dec,2002 06:19:04      18,310  did_not_hear_name.wav
05 Dec,2002 06:19:04      11,430  enter_phone_number.wav
05 Dec,2002 06:19:05      12,926  finished.wav
05 Dec,2002 06:19:05      4,448   goodbye.wav
05 Dec,2002 06:19:06      8,546   name_cancelled.wav
05 Dec,2002 06:19:06      47,572  name_confirm.wav
05 Dec,2002 06:19:07      22,990  name_not_found.wav
05 Dec,2002 06:19:08      36,142  no_phone_number.wav
05 Dec,2002 06:19:08      3,902   of.wav
05 Dec,2002 06:19:09      5,492   past.wav
05 Dec,2002 06:19:09      5,110   pound.wav
05 Dec,2002 06:19:10      8,070   spell.wav
05 Dec,2002 06:19:10      11,524  spell_again.wav
05 Dec,2002 06:19:11      12,724  spell_another.wav
05 Dec,2002 06:19:11      5,596   star.wav
05 Dec,2002 06:19:12      45,074  system_problem.wav
05 Dec,2002 06:19:12      5,038   thankyou.wav
05 Dec,2002 06:19:13      8,910   try_again.wav
05 Dec,2002 06:19:14      51,810  unrecov_error_rec.wav
05 Dec,2002 06:19:14      5,216   welcome.wav
```

```
dir count = 7, file count = 22
admin:
```

```
admin:file vvb list prompt_file system/default/vb detail
no such file or directory can be found
admin:file vvb list prompt_file system/G711_ULAW/default/vb detail
09 May,2017 22:07:43      32,110  ringback.wav
dir count = 0, file count = 1
```

## file uccx get

This command transfers the custom files created by Unified CCX scripts outside the box.

### Command syntax

**file uccx get custom\_file file-spec [options]**

### Arguments

**file-spec**—(Mandatory) File to transfer. File-spec can contain asterisks (\*) as wildcards.

### Options

**retime**—(Mandatory) File to transfer. File-spec can contain asteriks (\*) as wildcards.

**abstime**—(Mandatory) Absolute time to filter.

**match**—Search pattern to filter.

**recurs**—Obtains all the files located in file-spec and subdirectories

**compress**—Transfers files as compressed file

### Requirements

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:file uccx get custom_file text.txt abstime 00:00:12/01/08 01:00:12/30/08
```

## file uccx tail

This command will tail a custom file that was created by a Unified CCX script.

### Command syntax

**file uccx tail custom\_file file-spec [options]**

### Arguments

**file-spec**—(Mandatory) File to tail.

### Options

**hex,[num lines],regexp "expression"**

**recent**—To tail the most recently changed file in the directory.

### Requirements

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

### Example

Tail file starting with the last ten lines with pagination enabled:

```
admin:file uccx tail custom_file text.txt page 102005-08-03 15:01:41,248 DEBUG
[main] - cmdMVL size = 0
2005-08-03 15:01:41,248 INFO [main] - adding command in level3 (password/security)
2005-08-03 15:01:41,249 DEBUG [main] - begin for level4, topVL size = 0
2005-08-03 15:01:41,250 DEBUG [main] - begin for level4, topVL size = 0
2005-08-03 15:01:41,256 DEBUG [main] - begin for level3, topVL size = 0
2005-08-03 15:01:41,257 DEBUG [main] - begin for level2, topVL size = 0
2005-08-03 15:01:41,884 INFO [main] - merging complete
2005-08-03 15:06:27,619 INFO [main] - got to save history
2005-08-03 15:06:27,620 INFO [main] - Exiting CLI
```

## file uccx dump

This command dumps the contents of a file on the Unified CCX custom files area.

### Command syntax

**file uccx dump custom\_file file-spec [options]**

### Arguments

**file-spec**—(Mandatory) File to dump.

### Options

**hex, regexp "expression"**

**recent**—To dump the most recently changed file in the directory

### Requirements

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:file uccx dump custom_file text.txt
23640935: Dec 06 22:59:43.407 IST Unable to process call,
Exception=java.lang.NullPointerException
23640936: Dec 06 22:59:43.407 IST java.lang.NullPointerException
```

## file uccx delete

This command deletes a custom file that was created by a Unified CCX script. The command deletes one or more files on the Unified CCX custom files area.




---

**Note** Files that are in use cannot be deleted.

---

### Command Syntax

**file uccx delete custom\_file file-spec [options]**

### Arguments

**file-spec**—(Mandatory) File to delete. File-spec can contain asterisk (\*) as a wildcard.

### Options

**detail, noconfirm**

### Requirements

Level privilege: 0

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:file uccx delete custom_file log/*.log det noconfirm
deleting file : log/cli00001.log
deleting file : log/cli00002.log
deleting file : log/cli00003.log
deleting file : log/cli00004.log
files:          found = 4, deleted = 4
```

## High Availability Commands




---

**Note** If the Unified CCX database in either of the node is down or is Out of Service, High Availability commands do not work.

---

## show uccx dbreplication tables

This command is only available in the High Availability deployment of Unified CCX. This commands list all the database tables which are involved in replication in the high availability deployment.

### Command syntax

**show uccx dbreplication tables [options]**

### Options

**Page**—Displays the output one page at a time

**File**—Stores the output to a file and displays the filename

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx dbreplication tables
This operation may take a few minutes to complete. Please wait...

CURRENTLY DEFINED REPLICATES
-----
REPLICATE:      template_db_cra_pshree_dactyl_sub_uccx_1_2_agentstatedetail
STATE:          Active ON:g_pshree_dactyl_pub_uccx
CONFLICT:       Timestamp
FREQUENCY:      immediate
QUEUE SIZE:     0
PARTICIPANT:    db_cra:informix.agentstatedetail
OPTIONS:        transaction,ris,ats,fullrow
REPLID:         131075 / 0x20003
REPLMODE:       PRIMARY ON:g_pshree_dactyl_pub_uccx
APPLY-AS:       INFORMIX ON:g_pshree_dactyl_pub_uccx
REPLTYPE:       Master

.....
.....
.....

REPLICATE:      template_fcrassvr_pshree_dactyl_sub_uccx_3_3_fcrascallogweek
STATE:          Active ON:g_pshree_dactyl_pub_uccx
CONFLICT:       Timestamp
FREQUENCY:      immediate
QUEUE SIZE:     0
PARTICIPANT:    fcrassvr:informix.fcrascallogweek
OPTIONS:        transaction,ris,ats,fullrow
REPLID:         131104 / 0x20020
REPLMODE:       PRIMARY ON:g_pshree_dactyl_pub_uccx
APPLY-AS:       INFORMIX ON:g_pshree_dactyl_pub_uccx
REPLTYPE:       Master

Command successful.
admin:
```

## show uccx dbreplication servers

This command is only available in the High Availability deployment of Unified CCX. This command lists all the database servers which are involved in replication in the high availability deployment and whether replication is still connected or if replication is broken.

### Command syntax

**show uccx dbreplication servers** *[options]*

### Options

- **Page**—Displays the output one page at a time
- **File**—Stores the output to a file and displays the filename

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show uccx dbreplication servers
SERVER                ID STATE   STATUS   QUEUE  CONNECTION CHANGED
-----
10.76.253.106        110 Active  Connected  0 Apr  7 22:01:19
10.76.253.107        100 Active   Local      0
```

## utils uccx modify remote\_IPAddress

This command is available only in the High Availability deployment of Unified CCX. This command updates IP address of remote node in the server. Use this command during IP address change of remote node.




---

**Note** Use this command only when the IP address of the other node is going to be changed.

After you run this command, reboot the Unified CCX server and restart all the Unified CCX services.

---

### Command syntax

**utils uccx modify remote\_IPAddress** <remote\_server\_old\_ip\_address> <remote\_server\_new\_ip\_address>

### Arguments

**remote\_server\_old\_ip\_address**—Old IP address of the remote server

**remote\_server\_new\_ip\_address**—New IP address of the remote server

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx modify remote_IPAddress 10.76.253.82 10.76.253.83
Old Remote IP Address: 10.76.253.82
New Remote IP Address: 10.76.253.83
```

This command should be executed only in case you are changing IP Address of remote server.

Are you sure you want to run this command?

Continue (y/n)?y

Command successful.

## utils uccx modify remote\_hostname

This command is available only in the High Availability deployment of Unified CCX. This command updates hostname of remote node in the server. Use this command during hostname change of remote node.



**Note** Use this command only when the hostname of the other node is changed.

After you run this command, reboot the Unified CCX server and restart all the Unified CCX services.

### Command syntax

```
utils uccx modify remote_hostname <remote_server_old_hostname> <remote_server_new_hostname>
```

### Arguments

**remote\_server\_new\_hostname**—New hostname of the remote server

**remote\_server\_old\_hostname**—Old hostname of the remote server

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx modify remote_hostname uccx-node-1 uccx-node-2
Old Remote Hostname: uccx-node-1
New Remote Hostname: uccx-node-2
```

This command should be executed only in case you are changing Host name of remote server.

Are you sure you want to run this command?

Continue (y/n)?y

Command Successful.

## utils uccx database forcedatasync

This command gets the data from the other node in the cluster, effectively overwriting the data on this node.

### Command syntax

```
utils uccx database forcedatasync
```

### Arguments

None

### Options

None

### Requirements

Level privilege: 1

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin: utils uccx database forcedatasync
Are you sure you want to overwrite the local database? (y/n).
Command successful.
```

## utils uccx setuppubrestore

This command sets up a passwordless communication between Unified CCX cluster nodes. Passwordless communication is required to perform the restore operation. Execute this command only on the subscriber node. Use this command while running restore using the "Publisher Only" option.




---

**Note** This command is available only in high availability mode.

---

### Command syntax

**utils uccx setuppubrestore**

### Example

```
admin:utils uccx setuppubrestore
```

## utils uccx dbreplication setup

This command is available only in the High Availability deployment of Unified CCX. This command is used to set up database replication. The command can be executed on any node and it sets up database replication in the cluster.

### Command syntax

**utils uccx dbreplication setup**

### Options

**Page**—Displays the output one page at a time

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx dbreplication setup
The DB replication for the UCCX cluster has been setup.
```

## utils uccx dbreplication status

This command is available only in the High Availability deployment of Unified CCX. This command is used to check the Unified CCX database replication status.

### Command syntax

**utils uccx dbreplication status**

### Options

None

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
utils uccx dbreplication status
SERVER                ID STATE      STATUS      QUEUE  CONNECTION CHANGED
-----
g_alpha_ha_n1_uccx    1 Active    Connected   0 Aug  8 18:45:26
g_alpha_ha_n2_uccx    2 Active    Local       0

-----
REPLICATE                                STATE
-----
db_cra:informix.agentconnectiondetail    Active
db_cra:informix.contactcalldetail        Active
db_cra:informix.contactroutingdetail     Active
db_cra:informix.eememailstatusdescription Active
db_cra:informix.eemreasoncodedescription Active
db_cra:informix.eemcontactemaildetail    Active
db_cra:informix.eememailagentstatedetail Active
db_cra_repository:informix.promptsfoldertbl Active
db_cra_repository:informix.promptsfiletbl Active
db_cra_repository:informix.grammarsfiletbl Active
db_cra_repository:informix.documentsfiletbl Active
db_cra_repository:informix.sysgrammarsfiletbl Active
db_cra_repository:informix.latestsynchedtime Active
fcrassvr:informix.fcrascallogweek        Inactive
fcrassvr:informix.fcrasrecordlog         Inactive
fcrassvr:informix.latestsynchedtime      Inactive
db_cra:informix.agentstatedetail         Active
db_cra_repository:informix.scriptsfiletbl Active
fcrassvr:informix.fcrascallogtoday       Inactive
db_cra:informix.monitoredresourcedetail  Active
db_cra:informix.latestsynchedtime        Active
db_cra:informix.eemactiveemail           Active
db_cra_repository:informix.grammarsfoldertbl Active
db_cra_repository:informix.documentsfoldertbl Active
db_cra_repository:informix.scriptsfoldertbl Active
fcrassvr:informix.fcrasstatelogtoday     Inactive
db_cra:informix.contactqueuedetail       Active
db_cra:informix.remotemonitoringdetail   Active
db_cra:informix.eemstatedescription      Active
db_cra:informix.eemqueueagentdetail      Active
```

```
db_cra_repository:informix.sysgrammarsfoldertbl      Active
-----
```

## utils uccx dbreplication templatestatus

This command is available only in the High Availability deployment of Unified CCX. This command is used to see the template status of the database replication.

### Command syntax

**utils uccx dbreplication templatestatus**

### Options

**Page**—Displays the output one page at a time

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx dbreplication templatestatus
The DB replication templatestatus is as follows.
```

## utils uccx dbreplication repair

This command is available only in the High Availability deployment of Unified CCX. You can run this command on any node. This command repairs mismatched data between cluster nodes; it does not repair replication setup. The command initiates the repair, which executes in the background. To monitor the status of the repair process, the user must go to the data store control center in Serviceability Administration. For more information, see the *Cisco Unified Serviceability Administration Guide* available at: <https://www.cisco.com/c/en/us/support/unified-communications/unified-communications-manager-callmanager/products-maintenance-guides-list.html>.

### Command syntax:

**utils uccx dbreplication repair [database\_name]all**

### Arguments

**[database\_name]all**—(Mandatory) Database\_name, which database to repair replication on. (Argument)  
all—Fix replication on all nodes.

### Options

**Page**—Displays the output one page at a time

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx dbreplication repair all
Repair has been initiated in the background...
Please go to Data Control Center in Serviceability Admin to monitor the status
of the repair.
```

## utils uccx dbreplication start

This command is available only in the High Availability deployment of Unified CCX. This command is used to start the database replication. Run this command on any node to start database replication in the entire cluster.

### Command syntax

**utils uccx dbreplication start**

### Options

**Page**—Displays the output one page at a time

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx dbreplication start
The DB replication for the UCCX cluster has been started.
```

## utils uccx dbreplication stop

This command is available only in the High Availability deployment of Unified CCX. This command is used to stop database replication. Run this command on any node to stop database replication in the entire cluster.

### Command syntax

**utils uccx dbreplication stop**

### Options

**Page**—Displays the output one page at a time

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:utils uccx dbreplication stop
The DB replication for the UCCX cluster has been stopped.
```

## utils uccx dbreplication reset

This command is available only in the High Availability deployment of Unified CCX. This command is used to reset the database replication. Resetting replication involves the following activities, in the same order, and is equivalent to the commands presented in parentheses.

- Remove database replication (utils uccx dbreplication teardown)
- Setup database replication (utils uccx dbreplication setup)
- Initiate a data repair process for all the databases (utils uccx dbreplication repair all)

### Command syntax

#### utils uccx dbreplication reset

#### Options

**Page**—Displays the output one page at a time

#### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

#### Example

```
admin:utils uccx dbreplication reset
The DB replication for the UCCX cluster has been reset.
```

## utils uccx dbreplication teardown

This command is available only in the High Availability deployment of Unified CCX. This command is used to remove the database replication. Running this command on any node with the cluster removes database replication between all nodes.

### Command syntax

#### utils uccx dbreplication teardown

#### Options

**page**—Displays the output one page at a time

#### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

#### Example

```
admin:utils uccx dbreplication teardown
The DB replication for the UCCX cluster has been teardown.
```

## Cisco Finesse Commands

### utils reset\_3rdpartygadget\_password

Run this command to set or reset the password of the 3rdpartygadget account (where password is the new password for the account).

Use the 3rdpartygadget account to upload third-party gadgets to the Cisco Unified CCX Server so that you can use the gadgets from Cisco Finesse. Before you use this account, you must set the password.



---

**Note** The password length must be between 5 and 32 characters long and must not contain spaces or double quotes.

---

#### Command syntax

**utils reset\_3rdpartygadget\_password**

#### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

```
admin: utils reset_3rdpartygadget_password
New Password:
Confirm New Password:

Updating password for 3rdpartygadget...

Password updated successfully.
admin
```



---

**Note** Password values entered by the user is not echoed on the console.

---

## Cisco Finesse Trace Logging

Use the following commands to toggle trace logs for Cisco Finesse, enable trace logs for Finesse IPPA, and enable debug logs for realm.



---

**Note** Enabling trace logging may cause an overload in the system and must be used for debugging purposes only.

---

- **utils finesse trace enable:**

This command allows you to:

- Enable trace logs for Cisco Finesse.
- Turn on command dispatcher logs.
- Enable trace logs for Finesse IPPA.
- Enable debug logs for Realm.

- **utils finesse trace disable**

This command allows you to:

- Disable trace logs for Cisco Finesse.
- Turn off command dispatcher logs.
- Disable trace logs for Finesse IPPA.
- Disable debug logs for Realm.



---

**Note** After execution of each command, wait for 60 seconds for the changes to take effect.

---

- **utils finesse trace status**

This command allows you to displays status as:

- Enabled - When all four actions are enabled.
- Disabled - When all four actions are disabled.

If all actions are not enabled or disabled, a warning message is displayed.

## Finesse Log Configuration

Use the following CLI commands to add, delete, update, or view the logger configuration in the system for Finesse.

### **utils finesse log configuration add**

Creates a custom log configuration in the Finesse system. The logs record information about the encountered issues of different severity levels for a specific Finesse module.

#### **Command Syntax**

**utils finesse log configuration add** *[module] [name] [level]*

#### **Options**

**Note**

- Adding multiple module names, log configuration names, and log configuration level values are not supported.
  - Log configuration with name ROOT is not allowed.
- 
- *module*—Unique name of Finesse module for which log configuration has to be added. The module name is case sensitive. The following are the valid Finesse modules.
    - *admin*—Finesse administration module.
    - *audit*—Finesse audit module for all administration (including Finesse admin UI and REST client) and supervisor operations.
    - *desktop*—Finesse desktop module.
    - *diagnostics*—Finesse diagnostics module.
    - *FIPPA*—Finesse IP Phone Agent (IPPA) application module.
    - *realm*—Finesse realm module.
    - *shindig*—Shindig web application module.
    - *valve*—Finesse valve module.
    - *webservices*—Finesse webservices module.
  - *name*—Package name or fully qualified class name of the Finesse application. The name is case sensitive.
  - *level*—Defines the different severity level associated with the log configuration. The following are the valid log configuration levels.
    - *OFF*—Turns off the severity level.
    - *ERROR*—Sets the severity level to error.
    - *WARN*—Sets the severity level to warning.
    - *INFO*—Sets the severity level to information.
    - *DEBUG*—Sets the severity level to debug.
    - *TRACE*—Sets the severity level to trace.
    - *ALL*—Sets the severity level to all.

**Note**

Setting the log configuration level to DEBUG or TRACE impacts system performance. This must be done in consultation with Cisco support to ensure that the modules with high log output are not be enabled with TRACE levels in production servers.

**Example**

The following is the sample output for creating the log configuration named *com.cisco.cc.common.subsystem* under the Finesse *webservices* module with log configuration level as *DEBUG*.

```
admin:utils finesse log configuration add webservices com.cisco.cc.common.subsystem DEBUG

Warning: Creating the custom log configurations may affect the performance of the Finesse
system.

Press ENTER to continue. Press any other key to exit :

Creating the log configuration, please wait...

Successfully added the log configuration. Changes might take approximately 30 seconds to
take effect..
```

### utils finesse log configuration update

Updates an existing custom log configuration in the Finesse system.



- 
- Note**
- Updating multiple module names, log configuration names, and log configuration level values are not supported.
  - Audit log configuration cannot be updated.
- 

### Command Syntax

**utils finesse log configuration update** [*module*] [*name*] [*level*]

#### Options

- *module*—Unique name of Finesse module for which log configuration has to be updated. The module name is case sensitive. For more information on the Finesse modules, see [utils finesse log configuration add](#).
- *name*—Package name or fully qualified class name of the Finesse application. The name is case sensitive.
- *level*—Defines the different severity level associated with the log configuration. For more information on the severity levels, see [utils finesse log configuration add](#).



- 
- Note** Setting the log configuration level to *DEBUG* or *TRACE* impacts system performance.
- 

### Example

The following is the sample output for updating the log configuration named *com.cisco.cc.common.subsystem* under the Finesse *webservices* module with log configuration level as *TRACE*.

```
admin:utils finesse log configuration update webservices com.cisco.cc.common.subsystem TRACE

Warning: Updating the log configuration level to DEBUG or TRACE may affect the performance
of the Finesse system.

Press ENTER to continue. Press any other key to exit :
```

```
Updating the log configuration, please wait...
```

```
Successfully updated the log configuration. Changes might take approximately 30 seconds to take effect.
```

### utils finesse log configuration delete

Deletes an existing custom log configuration in the Finesse system.



#### Note

- ROOT log configurations cannot be deleted.
- Deleting multiple log configuration names are not supported.

### Command Syntax

```
utils finesse log configuration delete [module] [name]
```

#### Options

- *module*—Unique name of the Finesse module. The module name is case sensitive.
- *name*—Package name or fully qualified class name of the Finesse application. The name is case sensitive.

#### Example

The following is the sample output for deleting the log configuration named *com.cisco.cc.common.subsystem* under the Finesse *webservices* module.

```
admin:utils finesse log configuration delete webservices com.cisco.cc.common.subsystem
Deleting log configuration, please wait...
```

```
Successfully deleted the log configuration. Changes might take approximately 30 seconds to take effect.
```

### utils finesse log configuration list

Lists all log configurations in the Finesse system.

### Command Syntax

```
utils finesse log configuration list
```

#### Example

The following is the sample output for all the log configuration in the Finesse system.

```
admin:utils finesse log configuration list
Requesting log configurations, please wait...
Below is the list of log configurations in Finesse.
```

No.	Module	Level	Name
1.	admin	ROOT	
2.	audit	ROOT	INFO
3.	desktop	ROOT	INFO

```

| 4. | diagnostics | ROOT
| 5. | FIPPA | ROOT | INFO |
| 6. | realm | ROOT | INFO |
| 7. | shindig | ROOT | INFO |
| 8. | valve | ROOT | INFO |
| 9. | webservices | ROOT | INFO |
| 10. | FIPPA | org.jivesoftware | WARN |
| 11. | webservices | org.hibernate | INFO |
| 12. | webservices | com.cisco.cc.common.subsystem | TRACE |

```

## Toaster Notifications

Toaster notifications are enabled by default after a fresh installation of Cisco Finesse. Use the following CLI commands to disable, enable, and check the status of the toaster notifications:

- **utils finesse toaster enable [closeTimeout]:** This command enables the Cisco Finesse toaster notification.

While enabling toaster notification, use the **closeTimeout** parameter (timeout in seconds) to set the time interval after which toaster automatically closes. If no parameter is specified, timeout is set to 8 seconds by default. The valid range for timeout activity is between 5-15 seconds. The browser must be refreshed for timeout changes to take effect.



**Note** The configured timeout for browser notifications depends on the operating system and browser settings. The timeout value is honored in Chrome browser in Windows OS. However, the other supported browsers do not honor the configured notification timeout value consistently.

- **utils finesse toaster disable:** This command disables the Cisco Finesse toaster notification.
- **utils finesse toaster status:** This command displays the status (enable or disable) of the Cisco Finesse toaster notification.



**Note** Cisco Finesse Toaster Notification does not work with Internet Explorer browser.

## Finesse IPPA Inactivity Timeout

Use the following CLI commands to enable or disable the Inactivity Timeout feature in Finesse IPPA. You must either disable the Finesse Inactivity Timeout feature or increase the timeout in the range of 120 seconds to one day (in seconds), so that the Finesse IPPA agent is not logged out if on any other screen:

- **utils finesse ippa\_inactivity\_timeout enable:** This command enables Finesse IPPA Inactivity Timeout.



---

**Note** The default time set for inactivity timeout is 120 seconds.

---

- **utils finesse ippa\_inactivity\_timeout disable:** This command disables Finesse IPPA Inactivity Timeout.



---

**Note** When inactivity timeout is disabled, you will not be logged out of Finesse IPPA, if the agent is on any other screen.

---

- **utils finesse ippa\_inactivity\_timeout enable inactivity\_timeout:** This command enables the Finesse IPPA Inactivity Timeout with timeout set to n seconds.



---

**Note** Minimum value of n must be 120 seconds and maximum value can be up to one day (86400 seconds).

---

- **utils finesse ippa\_inactivity\_timeout status:** This command checks the status of Finesse IPPA Inactivity Timeout.



---

**Note** The Finesse IPPA Inactivity Timeout CLIs should be run on primary and secondary Finesse servers. Enabling or disabling this feature requires a restart of Cisco Finesse Tomcat, and restart must be done in the maintenance window. During upgrade, the inactivity timeout configuration is not retained and should be re-configured post upgrade.

To know how this feature works on specific IP phone models, see <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-express/products-device-support-tables-list.html>

---

## Supported Content Security Policy Directives



---

**Note** To enable this feature in Cisco Finesse, install Finesse 12.5(1) ES3 COP or higher.

---

Content Security Policy (CSP) is a standardized set of security directives that can inform the browser of the policies to be used to help mitigate various forms of attacks. CSP frame-ancestor policy defines the allowable locations from where the Finesse desktop can be accessed as an embedded HTML content, which can help prevent click-jacking attacks.



---

**Note** From Cisco Finesse Release 12.5(1) ES4 COP onward, all references to **whitelist** in the CLIs are changed to **allowed\_list**.

---

Use the following CLI commands to view, add, or delete the frame-access sources in the response header of Cisco Finesse. This ensures that only the configured sources can embed the Cisco Finesse in an iFrame within their HTML pages.



**Note** Internet Explorer does not support frame-ancestors, and therefore will not block any websites from loading Cisco Finesse within it.

- **utils finesse frame\_access\_allowed\_list add** [*source1,source2*]—This command adds one or more frame sources, thereby allowing the configured sources to embed the Cisco Finesse in their iFrames. Multiple sources can be provided as a comma-separated list. The source should be of the following format:

- `https://<fqdn>:[port]`
- `https://IP:[port]`
- `https://<fqdn1>:port, https://<fqdn2>:port`



**Note** Wildcard character \* is also supported for the FQDN and port entries, which indicates that all the legal FQDN or ports are valid.

```
admin:utils finesse frame_access_allowed_list add
https://www.abc.com:8445,https://*.abc.com,https://*.abc.com:*,https://10.21.255.25

Source(s) successfully added.
Ensure Source(s) is added to the frame access list in all Finesse nodes in the cluster.
```

Restart Cisco Finesse Tomcat and Cisco Unified CCX Notification Service for the changes to take effect:

```
utils service restart Cisco Finesse Tomcat
utils service restart Cisco Unified CCX Notification Service
```

- **utils finesse frame\_access\_allowed\_list delete**—This command displays an indexed list of all the configured frame sources that have been allowed to access Cisco Finesse. Enter the corresponding index number to delete a single source or all the configured sources.

```
admin:utils finesse frame_access_allowed_list delete
```

```
1: https://www.abc.com:8445
2: https://*.abc.com
3: https://*.abc.com:*
4: https://10.21.255.25
a: all
q: quit
```

Select the index of source to be deleted [1-4 or a,q]: 1  
Sources deleted successfully.

Restart Cisco Finesse Tomcat and Cisco Unified CCX Notification Service for the changes to take effect:

```
utils service restart Cisco Finesse Tomcat
utils service restart Cisco Unified CCX Notification Service
```

- **utils finesse frame\_access\_allowed\_list list**—This command lists all the frame sources that are allowed to access Cisco Finesse.

```
admin:utils finesse frame_access_allowed_list list
```

The following source(s) are configured in the frame access list:

```
1: https://www.abc.com:8445
2: https://*.abc.com
3: https://*.abc.com:*
4: https://10.21.255.25
```

## Finesse System Commands

Configure the following Cisco Finesse system CLIs:

### Node Statistics

Use the following CLI command to view the run-time statistics for the current node.

- To view: **utils finesse node\_statistics list**

```
admin:utils finesse node_statistics list
```

Warning: Running this command frequently will affect system performance.  
Press ENTER to continue. Press any other key to exit :

Wait while the statistics (updated every 5 secs) are being fetched...

The following are the runtime statistics for the current node.

Active Dialogs Count: 0

Active Tasks Count: 0

Average Configured Media per Agent Count: 0

Average Logged in Media per Agent Count: 0

Average Skill Groups per Agent Count: 0

Max Skill Groups per Agent Count: 0

Total Time for Finesse to Start (in seconds): 32

Logged in Agents on current node: 0

Unique Configured Skill Groups per Agent Count: 0

For more information, see *RuntimeConfigInfo API Parameters* section in the *Cisco Finesse Web Services Developer Guide* at <https://developer.cisco.com/docs/finesse/>.

## Desktop Properties

Configure the desktop properties using the following CLIs for the features.



---

**Note** Refresh the browser for the changes to take effect.

---

### Active Call Details in the Team Performance Gadget

Use the following CLI commands to enable or disable the active call details:

- To enable: **utils finesse set\_property desktop showActiveCallDetails true**
- To disable: **utils finesse set\_property desktop showActiveCallDetails false**

### View History in the Team Performance Gadget

Use the following CLI commands to enable or disable the agent history:

- To enable: **utils finesse set\_property desktop showAgentHistoryGadgets true**
- To disable: **utils finesse set\_property desktop showAgentHistoryGadgets false**

### Force Wrap-Up Reason

Use the following CLI commands to enable or disable the force wrap-up reason:



---

**Note** This is applicable to both voice and non-voice channels.

---

- To enable: **utils finesse set\_property desktop forceWrapUp true**
- To disable: **utils finesse set\_property desktop forceWrapUp false**

### Show Wrap-Up Timer

Use the following CLI commands to show or hide the timer in wrap-up state:



---

**Note** This is applicable to both voice and non-voice channels.

---

- To hide the timer in wrap-up state: **utils finesse set\_property desktop showWrapUpTimer false**
- To display the timer in wrap-up state: **utils finesse set\_property desktop showWrapUpTimer true**

By default, the value of this property is set to true.

### Wrap-Up Timer Count Down

Use the following CLI commands to set the wrap-up timer to count down or count up the time:



---

**Note** This is applicable to both voice and non-voice channels.

---

- To count up the time: **utils finesse set\_property desktop wrapUpCountDown false**
- To count down the time: **utils finesse set\_property desktop wrapUpCountDown true**

By default, the value of this property is set to true.

### Notification Connection Type

Use the following CLI commands to update the desktop notification connection type as WebSockets or BOSH:

- For WebSockets: **utils finesse set\_property desktop notificationConnectionType websocket**
- For BOSH: **utils finesse set\_property desktop notificationConnectionType bosh**

By default, the connection type is WebSockets.

### Desktop Chat Attachment

Use the following CLI commands to enable or disable the attachment support in Desktop Chat:

- To enable: **utils finesse set\_property desktop desktopChatAttachmentEnabled true**
- To disable: **utils finesse set\_property desktop desktopChatAttachmentEnabled false**

By default, attachments are enabled in the Desktop Chat.

### Desktop Chat Maximum Attachment Size

Use the following CLI commands to configure the attachment size in Desktop Chat:

- **utils finesse set\_property desktop desktopChatMaxAttachmentSize *Attachment Size***

For example, to set the maximum attachment size to 2 MB, use:

```
utils finesse set_property desktop desktopChatMaxAttachmentSize 2097152
```




---

**Note** The maximum attachment size configurable is up to 10 MB.

---

If you don't configure the maximum attachment size, by default, the maximum attachment size is set to 5 MB.

### Desktop Chat Unsupported File Types

The .exe, .msi, .sh, and .bat file types are not supported by default. Use the following CLI commands to override the default list and customize the file types that won't be supported in the Desktop Chat:

- **utils finesse set\_property desktop desktopChatUnsupportedFileTypes *File Types***

For example, to set the .jar and .bin as unsupported file types, use:

```
utils finesse set_property desktop desktopChatUnsupportedFileTypes jar,bin
```

Multiple file types can be added using a comma-separated string.

### Automatic Desktop Login Retries

Cisco Finesse supports automatic desktop login retries when the desktop login fails due to device-related errors. The following properties allow the administrator to control how this feature behaves:

- To enable: **utils finesse set\_property desktop enableRetryLoginFeature true**




---

**Attention** The **utils finesse set\_property desktop enableRetryLoginFeature true** command is not enabling automatic desktop login retries. So, to enable automatic desktop login retries, use the following command:

**utils finesse set\_property desktop retryLoginAfterLogoutPhoneFailure true**

To view the status of automatic desktop login retries, use the following command:

**utils finesse show\_property desktop retryLoginAfterLogoutPhoneFailure**

To disable the automatic desktop login retries, use the following command:

**utils finesse set\_property desktop enableRetryLoginFeature false**

---

- If this feature is enabled, you can define the retry attempts and intervals.
  - To set the number of retry attempts: **utils finesse set\_property desktop loginFailureRetryAttempts <value>**  
The maximum retry attempts are 10. Default value is 3.
  - To set intervals: **utils finesse set\_property desktop loginFailureRetryInterval <value>**  
The login retry has a configurable amount of delay between each retry to allow the device to recover. The minimum and maximum interval between retries is 15-180 seconds. Default value is 60 seconds.




---

**Note** Reducing the retry interval increases the load on the system when there is a system-wide outage of devices.

---

By default, the value of this property is set to true.

#### Enable or Disable Keyboard Shortcuts

Use the following CLI commands to enable or disable the keyboard shortcuts for the Cisco Finesse agent and supervisor desktop:

- To enable: **utils finesse set\_property desktop enableShortCutKeys true**
- To disable: **utils finesse set\_property desktop enableShortCutKeys false**

By default, the value of this property is set to true.

#### Enable or Disable Drag-and-Drop and Resize for a Gadget or Component

Use the following CLI commands to enable or disable the drag-and-drop and resize features for a gadget or component in the Cisco Finesse desktop:

- To enable: **utils finesse set\_property desktop enableDragDropAndResizeGadget true**
- To disable: **utils finesse set\_property desktop enableDragDropAndResizeGadget false**

By default, the value of this property is set to false. For more information on using the drag-and-drop and resize features, see the *Cisco Finesse Agent and Supervisor Desktop User Guide* at <https://www.cisco.com/c/en/us/support/customer-collaboration/finesse/products-user-guide-list.html>.

### Enable or Disable Preloading of the Secondary Resources

Use the following CLI commands to enable or disable the preloading of the secondary server resources from the alternate side during desktop sign in:

- To enable: **utils finesse set\_property desktop preLoadSecondaryResources true**
- To disable: **utils finesse set\_property desktop preLoadSecondaryResources false**

The preloaded resources are **images**, **CSS**, **JS**, and **HTML**. The preloading reduces latency and improves performance during desktop failover. By default, the value of this property is set to true.

### Security Banner Message for Desktop Users

Cisco Finesse supports custom banner messages in the desktop Sign In page. The administrator defines the banner message for Cisco Finesse desktop users so that they are aware of the security policy while using Cisco Finesse. The banner message can have a maximum of 220 characters. It supports both alphanumeric and special characters. By default, the banner message is not displayed.

- To add the security banner message to the desktop Sign In page: **utils finesse set\_property desktop desktopSecurityBannerMessage <value>**

The following example displays the sample security banner that is defined for desktop Sign In page.

```
admin:utils finesse set_property desktop desktopSecurityBannerMessage "IMPORTANT: Finesse
may only be accessed by authorized users!"
```

```
Property successfully updated.
```

```
Ensure property is updated in all Finesse nodes in the cluster.
```

```
No service restart required. Ensure browser is refreshed for the changes to take effect.
```

- To remove the security banner message in the desktop Sign In page: **utils finesse set\_property desktop desktopSecurityBannerMessage ""**

### Dual-Tone Multi-Frequency (DTMF) Desktop Behavior

The **Wrap-Up** button and the call control buttons, **Hold**, **Transfer**, **Consult**, and **End** are disabled across all calls when DTMF **Keypad** is opened, and until the responses to all DTMF requests are completed or have timed out.

### DTMF Pending Requests Threshold Count

When the network or the server is slow to respond, then the response to DTMF requests are delayed. DTMF keypad prevents new operations when more than a configured number of outstanding responses are pending. The default value is 20.

- To configure the DTMF threshold count for pending requests: **utils finesse set\_property desktop pendingDTMFThresholdCount <value>**

The following example displays the sample DTMF threshold count.

```
admin:utils finesse set_property desktop pendingDTMFThresholdCount 15
```

```
Property successfully updated.
```

```
Ensure property is updated in all Finesse nodes in the cluster.
```

```
No service restart required. Ensure the desktop browser is refreshed for the changes
to take effect.
```

### DTMF Request Timeout

Cisco Finesse waits for a configured time for each DTMF request. The default timeout is 5 seconds.

- To configure the DTMF timeout for pending requests: **utils finesse set\_property desktop dtmfRequestTimeoutInMs <value>**




---

**Note** The timeout value must be entered in milliseconds.

---

The following example displays the sample DTMF timeout count.

```
admin:utils finesse set_property desktop dtmfRequestTimeoutInMs 4000
```

```
Property successfully updated.
```

```
Ensure property is updated in all Finesse nodes in the cluster.
```

```
No service restart required. Ensure the desktop browser is refreshed for the changes to take effect.
```

### Maintenance Mode

When Cisco Finesse maintenance mode is initiated in Unified CCE deployments using Agent PG 12.5 or lower, the agents' part of the failover experiences a state change of **Ready** or **NotReady** as configured in the property **agentStateAfterMigration**. Use the following CLI commands to control the agent state when migrating to the secondary Cisco Finesse node during maintenance mode. By default, the **agentStateAfterMigration** value is **Ready**, which can be changed using the following command:

**utils finesse set\_property desktop agentStateAfterMigration NotReady**

If the default state of agents after migration is set as **NotReady**, administrator has to define the **NotReady** reason code. The following command is an example to set **5448** as the **NotReady** reason code, which will be applied while migrating to the alternate side:

**utils finesse set\_property desktop migrationNotReadyReasonCode 5448**




---

**Note** These commands are not applicable when Cisco Finesse is connected to CTI versions that are greater than or equal to 12.6.

---

## WebProxy Service

WebProxy Service acts as a transparent reverse proxy between external clients and the Finesse service. It provides SSL termination and caching services to the Finesse server to reduce latency and improve performance.

Configuration changes done on the Finesse server may not be immediately available to the clients due to the intermediary webproxy cache. The administrator can clear the intermediary webproxy cache using **utils webproxy cache clear**.

WebProxy cache is automatically cleared when you restart the Finesse Tomcat service. Static resources (images and scripts), Shindig gadget XML, and resources are cached until the Finesse Tomcat service is restarted or explicitly cleared by the administrator.

For more information on REST API Response Caching, see *REST API Developer Guide* at <https://developer.cisco.com/docs/finesse/>.

The logging level of the WebProxy Service is managed using the web proxy log-levels CLI.



---

**Note** WebProxy Service CLIs are node-specific and must be executed on all nodes in the cluster.

---

Proxy cache bypassing reduces performance and must be used for debugging purposes during the gadget development or troubleshooting.

Server cache for the Finesse API can be bypassed by including `bypassServerCache=true` as a query parameter in the request or clear server cache using **utils webproxy cache clear**.

Server cache for the Finesse desktop can be bypassed by including `bypassServerCache=true&nocache` as a query parameter in the desktop URL.

## utils webproxy cache clear

This command clears the cache from the WebProxy Service.

### Command Syntax

**utils webproxy cache clear** {*all* | *webproxy* | *desktop* | *rest* | *shindig* | *notification\_service*}

### Options

- *all*—Clears all the configured caches.
- *webproxy*—Clears the default webproxy cache.
- *desktop*—Clears the desktop cache. The desktop cache contains static HTML, CSS, scripts, and icons used in the Finesse desktop.
- *rest*—Clears the REST APIs cache. The REST API responses cached are:
  - *MediaDomain*
  - *TeamResource* APIs include *ReasonCodes*, *WrapUpReasons*, *MediaPropertiesLayouts*, *PhoneBooks*, and *WorkFlows*. The responses of the *TeamResource* API are cached at the team-level.
- *shindig*—Clears the Shindig cache. The Shindig cache contains XML gadget definition (if request-response) and gadget resources (concat request-response).
- *notification\_service*—Clears the Notification Service cache. The Notification Service cache contains scripts and HTML used by the Finesse desktop to connect to notification service.
- *authmode*—Clears the *UserAuthMode* API cache.

### Command Modes

Administrator (admin)

### Requirements

Command privilege level: 1

Allowed during upgrade: Yes

Applies to: Unified CCE, Unified CCX, Packaged CCE and HCS for Contact Center

### Example

```
admin:utils webproxy cache clear desktop
Successfully cleared desktop cache
```

## set webproxy access-log-level

This command sets the log-level for the access logs generated by the WebProxy Service. The access logs record information about all external requests that reach the proxy. The requests are logged in the access log after the request is processed.

### Command Syntax

```
set webproxy access-log-level {off|info|debug}
```

### Options

- *off*—Turns off the logging into the access logs of the WebProxy Service.
- *info*—Sets the log-level for access logs of the WebProxy Service to information. This captures the data of each request such as time, client, host, user, and so on.
- *debug*—Sets the log-level for access logs of the WebProxy Service to debug. This captures the detailed data of each request for debugging.




---

**Note** Setting the access logs to debug impacts performance. Hence, avoid using in the production deployment.

---

### Command Default

The default value is *off*.

### Command Modes

Administrator (admin)

### Requirements

Command privilege level: 1

Allowed during upgrade: Yes

Applies to: Unified CCE, Unified CCX, Packaged CCE and HCS for Contact Center

### Example

```
admin:set webproxy access-log-level off
Webproxy access log-level is turned off

admin:set webproxy access-log-level info
Successfully set webproxy access log-level to info
Service restarted
```

## set webproxy log-severity

This command sets the severity of the error logs that are generated by the WebProxy Service. The error logs record information about encountered issues of different severity levels.

### Command Syntax

```
set webproxy log-severity {debug|warn|error|crit|alert|emerg}
```

### Options

- *debug*—Sets the severity level to debug.



---

**Note** Setting the error logs to debug impacts performance. Hence, avoid using in the production deployment.

---

- *warn*—Sets the severity level to warning.
- *error*—Sets the severity level to error.
- *crit*—Sets the severity level to critical.
- *alert*—Sets the severity level to alert.
- *emerg*—Sets the severity level to emergency.

### Command Default

The default value is *warn*.

### Command Modes

Administrator (admin)

### Requirements

Command privilege level: 1

Allowed during upgrade: Yes

Applies to: Unified CCE, Unified CCX, Packaged CCE and HCS for Contact Center

### Example

```
admin:set webproxy log-severity warn
Successfully set webproxy log severity to warn
Service restarted
```

## show webproxy access-log-level

This command displays the configured log-level for the access logs of the WebProxy Service.

### Command Syntax

#### show webproxy access-log-level

### Command Modes

Administrator (admin)

### Requirements

Command privilege level: 1

Allowed during upgrade: Yes

Applies to: Unified CCE, Unified CCX, Packaged CCE and HCS for Contact Center

### Example

```
admin:show webproxy access-log-level
Current webproxy access log-level is: info
```

### show webproxy log-severity

This command displays the configured severity level for the error logs of the WebProxy Service.

#### show webproxy log-severity

---

#### Command Modes

Administrator (admin)

#### Requirements:

Command privilege level: 1

Allowed during upgrade: Yes

Applies to: Unified CCE, Unified CCX, Packaged CCE and HCS for Contact Center

#### Example

```
admin:show webproxy log-severity
Current webproxy log-severity is: warn
```

## Service Properties

Configure the service properties using the following CLIs for the features.




---

**Note** The CLIs require Cisco Finesse Tomcat restart except for desktop related properties.

---

#### Security Banner Message for Administrators

Cisco Finesse supports custom banner messages in the administration Sign In page. The administrator defines the banner message for the users so that they are aware of the security policy while using Cisco Finesse. The banner message can have a maximum of 220 characters. It supports both alphanumeric and special characters. By default, the banner message is not displayed.

- To add the security banner message to the administrator Sign In page: **utils finesse set\_property admin adminSecurityBannerMessage <value>**

The following example displays the sample security banner that is defined for the administrator Sign In page.

```
admin:utils finesse set_property admin adminSecurityBannerMessage "IMPORTANT: Finesse may
only be accessed by authorized users!"
```

Property successfully updated.

Ensure property is updated in all Finesse nodes in the cluster.

```
Restart Cisco Finesse Tomcat Service for the changes to take effect:
utils service restart Cisco Finesse Tomcat
```

- To remove the security banner message in the administrator Sign In page: **utils finesse set\_property admin adminSecurityBannerMessage ""**

### Enable or Disable Plain XMPP Socket—Port 5222

Use the following CLI commands to enable or disable the Cisco Unified CCX Notification Service plain XMPP port (5222). This port can be enabled only if you have third-party solutions that connect directly to the Cisco Unified CCX Notification Service over plain Transmission Control Protocol (TCP) connection. This port is not required for the Finesse desktop or BOSH/WebSocket based integrations. By default, the port is disabled.

- To enable: **utils finesse set\_property webservices enableInsecureOpenfirePort true**
- To disable: **utils finesse set\_property webservices enableInsecureOpenfirePort false**

### Enable or Disable Secure XMPP Socket—Port 5223

Use the following CLI commands to enable or disable the external access to the Cisco Unified CCX Notification Service TCP-based XMPP port (5223). The port must be enabled for external client connectivity only if you have third-party solutions that connect directly to the Cisco Unified CCX Notification Service over this port. By default, the port is enabled (value is set to *true*).

- To enable: **utils finesse set\_property webservices enableExternalNotificationPortAccess true**
- To disable: **utils finesse set\_property webservices enableExternalNotificationPortAccess false**



---

**Note** Restart Cisco Finesse Tomcat and Cisco Finesse Notification Services for the changes to take effect.

---

### Enable or Disable Enforcement of X.509 Certificate Trust Validation

Use the following CLI commands to enable or disable the validation of the X.509 CA or the selfsigned certificate. From Release 12.5(1) onwards, Cisco Finesse validates SSL certificates of all the servers (CUCM and Customer Collaboration Platform) it communicates. This requires the custom CA providers or the selfsigned certificates of the server it communicates to be present in the Cisco Finesse Tomcat trust store. If the certificates are not added into the Cisco Finesse trust store, then certain interactions can fail. It is advised to add the certificates into the Cisco Finesse trust store. If any user chooses to ignore the validation, enforcement can be turned off. This CLI allows users to disable or enable validation. By default, the validation is turned on.

- To enable: **utils finesse set\_property webservices trustAllCertificates true**
- To disable: **utils finesse set\_property webservices trustAllCertificates false**

### Enable or Disable Call Variables Logging

Use the following CLI commands to enable or disable the call variables logging. The callVariables contain sensitive user information and this property allows the administrator to decide whether the information must be captured in the logs. By default the property is disabled.

- To enable:  
**utils finesse set\_property webservices logCallVariables true**  
**utils finesse set\_property fippa logCallVariables true**
- To disable:  
**utils finesse set\_property webservices logCallVariables false**

```
utils finesse set_property fippa logCallVariables false
```

## Cross-Origin Resource Sharing (CORS)

CORS support to third-party web server is disabled by default for Cisco Finesse and OpenFire. Use the following CLIs to enable CORS for Cisco Finesse and OpenFire and configure the allowed origin list:



**Note** CORS support to third-party clients is enabled for all origins by default in Cisco Finesse and OpenFire. This corresponds to the **enable\_all** mode below.



**Important** After you make changes to the CORS status or to the allowed origin list, restart Cisco Finesse Tomcat and Notification Services for changes to take effect.

- **utils finesse cors enable\_all**: This command allows all origins to make cross domain requests. It responds and allows CORS preflight requests from any domain to make Finesse API/OpenFire requests.



**Note** This is not a secure configuration and is included only to support backward compatibility.

- **utils finesse cors enable**: This command allows CORS for Cisco Finesse APIs and OpenFire requests for allowed origin list. It responds to browser CORS preflight requests and allows valid domains to make Finesse API/OpenFire requests.



**Note** Use the **utils finesse cors allowed\_origin** CLI to customize the allowed origin list. Any custom headers used in the CORS requests have to be added using **utils finesse cors allowed\_headers** CLI.

- **utils finesse cors disable**: This command restricts CORS for Cisco Finesse APIs and OpenFire requests. It disallows or prevents CORS preflight requests from any external domain to make Finesse API and OpenFire requests.



**Note** If allowed origin list is already present, then the list is preserved and used when CORS is enabled. Note that the CLI changes are reflected only after you clear your cache and close and re-open the browser.

- **utils finesse cors status**: This command displays the CORS status (enable\_all, enabled, or disabled) on the console.

For allowing any other header, the following set of CLI commands are added to enable CORS for both Cisco Finesse and OpenFire and configure the allowed origin list:

- **utils finesse cors allowed\_origin list**: This command lists all the origins in the allowed origin list.
- **utils finesse cors allowed\_origin add**: This command adds origins to the allowed origin list. Origins can be added by using a comma separated string. For example:

```
utils finesse cors allowed_origin add https://origin1.com:[port]
```

```
utils finesse cors allowed_origin add https://origin1.com: [port], https://origin2.com:[port]
```




---

**Note** Wildcard character \* is not a valid origin in the allowed origin list.

---

- **utils finesse cors allowed\_origin delete**: This command deletes origins from the allowed origin list.




---

**Note** Delete will list all the origins in the allowed origin list, of which origins can be deleted by selecting the correct choice. For example:

```
utils finesse cors allowed_origin delete
```

```
1: http://google.com
```

```
2: https://www.cisco.com
```

```
3: https://def.com
```

```
4: https://abc.com:7777
```

```
a: all
```

```
q: quit
```

```
Select the index of origin(s) to be deleted [1-4 or a,q]
```

---

By default the following headers are allowed and exposed:

- **allowed\_headers**: Content-Type,X-Requested-With,accept,Origin, Authorization,Access-Control-Request-Method,Access-Control-Request-Headers,requestId,Range.
- **exposed\_headers**: Access-Control-Allow-Origin,Access-Control-Allow-Credentials,Access-Control-Allow-Methods,Access-Control-Allow-Headers,Access-Control-Max-Age.




---

**Note** These headers cannot be modified. Custom headers can be added or removed using the following CLIs:

---

- **utils finesse cors allowed\_headers list**: This command lists all the allowed headers for CORS. The list is used to validate incoming requests to Finesse.
- **utils finesse cors allowed\_headers add**: This command adds one or more allowed headers for CORS. Multiple headers can be added as a comma separated string. For example:

```
utils finesse cors allowed_headers add header1
```

```
utils finesse cors allowed_headers add header1,header2,header3
```




---

**Note** Wildcard character \* is not supported.

---

- **utils finesse cors allowed\_headers delete:** This command lists the choices for deleting the allowed headers. The choice should be an index as displayed in the list of allowed headers. The list provides the option to delete a single header or all configured custom headers. For example:

**utils finesse cors allowed\_headers delete**

1: header1

2: header2

a: all

q: quit

Select the index of allowed header to be deleted [1-2 or a,q]: 1

- **utils finesse cors exposed\_headers list:** This command lists all the exposed headers for CORS. The list will be used by the browser to validate the accessible headers in the response.
- **utils finesse cors exposed\_headers add:** This command adds one or more exposed headers for CORS. Multiple headers can be added by a comma separated string. For example:

utils finesse cors exposed\_headers add header1

utils finesse cors exposed\_headers add header1,header2,header3




---

**Note** Wildcard character \* is not supported

---

- **utils finesse cors exposed\_headers delete:** This command lists the choices for deleting the exposed headers. The choice should be an index as displayed in the list of allowed headers. The list provides the option to delete a single header or all configured custom headers. For example:

**utils finesse cors exposed\_headers delete**

1: header1

2: header2

a: all

q: quit

Select the index of exposed header to be deleted [1-2 or a,q]: 1

All CLIs are node specific and must be executed on all nodes in the cluster.

## Gadget Source Allowed List

Shindig proxies requests from the Finesse desktop to external servers and this introduces the possibility of server side request forgery (SSRF). To prevent SSRF, you can choose to allow outgoing connections for specified sources to be used in the gadgets by adding URLs to the allowed list. Note that this functionality is disabled by default for Cisco Finesse.

Use the following CLIs to enable or disable Gadget Source allowed list functionality and to configure source(s) in the allowed list:



**Note** From Cisco Finesse Release 12.5(1) ES4 COP onward, all references to **whitelist** in the CLIs are changed to **allowed\_list**.

- **utils finesse gadget\_source\_check enable**: This command enables allowed list for Cisco Finesse.
- **utils finesse gadget\_source\_check disable**: This command disables allowed list for Cisco Finesse.
- **utils finesse gadget\_source\_check status**: This command prints the allowed list status (enabled or disabled) on Cisco Finesse console.
- **utils finesse gadget\_source\_check allowed\_list list**: This command lists all the source(s) in the allowed list.
- **utils finesse gadget\_source\_check allowed\_list add**: This command adds source(s) to the allowed list. For example,
  - **utils finesse gadget\_source\_check allowed\_list add** <https://www.abc.com:8445>.
  - **utils finesse gadget\_source\_check allowed\_list add** <https://www.abc.com:8445>, <http://www.abc.com>.



**Note** Wildcard character \* is not supported.

The allowed list feature does not perform hostname resolutions. The format of the allowed list entry should match the format in which the gadget requests for a resource.

If **utils finesse gadget\_source\_check** is enabled, you must add the CUIC URLs to **utils finesse gadget\_source\_check allowed\_list** for the stock gadgets to load. For example,

- **utils finesse gadget\_source\_check enable**
- **utils finesse gadget\_source\_check allowed\_list add** [https://<CUIC\\_Pub\\_FQDN>](https://<CUIC_Pub_FQDN>)
- **utils finesse gadget\_source\_check allowed\_list add** [https://<CUIC\\_Pub\\_FQDN>:8444](https://<CUIC_Pub_FQDN>:8444)
- **utils finesse gadget\_source\_check allowed\_list add** [https://<CUIC\\_Sub\\_FQDN>](https://<CUIC_Sub_FQDN>)
- **utils finesse gadget\_source\_check allowed\_list add** [https://<CUIC\\_Sub\\_FQDN>:8444](https://<CUIC_Sub_FQDN>:8444)

If you do not add the CUIC URLs, Finesse Desktop fails to load and an appropriate error message is displayed.

- **utils finesse gadget\_source\_check allowed\_list delete**: This command deletes source(s) from the allowed list. For example:
  - **utils finesse gadget\_source\_check allowed\_list delete**
    - 1: <http://origin1:8080>
    - 2: <https://origin2:7777>
    - a: all

- q: quit

Select the index of origin to be deleted [1-2 or a,q]: 1




---

**Note** All CLIs are node-specific and must be executed on all nodes in the cluster.

After any changes are done to gadget source status or to the allowed list, restart Cisco Finesse Tomcat for changes to take effect.

---

## Log Collection Schedule

Use the following CLIs to create, list, and delete automatic desktop log collection schedules for agents and supervisors. This can also be used for debugging purposes.

**utils finesse desktop\_auto\_log\_collection create:** This command creates a schedule that collects the agent's browser logs. You can create up to five log collection schedules for up to 15 agents.

While creating the log schedule, specify the agent IDs, log collection interval, and duration up to when the logs are to be collected.

The log collection interval and the duration have to be between 30 to 900 seconds. The logs that are collected during the schedule are received in a .zip file format. The logs are collected at:  
/opt/cisco/desktop/logs/clientlogs.

### Example:

```
admin:utils finesse desktop_auto_log_collection create

Initializing command line interface...
Checking Cisco Finesse Tomcat status...

Enter agent IDs to continue. (Maximum 15 agents) [Example : 1001001,1001002] : 1001002
Agent IDs entered: 1001002
Enter duration in seconds.(value between 30 and 900) : 240
Duration entered: 240
Enter interval in seconds.(value between 30 and 240) : 60
Interval entered: 60

Successfully scheduled client log collection for the specified agent(s).

Ensure the same is enabled in all the Finesse nodes in the cluster..
```

**utils finesse desktop\_auto\_log\_collection list:** This command lists all active log collection schedules.

### Example:

```
admin:utils finesse desktop_auto_log_collection list

Initializing command line interface...
Checking Cisco Finesse Tomcat status...
These are the live log collection schedules:

Schedule ID:1 Created At: Thu Jun 6 23:23:53 PDT 2019
Duration: 240 seconds
Frequency: 60 seconds
Agent Ids: 1001002
```

**utils finesse desktop\_auto\_log\_collection delete:** This command deletes the active log collection schedules. When this command is executed, all the active log collection schedules are displayed and you are prompted to enter the Schedule ID that you want to delete.

**Example:**

```
admin:utils finesse desktop_auto_log_collection delete

Initializing command line interface...
Checking Cisco Finesse Tomcat status...
These are the live log collection schedules:

Schedule ID:1 Created At: Thu Jun 6 23:23:53 PDT 2019
Duration: 240 seconds
Frequency: 60 seconds
Agent Ids: 1001002
Enter schedule ID to delete (enter 'all' to delete all): 1
Schedule ID entered: 1

Successfully deleted the log collection with schedule id : 1
```

## View Property

Use the following CLIs to view the property values across all property files.

- **utils finesse show\_property fippa property\_name:** To view the specified Finesse IPPA property's value.
- **utils finesse show\_property desktop property\_name:** To view the specified desktop property's value.
- **utils finesse show\_property webservices property\_name:** To view the specified web service property's value.
- **utils finesse show\_property admin securityBannerMessage:** To view the specified banner message for the administrator Sign In page.



---

**Note** The View property CLIs do not support multiple values.

---

## Update Property

Use the following CLIs to update the property values across all property files.

- **utils finesse set\_property desktop property\_name property\_value:** To update an existing property value used by the Finesse desktop service.
- **utils finesse set\_property fippa property\_name property\_value:** To update an existing property value used by the Finesse IPPA service.
- **utils finesse set\_property webservices property\_name property\_value:** To update an existing property value used by the Finesse web service.
- **utils finesse set\_property admin adminSecurityBannerMessage:** To update an existing property value used by the Finesse administrator for the security banner message.

## ConnectedUsersInfo

Use the following CLI command to view the list of users connected to the Cisco Finesse server where the CLI is executed.

### **utils finesse show\_connected\_users summary**

Provides the summary information about the connected users in the Cisco Finesse server where the CLI is executed.

If the above command is executed, it lists the total number of users connected to the Cisco Finesse server where the CLI is executed along with the number of users connected through Cisco Finesse Desktop, Finesse IP Phone, and third-party desktops.

Example is as follows:

```
admin: utils finesse show_connected_users summary
Total Connected Users: 2
Desktop Users: 2
FIPPA Users: 0
Third-party Users: 0
Users connected to Finesse via LAN/WAN: 1
Users connected to Finesse via Proxy: 1
To view the complete list of signed-in users, log in to the Cisco Finesse
Administration Console, and navigate to the Connected Agents tab.
```

### **utils finesse show\_connected\_users detail**

Provides the detailed information about the connected users in the Cisco Finesse server where the CLI is executed.

If the above command is executed, it lists the total number of users connected to the current Cisco Finesse server along with the number of users connected through Cisco Finesse Desktop, Finesse IP Phone, and third-party desktops with the agent details.

Example is as follows:

```
admin: utils finesse show_connected_users detail
Total Connected Users: 3
Desktop Users: 2
FIPPA Users: 1
Third-party Users: 0

Desktop Users List [1001002, 1001003]
FIPPA Users List [1001004]
```

## Cisco Unified Intelligence Center Commands

### show cuic component-status

This command shows the status of the Unified Intelligence Center components. The *Component name* parameter is mandatory.

#### **Command syntax**

**show cuic component-status** *Component name*

**Component name**

- **CuicStatus**—Shows status of Unified Intelligence Center web engine and the DB replication
- **DBRepStatus**—Shows status of database replication on this node
- **DBStatus**—Shows the database status
- **SchedulerStatus**—Shows status of the report scheduler

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

### Example

```
admin:show cuic component-status EmailStatus
```

## show cuic properties

This command shows information about Cisco Unified Intelligence Center properties.

### Command syntax

**show cuic properties [options]**

### Options

- **host-to-ip**—Current host-to-IP translation for the Cisco Unified Intelligence Center databases in the cluster
- **purge-retention**—Number of days data is retained in the Cisco Unified Intelligence Center database before it is purged
- **purge-time**—Time of day and the regular interval in minutes when the Cisco Unified Intelligence Center database is purged
- **session-timeout**—Session timeout for the Cisco Unified Intelligence Center web applications
- **show cuic properties dashboard-customwidget-enabled**—Displays the value *on* or *off* depending on the current value set for the **dashboard-customwidget-enabled** property. This value can be set using the CLI **set cuic properties dashboard-customwidget-enabled**.

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:show cuic properties purge-retention
purge_retention
=====
1
```

## show cuic tech

### Command syntax

This command provides technical details on the Cisco Unified Intelligence Center setup, such as database tables, triggers, procedures and so on.

### show cuic tech procedures

This command displays the stored procedures in use for the database.

### show cuic tech systables

This command displays the names of all the tables in the Unified Intelligence Center database.

### show cuic tech dbschema

This command displays the database schema in a CSV file. This displays output to a `.csv` file.

### show cuic tech table table\_name

The command shows the contents of a table on the Unified Intelligence Center database. This displays output to a `.out` file.

### show cuic tech triggers

This command displays Unified Intelligence Center table names and the triggers associated with those tables.

### show cuic tech table cuicreport

This command redirects the contents of the specified database table into a file.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:show cuic tech dbschema
-----show cuic tech dbschema-----
Database schema
Output is in /cm/trace/dbi/dbSchema1331705967878.csv
Use "file view activelog/cm/trace/dbi/dbSchema1331705867878.csv" command to see
output
```

```
admin:show cuic tech systables
-----Show cuic tech system tables-----
SYSTEM TABLES
tablename
=====
GL_COLLATE
GL_CTYPE
VERSION
cdr_deltab_000657
cdr_deltab_000658
cdr_deltab_000659
cdr_deltab_000660
cdr_deltab_000661
cdr_deltab_000662
```

```

cdr_deltab_000663
cdr_deltab_000664
cdr_deltab_000665
cdr_deltab_000666
cdr_deltab_000667
cdr_deltab_000668
cdr_deltab_000669
cdr_deltab_000670
cdr_deltab_000671
cdr_deltab_000672
cdr_deltab_000673
cdr_deltab_000674

```

```

admin:show cuic tech table ?
Syntax:
  show cuic tech table table_name
  table_name mandatory table_name

```

```

admin:show cuic tech triggers
-----show cuic tech triggers-----

Triggers
tablename trigger
=====

cuiccategory          tr_del_category
cuiccategory          tr_ins_category
cuiccategory          tr_upd_category
cuiccollection        tr_del_collection
cuiccollection        tr_ins_collection
cuiccollection        tr_upd_collection
cuicdashboard         tr_del_dashboard
cuicdashboard         tr_ins_dashboard
cuicdashboard         tr_upd_dashboard
cuicdatasource        tr_del_datasource
cuicdatasource        tr_ins_datasource
cuicdatasource        tr_upd_datasource
cuicreport            tr_del_report
cuicreport            tr_ins_report
cuicreport            tr_upd_report
cuicreportdefinition tr_del_reportdefinition
cuicreportdefinition tr_ins_reportdefinition
cuicreportdefinition tr_upd_reportdefinition
cuicuser              tr_upd_userdefaultgroup
cuicvaluelist         tr_del_valuelist
cuicvaluelist         tr_ins_valuelist

```

## show cuic trace

This command shows the log level and trace masks of the given subsystem. If the logging level is set to DEBUG, the trace mask is displayed. If the logging level is set to INFO, the trace masks are not displayed.

The command is case sensitive and can only be run on the Controller node.

To set traces on the member nodes, use the Operations Console command **Device Management > Log And Trace Settings**.

### Command syntax

**show cuic trace cuicserver [options]****Options**

This consists of the subsystems of Unified Intelligence Center. The various subsystems available are:

- CUIC
- Infrastructure
- CUIC\_MODEL\_OBJECTS
- CUIC\_DATA\_PROCESSING
- CUIC\_SECURITY
- CUIC\_DISPLAY
- CUIC\_MIGRATION
- CUIC\_USER\_HISTORY
- CUIC\_JSP
- CUIC\_STATISTICS

**Requirements**

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: No

**Example**

```
admin:show cuic trace cuicserver Infrastructure
Log levels are not set - assumed to be Basic
Since log level is basic trace masks are not in effect for Infrastructure
```

## set cuic properties

Use these commands to set values for the Cisco Unified Intelligence Center database and session timeout.

**Command syntax****set cuic properties host-to-ip****Parameter**

**host**—Enter the value for the host DNS name for the server, as displayed on the Data Sources interface

**ip\_address**—Enter the IP address of the server for the historical or real-time database

**Command Syntax****set cuic properties session-timeout****Parameter**

**#numberofSeconds**—This command sets the session timeout for the Cisco Unified Intelligence Center Reporting web application. The default is 14,400 seconds (4 hours).

### Example

```
admin:set cuic properties session-timeout 1900
Value has been successfully set
```

### Command Syntax

**set cuic properties dashboard-customwidget-enabled**

#### Parameter

**on|off**—This command sets the dashboard-customwidget-enabled property to *on* or *off*. By setting the value to *on* or *off*, you can enable or disable the Custom Widget feature in Dashboards respectively. By default, the value is set to *off*.



---

**Note** Enabling the custom widget configuration can lead to injection vulnerabilities.

---

### Command Syntax

**set cuic properties report-query-timeout**

#### Parameter

**number of seconds**—This command sets the report query execution timeout value.

Range: 180-3600 seconds

### Example

```
set cuic properties report-query-timeout 250
WARNING : Do not change it to a higher value, as it may cause performance issue.

cuic.query.timeout has been updated
This command requires a restart of Intelligence Center service.
Ensure that this command is run on all nodes in the cluster.
```



---

**Note** By default, the report query execution timeout value is three minutes (180 seconds).

---

## unset cuic properties

Use this command to unset the translation of host-to-IP hostname.

### Command syntax

**unset cuic properties host-to-ip [hostname]**

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:unset cuic properties host-to-ip ccxbox1
```

## set cuic syslog

### Command syntax

```
set cuic syslog [disable|enable]
```

### Options

- **disable**—To disable Cisco Unified Intelligence Center application remote syslogs
- **enable**—To enable Cisco Unified Intelligence Center application remote syslogs

### Requirements

Level privilege: 0

Command privilege level: 0

Allowed during upgrade: Yes

### Example

```
admin:set cuic syslog enable
```

## set cuic trace

Use these commands to set or change the log levels and trace setting for the subsystems of the cuicserver process to basic or detailed.

### Command Syntax

```
set cuic trace basic cuicserver [subsystem] none
```

```
set cuic trace infrastructure cuicserver [subsystem] [TRACE_FLAGS | none]
```

```
set cuic trace subsystem cuicserver [subsystem] [trace_mask1 trace_mask2]
```

For cuicserver, the valid subsystems are:

- Infrastructure
- CUIC
- CUIC\_MODEL\_OBJECTS
- CUIC\_DATA\_PROCESSING
- CUIC\_SECURITY
- CUIC\_DISPLAY
- CUIC\_MIGRATION
- CUIC\_USER\_HISTORY
- CUIC\_JSP

- CUIC\_STATISTICS

Detailed log levels are set by enabling trace flags, which allows debug statements to appear in the logs. You can control debug tracing for specific functionalities (specified in the TRACE flag name), within specific subsystem components.

*basic* indicates to set a basic level of tracing. With this setting, messages and warnings are displayed.

*detailed* indicates to set a debug level and allows you to turn on tracing for specific components.

*subsystem* indicates the subsystem you are setting and displays the list of all valid subsystems.

*none* indicates that you do not want to set a flag for tracing.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:set cuic trace basic cuicserver CUIC_SECURITY
Log level updated successfully. Trace masks are cleared
```

## utils cuic purge

### Command Syntax

#### utils cuic purge

This command runs a manual purge of the cuic database tables. You might do this if you receive an alert that the database is nearing capacity and you do not want to wait for the daily automatic purge.

The tables purged are:

- CuicDataSetInfo
- CuicDataSet
- CuicReportDefinitionFilter
- CuicReportDefinitionFilterField
- CuicReportDefinitionFilterParameter
- CuicCollection
- CuicCollectionValue

This command prompts for the password of the administration user. When the password is confirmed, the purge runs immediately.

### Options

None

### Requirements

Level privilege—1

Command privilege level—1

Allowed during upgrade—Yes

### Example

```
admin:utils cuic purge
Executed Purge Sucessfully
```

## utils cuic user make-admin [user-name]

In Single Sign-On (SSO) mode the **Application User** created during installation will not be able to access the Cisco Unified Intelligence Center application with administrator privileges. To enable the Cisco Unified CCX Administrator to have administrator privileges in Cisco Unified Intelligence Center as well, assign reporting capability first and then run this command to make this user the administrator.

After the Unified Intelligence Center user is made an Administrator using this CLI, this user loses Unified Intelligence Center Administrator capabilities after the upgrade.

Thus, this user would not be able to view all the reports that were available to view before the upgrade. The user would have access to reports based on the assigned role (Agent or Supervisor) and not as an Administrator. You must execute this CLI after the upgrade such that the user is made the Unified Intelligence Center Administrator.




---

**Note** The domain must always be, **UCCX**.

---

In an HA deployment, the Cisco Unified Intelligence Center Reporting Service must be restarted on both the nodes.

### Command Syntax

**utils cuic user make-admin [user-name]**

Tip: User name should be the complete user name, including the prefix, as listed in Cisco Unified Intelligence Center User List page.

### Options

None

### Example

```
admin:utils cuic user make-admin UCCX\ABCD
Command executed successfully.
```

## utils cuic cluster show

This command shows the current cluster mode enabled on this node and the other member details.



---

**Note** The member details are available only in the TCP/IP mode. The member details displayed are of the configured members and does not represent the cluster in real-time.

---

**Command Syntax**  
**utils cuic cluster show**

## utils cuic cluster mode

This command is used to switch the CUIC cluster join configuration from Multicast to TCP/IP and vice versa.



---

**Note** After changing the cluster mode in all the nodes, restart “Cisco Unified Intelligence Center Reporting Service” in all the nodes starting from the publisher sequentially.

---

**Command Syntax**  
**utils cuic cluster mode**

## utils cuic cluster refresh

This command refreshes the cluster node information only when executed in the TCP/IP mode and must be executed when there is an addition or deletion of nodes to the CUIC cluster.

**Command Syntax**  
**utils cuic cluster refresh**

## utils cuic cors



---

**Important** After you make changes to the CORS status, allowed origins list, exposed header, or allowed header, restart Cisco Intelligence Center Reporting Service for changes to take effect. All CLIs are node-specific and must be executed on all nodes in the cluster.

---

**Command Syntax**  
**utils cuic cors enable**

This command enables Cross Origin Resource Sharing (CORS) support in Unified Intelligence Center.

**Command Syntax**  
**utils cuic cors disable**

This command disables CORS support in Unified Intelligence Center.

**Command Syntax**  
**utils cuic cors status**

This command displays the current CORS status in Unified Intelligence Center.

**Command Syntax**  
**utils cuic cors allowed\_origin list**

This command displays the list of allowed URLs that can make CORS requests to Unified Intelligence Center.

**Command Syntax**  
**utils cuic cors allowed\_origin add <URL1,URL2,URL3>**

**Parameter:** Comma-separated list of URLs (without spaces) that has to be added to the allowed origins list.

The URL format: *http[s]://<hostname>[:port]*

This command adds the given set of comma-separated URLs to the allowed origins list.

**Command Syntax**  
**utils cuic cors allowed\_origin delete**

This command prompts for a choice to delete a particular allowed origin URL or all the allowed origin URLs.

```
utils cuic cors allowed_origin delete
```

```
1. http://google.com
```

```
2. http://www.cisco.com
```

```
a: all
```

```
q: quit
```

```
Select the index of origin to be deleted [1-2 or a,q]
```

**Command Syntax**  
**utils cuic cors allowed\_headers list**

This command lists all the configured allowed headers for CORS. This list is used to validate incoming requests to CUIC.

**Command Syntax**  
**utils cuic cors allowed\_headers add <header1,header2,header3>**

**Parameter:** Comma-separated list of headers (without spaces) that have to be added to the allowed headers list.

This command adds one or multiple allowed headers for CORS. You can add multiple headers using a comma-separated string.

**Command Syntax**  
**utils cuic cors allowed\_headers delete**

This command prompts for a choice to delete a particular custom allowed header or all the custom allowed headers.

```
utils cuic cors allowed_headers delete
```

```

1: header1
2: header2
a: all
q: quit
Select the index of allowed header to be deleted [1-2 or a, q]: 1

```

**Command Syntax****utils cuic cors exposed\_headers list**

This command lists the response headers available for a client.

**Command Syntax****utils cuic cors exposed\_headers add <header1,header2,header3>**

**Parameter:** Comma-separated list of headers (without spaces) that have to be added to the exposed headers list.

This command adds one or multiple exposed headers for CORS. You can add multiple headers using a comma-separated string.

**Command Syntax****utils cuic cors exposed\_headers delete**

This command prompts for a choice to delete a particular custom exposed header or all the custom exposed headers.

```

utils cuic cors exposed_headers delete
1: header1
2: header2
a: all
q: quit
Select the index of exposed header to be deleted [1-2 or a, q]: 1

```

## utils cuic logging list

This command lists the module and the logging level for the specified module. If a module name is specified, the logging level is displayed only for that module.

**Command Syntax****utils cuic logging list [module-name]****Options**

[module-name] - optional

Possible module names for which, the log levels can be printed are as follows:

```

REPORT, REPORTENGINE, REPORTDEFINITION, SCHEDULER, DASHBOARD, AUTHORIZATION, AUTHENTICATION,
VALUELISTCOLLECTION, SECURITY, CUICUI, DATASOURCE, CUICCONFIG

```

## utils cuic logging config set

This command sets the value for log file configuration.

### Command Syntax

**utils cuic logging config set [config-name] [config-value]**

### Options

- [config-name] - mandatory log file configuration name

Valid configuration names are `max-file-size`, `max-file-count`, `syslog-primary-host` and `syslog-secondary-host`. The maximum limit of `max-file-size` and `max-file-count` is 50 MB and 50 respectively.

Only one [config-name] option can be set at a time.

- [config-value] - mandatory log file configuration value. For `syslog-primary-host` and `syslog-secondary-host` configuration names, the configuration values are the primary syslog server hostname and the secondary syslog server hostname, respectively.

## utils cuic logging update

This command updates the log level for the given module name.

### Command Syntax

**utils cuic logging update [module-name] [log-level]**

### Options

- [module-name] - mandatory

Possible module names are as follows:

`REPORT`, `REPORTENGINE`, `REPORTDEFINITION`, `SCHEDULER`, `DASHBOARD`, `AUTHORIZATION`, `AUTHENTICATION`, `VALUELISTCOLLECTION`, `SECURITY`, `CUICUI`, `DATASOURCE`, `CUICCONFIG`

- [log-level] - mandatory

New log level for the module. Valid log-level values are as follows:

`ERROR`, `WARN`, `INFO`, `DEBUG`

## utils cuic logging config show

This command prints the current log configuration for the given configuration name.

### Command Syntax

**utils cuic logging config show [config-name]**

### Options

[config-name] - mandatory log file configuration name

Valid configuration names are `max-file-size`, `max-file-count`, `syslog-primary-host` and `syslog-secondary-host`.

Only one [config-name] option can be printed at a time.

## utils cuic logging reset

This command resets any modifications done to the logging configuration to the default value. For all the modules, the default value is `Info`.

### Command Syntax

**utils cuic logging reset**

### Options

No parameters

## utils cuic session list

This command lists the current Cisco Unified Intelligence Center sessions.

### Command Syntax

**utils cuic session list**

### Options

No parameters

### Example

```
admin:utils cuic session list
Command executed successfully
Session ID details saved to file.
To view file, type "file view activelog cuic-session.out"
To SFTP file, type "file get activelog cuic-session.out"
```

## utils cuic session delete

This command deletes the Cisco Unified Intelligence Center sessions based on the session IDs that you pass to this command.

### Command Syntax

**utils cuic session delete <sessions ID1,sessions ID2> utils cuic session delete <username 1,username 2>**

### Parameter

*Sessions IDs* are IDs of the current Cisco Unified Intelligence Center sessions.

To get the current session IDs, you must first run the `utils cuic session list` command and then run `file view activelog cuic-session.out` command.

### Example

```
admin:utils cuic session delete a5fB22f89658e97D089Ab51Ee859b2c1
Session Deleted successfully
```

# Cloud Connect

## utils cloudconnect list

Run this command to list all the services in your deployment.

### Command Syntax

**utils cloudconnect list**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect list
CONTAINER_ID  IMAGE                               REPO TAGS                STATUS
CREATED      NAMES
container_id1 image_name1:image_version1 1.0, Build582,latest Running Up x 2
days ago container_name1
container_id2 image_name2:image_version2 1.0, Build580,latest Exited x ago 2
days ago container_name2
```

## utils cloudconnect details

Run this command to view details of the specified container in JSON format.

### Command Syntax

**utils cloudconnect details** *container\_name*

### Arguments

**container\_name** - Name of the container.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

## utils cloudconnect start

Run this command to start the specified container.

### Command Syntax

**utils cloudconnect start** *container\_name*

### Arguments

**container\_name** - Name of the container that has to be started.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect start dataconn
Starting the container dataconn ...
Container dataconn is started successfully.
```

## utils cloudconnect stop

Run this command to stop the specified container.

### Command Syntax

**utils cloudconnect stop** *container\_name*

### Arguments

**container\_name** - Name of the container that has to be stopped.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect stop dataconn
Stopping the container dataconn ...
Container dataconn is stopped successfully.
```

## utils cloudconnect heap dump

Run this command to generate the heap dump for the specified JVM-based container.

### Command Syntax

**utils cloudconnect heap\_dump** *container\_name*

### Arguments

**container\_name** - Name of the JVM-based container.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect heap_dump cherrypoint
heap_dump file successfully created

The final output will be in
file:hybrid/log/cherrypoint/cherrypoint_23_Nov_2019_11_47_30.hprof

please use "file get activelog
hybrid/log/cherrypoint/cherrypoint_23_Nov_2019_11_47_30.hprof" command to download
it
```

## utils cloudconnect thread dump

Run this command to generate the thread dump for the specified JVM-based container.

### Command Syntax

**utils cloudconnect thread\_dump** *container\_name*

### Arguments

**container\_name** - Name of the JVM-based container.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect thread_dump dataconn
thread_dump file successfully created

The final output will be in
file:hybrid/log/dataconn/dataconr_treadDump_23_Nov_2019_11_33_08.txt

please use "file get activelog
hybrid/log/dataconn/dataconr_treadDump_23_Nov_2019_11_33_08.txt" command to
download it
```

## show cloudconnect dataconn config

Run this command to view configuration details of the Cloud Connect data connector in JSON format.

### Command Syntax

**show cloudconnect dataconn config**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:show cloudconnect dataconn config

Getting Configuration from CloudConnect Data Connector ...
Configuration accessed successfully.

{
  "DataConnConfig": {
    "connCfg": {
      "proxyEnabled": true,
      "proxyHost": "proxy.mycompany.com",
      "proxyPort": 8080
    },
    "connData": {
      "apiKey": "z9y8x7w6v5u4",
      "connUri": "https://analyzer.cisco.com/mytenant",
      "tenantId": "1234"
    },
    "lastUpdatedTimestamp": 1560514531713
  }
}
```

## show cloudconnect dataconn status

Run this command to view the status of Cloud Connect Data Connector in JSON format.

### Command Syntax

**show cloudconnect dataconn status**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect dataconn show-status

Getting status of CloudConnect Data Connector ...
Status accessed successfully.

{
  "cluseter": {
    "nodes": [
      {
        "address": "f2-uccx1.cisco.com",
        "status": "IN_SERVICE",
        "statusSince": 1560503785232
        "statusUrl": https://f2-uccx1.cisco.com:8445/dataconn/status"
      }
    ]
  }
}
```

```

},
"description": "status of this data connector node",
"details": {
  "components": [
    {
      "details": {
        "metric": {
          "failureCount": 0,
          "lastFailureTime": -1,
          "lastSuccessTime": -1,
          "successCount": 0,
          "totalOperations": 0
        }
      },
      "name": "ApiGateway",
      "status": "IN_SERVICE",
      "statusSince": 1560514531944
    },
    {
      "details": {
        "isConfigWriter": true
      },
      "name": "ConfigurationService",
      "status": "IN_SERVICE",
      "statusSince": 1560503779296
    }
  ],
  ....
]
}

```

## utils cloudconnect reinit services

Run this command on all nodes in the cluster to reconfigure the Cloud Connect services when Unified CCX IP Address/Hostname is changed.

### Command Syntax

```
utils cloudconnect reinit services
```

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```

admin:utils cloudconnect reinit services
Do you want to continue [y/n]?
y
Command executed successfully.

```

Running this CLI command will restart all the cloud connect services.




---

**Note** This CLI command will restart all the cloud connect services.

---

## set cloudconnect log\_level

Run this command to set log level for the specified container.

### Command Syntax

```
set cloudconnect log_level container_name log_level
```

### Arguments

**container\_name** - Name of the container.

**log\_level** - The log level for the specified container. Log level can be set to trace, debug, info, error, or warn.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:set cloudconnect log_level dataconn error
The log level will be changed to ERROR for the container dataconn within 30
seconds.
```

## set cloudconnect cherrypoint config

Run this command to update the Cloud Connect Cherry point connector configuration details.

**Note:** When you execute this command, you are prompted to enter new configuration details. The current configuration details are displayed within [ ]. You can enter the new configuration details or retain the existing configuration.

**Note:** User input for Web URL Prefix must be a valid http or https url. The default value is https://nps.bz . For users upgrading Unified CCX, if the Web URL Prefix doesnt have a valid http or https url prefix, they must reconfigure Cloud Connect Cherry point to provide a valid url for Web URL Prefix.

**Note:**

### Command Syntax

```
set cloudconnect cherrypoint config
```

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:set cloudconnect cherrypoint config
Fetching existing configuration...
Enter the Config details to be saved:
Desktop User (with Read Only Privileges): readonlyusername
Desktop User API Key []: apikey-ABCD1234EFGH5789!dummy
```

```
System User (with Read and Write Privileges): reawriteusername
System User API Key []: apikey-JKMLN012345OPQRST6789!dummy
Voice PIN Prefix: 1234
SIP URI Domain: cloudcherry.sip.twilio.com
Web URL Prefix: https://nps.bz
Deployment ID: CCX
Proxy Enabled(true/false) [false]: true
Proxy Host: proxyhost.domain.com
Proxy Port [0]: 5678
The config details updated successfully.
```

## show cloudconnect cherrypoint config

Run this command to display the Cloud Connect Cherry point connector configuration details.

### Command Syntax

**show cloudconnect cherrypoint config**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:show cloudconnect cherrypoint config
Fetching existing configuration...
Desktop User (with Read Only Privileges): readonlyusername
Desktop User API Key: *****
System User (with Read and Write Privileges): reawriteusername
System User API Key: *****
Voice PIN Prefix: 1234
SIP URI Domain: cloudcherry.sip.twilio.com
Web URL Prefix: cloudsurveyweb
Deployment ID: CCX
Proxy Enabled(true/false): true
Proxy Host: proxyhost.domain.com
Proxy Port: 5678
Last Updated Timestamp: 1577480741820
```

## utils cloudconnect cherrypoint test-connectivity

Run this command to check connectivity to Cloud Cherry server.

### Command Syntax

**utils cloudconnect cherrypoint test-connectivity**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: Yes

### Example

```
admin:utils cloudconnect cherrypoint test-connectivity
Cloudcherry Connectivity Test URL [https://api.getcloudcherry.com/api/]:
https://api.getcloudcherry.com/api/
Proxy Host: proxy.esl.cisco.com
Proxy Port: 8080
Connectivity check to https://api.getcloudcherry.com/api/ was successful.
```

## Specific License Reservation Commands

### license smart reservation enable

Use this command to enable the license reservation feature in Smart Licensing. Before running this command, ensure the following:

- Smart Licensing must be enabled.
- Smart Account must be enabled for reservation.
- Smart Licensing must be in unregistered state.

#### Command syntax

**license smart reservation enable**

#### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

#### Example

```
admin:license smart reservation enable
License reservation is enabled successfully.
Command successful.
```

**Result:** Smart Licensing is enabled and you can continue with the license reservation process.



---

**Note** With license reservation enabled, **Smart License Management** page, option to **Register**, update **Transport Settings** and other allied operations in Unified CCX Administration are not available for this product instance.

---

### license smart reservation request

Use this command to initiate the license reservation request process. Before running this command, ensure the following:

- Enable command has been executed.

**Command syntax****license smart reservation request****Requirements**

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

**Example**

```
admin:license smart reservation request
License reservation requested successfully.
Reservation Request Code is: CB-ZUCCX:059d8a992467-AAwxxawE5-73
Use this code in Cisco SSM to obtain the Authorization Code.

Reserve the following License Names in Cisco SSM to use the associated features.

SL NO. LICENSE NAME                                MANDATORY
-----
1      CCX Flex Standard Seat 12.5                 Yes, if standard agent seats are
required.
2      CCX Flex Premium Seat 12.5                 Yes, if premium agent seats are required.
3      CCX Inbound Port 12.5-Flex 12.5           Yes, if Advanced IVR ports are required.
4      CCX Outbound Port 12.5-Flex               Yes, if Outbound IVR ports are required.

Command successful.
```

**Result:** Reservation Request Code is generated. Use the code in Cisco SSM to generate the Authorization Code.

## license smart reservation install

Use this command to install or update the license reservation. Before running this command, ensure the following:

- Request command has been executed.
- Authorization Code is obtained from Cisco SSM.



**Note** If you have already installed an Authorization Code and want to modify the reserved licenses, you must generate a new Authorization Code and run this command again.

**Command syntax****license smart reservation install "<authorization code>"**

The <authorization code> has to be obtained from Cisco SSM. Ensure to put the Authorization Code in double quotes.



**Note** Authorization Code is also available in a file. You cannot provide file name as the parameter. You must copy the entire content of the file and use it as Authorization Code.

After successfully installing the license reservation, restart the system.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example 1: Install License Reservation for the First Time

```
admin:license smart reservation install
"<specificPLR><authorizationCode><flag>A</flag><version>C</version>
<piid>4e0f17d0-4d83-4a74-8009-6e1a909f505a</piid><timestamp>1583227289333</timestamp>
<entitlements><entitlement><tag>regid.2019-06.com.cisco.CCX_FLEX_PREMIUM,
12.5_0ecc396f-9a80-4b7b-a4c1-35011a2bc68f</tag><count>1</count><startDate>2020-Feb-26
UTC</startDate>
<endDate>2021-Feb-20 UTC</endDate><licenseType>TERM</licenseType><displayName>
CCX Flex Premium Seat 12.5</displayName><tagDescription>CCX Flex Premium
License</tagDescription>
<subscriptionID></subscriptionID></entitlement></entitlements></authorizationCode>
<signature>MEYCIQDNodtb0VfzvYJfLenhGMCeprSELdAMXaCpsqW8e/mBBAIhAIYXW+80inS9e+
9Jli0MSFzWbuJ93YnQM/yoStcDwzst</signature><udi>P:UCCX,S:1f2b5461b8ed</udi></specificPLR>"
```

This operation has to be performed in maintenance window.  
Continue (y/n)?y

License reservation is being installed. Please wait ...  
License reservation is installed successfully. Reboot the system for the changes to take effect.  
Command successful.

### Example 2: Update License Reservation

```
admin:license smart reservation install
"<specificPLR><authorizationCode><flag>A</flag><version>C</version>
<piid>4e0f17d0-4d83-4a74-8009-6e1a909f505a</piid><timestamp>1583227289333</timestamp>
<entitlements><entitlement><tag>regid.2019-06.com.cisco.CCX_FLEX_PREMIUM,
12.5_0ecc396f-9a80-4b7b-a4c1-35011a2bc68f</tag><count>1</count><startDate>2020-Feb-26
UTC</startDate>
<endDate>2021-Feb-20 UTC</endDate><licenseType>TERM</licenseType><displayName>
CCX Flex Premium Seat 12.5</displayName><tagDescription>CCX Flex Premium
License</tagDescription>
<subscriptionID></subscriptionID></entitlement></entitlements></authorizationCode>
<signature>MEYCIQDNodtb0VfzvYJfLenhGMCeprSELdAMXaCpsqW8e/mBBAIhAIYXW+80inS9e+
9Jli0MSFzWbuJ93YnQM/yoStcDwzst</signature><udi>P:UCCX,S:1f2b5461b8ed</udi></specificPLR>"
```

This operation has to be performed in maintenance window.  
Continue (y/n)?y

License reservation is being installed. Please wait ...  
License reservation is installed successfully. Reboot the system for the changes to take effect.

```
Confirmation Code is: 125ffe1b
Use this code in Cisco SSM to the complete license reservation update process.
Command successful.
```

**Result:** Unified CCX gets automatically refreshed with the reserved licenses.




---

**Caution** If the installed licenses are incorrect, all the critical services of the contact center will go down. Be cautious while reserving licenses and ensure that the appropriate licenses are reserved.

---

## license smart reservation return

Use this command to return the license reservation if you have already installed the Authorization Code.

### Command syntax

**license smart reservation return**

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:license smart reservation return

This command will return the license reservation and this product instance will
transition back to the unregistered state.
Continue (y/n)?y

License reservation is being returned. Please wait ...
License reservation is returned successfully.
Reservation Return Code is:
Cb3AEN-61XgQW-YGBXWm-FgS16L-LFRQ7n-aHU9Y1-cJDQGL-DtZGhJ-2D3
Use this code in Cisco SSM to complete the reservation return process.
Command successful.
```

**Result:** Reservation Return Code is generated and the product instance will transition back to the unregistered state. Enter the code in Cisco SSM to return the reserved licenses to the virtual pool. The product instance will enter evaluation or evaluation expired mode.




---

**Note** The best practice is to restart the system after returning the reservation.

If the evaluation period has expired, this product instance will enter into enforcement mode. For more information on enforcement mode, see *Cisco Unified Contact Center Express Features Guide* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-express/products-feature-guides-list.html>.

---

## license smart reservation return-authorization

Use this command to return the license reservation if you have not yet installed the Authorization Code.



**Note** This command is primarily for executing before installing the Authorization Code. However, you can also execute this command after installing the Authorization Code.

### Command syntax

**license smart reservation return-authorization "<authorization code>"**

The <authorization code> that has to be obtained from Cisco SSM. Ensure to put the Authorization Code in double quotes.

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:license smart reservation return-authorization
"<specificPLR><authorizationCode><flag>A</flag><version>C</version>
<pid>4e0f17d0-4d83-4a74-8009-6e1a909f505a</pid><timestamp>1583227289333</timestamp>
<entitlements><entitlement><tag>regid.2019-06.com.cisco.CCX_FLEX_PREMIUM,
12.5_0ecc396f-9a80-4b7b-a4c1-35011a2bc68f</tag><count>1</count><startDate>2020-Feb-26
UTC</startDate>
<endDate>2021-Feb-20 UTC</endDate><licenseType>TERM</licenseType><displayName>
CCX Flex Premium Seat 12.5</displayName><tagDescription>CCX Flex Premium
License</tagDescription>
<subscriptionID></subscriptionID></entitlement></entitlements></authorizationCode>
<signature>MEYCIQDNodtb0VfzvyJfLenhGMCeprSELdAMXaCpsqW8e/mBBAIhAIYXW+80inS9e+
9Jli0MSFzWbuJ93YnQM/yoSTcDwzst</signature><udi>P:UCCX,S:1f2b5461b8ed</udi></specificPLR>"

License reservation is being returned. Please wait ...
License reservation is returned successfully.
Reservation Return Code is: gfgh677hn
Use this code in Cisco SSM to complete the reservation return process.
Command successful.
```

**Result:** Reservation Return Code is generated and the product instance will transition back to the unregistered state. Enter the code in Cisco SSM to return the reserved licenses to the virtual pool. The product instance will enter evaluation or evaluation expired mode.



**Note** The best practice is to restart the system after returning the reservation.

If the evaluation period has expired, this product instance will enter into enforcement mode. For more information on enforcement mode, see *Cisco Unified Contact Center Express Features Guide* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-express/products-feature-guides-list.html>.

## license smart reservation cancel

Use this command to cancel the license reservation process for Smart Licensing.

### Prerequisites:

- Request command has been executed.
- Authorization Code has not been installed.

### Command syntax

#### license smart reservation cancel

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:license smart reservation cancel
License reservation request is canceled successfully.
Command successful.
```

**Result:** Reservation Request Code that was generated will be made invalid on the product instance.



---

**Caution** After you run the cancel command, do not use the earlier generated Reservation Request Code to generate Authorization Code.

---

## license smart reservation disable

Use this command to disable the license reservation feature in Smart Licensing. Before disabling the license reservation, you must return the reserved licenses to the virtual pool, so that you can use the licenses without reservation.



---

**Note** Before running this command, if you have requested or installed license reservation, cancel or return the license reservation respectively.

---

### Command syntax

#### license smart reservation disable

### Requirements

Level privilege: 1

Command privilege level: 1

Allowed during upgrade: No

### Example

```
admin:license smart reservation disable
License reservation is disabled successfully.
Command successful.
```

**Result:** License Reservation is disabled.



---

**Note** After disabling the license reservation, you have the option to register the product instance by using **Smart Licensing** in Unified CCX Administration.

---

