



Callback_Disconnect_Caller

The `Callback_Disconnect_Caller` element is responsible for disconnecting the caller’s leg of the call. The IP leg of the call for Unified CVP is preserved to hold the caller’s *place in line* until the callback is made back to the caller.

- [Settings, on page 1](#)
- [Element Data, on page 1](#)
- [Exit States, on page 2](#)
- [Folder and Class Information, on page 2](#)
- [Events, on page 2](#)

Settings

Name (Label)	Type	Req'd	Single Setting Value	Substitution Allowed	Default	Notes
Probe Type	string enum	Yes	Yes	No	Disconnect Caller	The probe type can be one of: Disconnect Caller Intercept Caller Hangup No Intercept Caller Hangup

Element Data

Name	Type	Notes
Result	string	The call outcome from the attempt to disconnect the caller’s leg.

Exit States

Name	Notes
done	The element execution is complete and the value was successfully retrieved.
error	The element failed to retrieve the value.

Folder and Class Information

Studio Element Folder Name	Class Name
Cisco > Callback	com.cisco.cvp.vxml.custelem.callback.DisconnectCaller

Events

Name (Label)	Notes
Event Type	You can select Java Exception , VXML Event , or Hotlink as event handler for this element.