



# Preparing to Install

---

This chapter explains the following:

- [For Your Safety, on page 1](#)
- [Environmental and Power Specifications, on page 1](#)
- [Unpacking and Preparation, on page 1](#)
- [Locating Serial Numbers, on page 2](#)

## For Your Safety

You should be familiar with the safety procedures involved with electrical circuitry and standard practices for installing communications equipment. For CE1300 Regulatory Compliance and Safety Information, see [Regulatory Compliance and Safety Information](#).

## Environmental and Power Specifications

To view environmental and power specifications for the appliance server, see [Cisco UCS C220 M6 SFF Rack Server](#).

## Unpacking and Preparation

For detailed information about how to install the appliance, see [Cisco UCS C220 M6S Server Installation and Service Guide](#).

Information in that guide includes:

- Installation guidelines
- Rack requirements
- Equipment requirements
- Slide rail adjustment range

# Locating Serial Numbers

The Cisco Expressway appliance displays two serial numbers:

- UCS serial number in format *WZPxxxxxxx*. Displayed on the hardware pullout tab, and in the Cisco Integrated Management Controller ([Connecting Using CIMC Serial Over LAN](#)) web interface.
- Software serial number in format *52E5NNNN*. Displayed in the Cisco Expressway web interface or through SSH.