



Telephony Design and Dial Plan Overview

- [Cisco HCS Architecture Primer, page 1](#)
- [Numbering Plan Design, page 5](#)
- [Cisco HCS Numbering Considerations, page 8](#)
- [Numbering at the Cisco Unified Communications Manager Interface, page 20](#)
- [Cisco PGW Model and Call Routing, page 20](#)
- [Cisco PGW Dial Plan Design, page 21](#)
- [Cisco PGW Provisioning, page 23](#)
- [Dial Plan Enhancements for vPGW, page 24](#)
- [Cisco vPGW Softswitch Dial Plans, page 27](#)
- [Bulk Load Dial Plan and Platform Base Data Settings, page 27](#)
- [Bulk Load HCS Dial Plan Models, page 28](#)
- [Cisco IOS Model and Call Routing, page 28](#)
- [Looping Dial Plan Call Processing, page 29](#)
- [Other Considerations, page 46](#)

Cisco HCS Architecture Primer

To understand the Cisco HCS Dial Plan Model, you must have a basic understanding of the Cisco HCS architecture and the interaction between the elements. The architecture consists of three discrete layers, the aggregation, infrastructure, and customer-premises layers, that comprise the majority of the call flow interactions. The aggregation layer handles inbound/outbound call routing between customer premises and PSTN, while all intracustomer interactions are handled at the infrastructure layers. The Cisco HCS numbering plan facilitates this design, allowing for a simple routing methodology, and is discussed in this section.

Aggregation Layer

The aggregation layer is responsible for the following:

- E.164 call routing
- Routing E.164 calls between two Hosted Collaboration Solution customers
- Routing calls from the PSTN to IP Lines on Cisco Unified Communications Manager clusters
- Routing calls from IP Lines (on Cisco Unified Communications Manager clusters) to centralized PSTN breakout
- Routing calls to other components within the aggregation layer
- Routing calls to Cisco WebEx (can be a separate route)
- Routing calls to Cisco Contact Center Enterprise (can be a separate route)


The primary use of the aggregation is to aggregate central PSTN traffic. Any call that is received at the aggregation layer must be treated as a call either from or to the PSTN. The aggregation supports PSTN breakout like SS7 and SIP.

A service provider using Cisco Unified Communications Domain Manager 10.6(x) can only use the customer's own aggregation device (third party).

The aggregation layer is connected to the UC applications through the Cisco Unified Border Element (Service Provider Edition) as shown in the following figure. The Cisco Unified Border Element (Service Provider Edition), and the Cisco Unified Border Element (Enterprise Edition) in the case of a Micro Node deployment, are used mainly as a media aggregation point in Cisco HCS. The Cisco Unified Border Element is used for media anchoring and VRF translation functions. Additionally, it provides SIP header normalization functions for interoperating with various service provider networks. The Cisco Unified Border Element (Service Provider Edition) is configured manually; it is not provisioned automatically from Cisco Unified Communications Domain Manager. For signaling, there is one-to-one mapping of trunk from leaf clusters to signaling aggregation

node, PGW, IMS or any other softswitch. In general, there is no dial plan requirement for Cisco Unified Border Element (Service Provider Edition).

Figure 1: Logical Diagram Showing SBC Adjacency for Each Customer

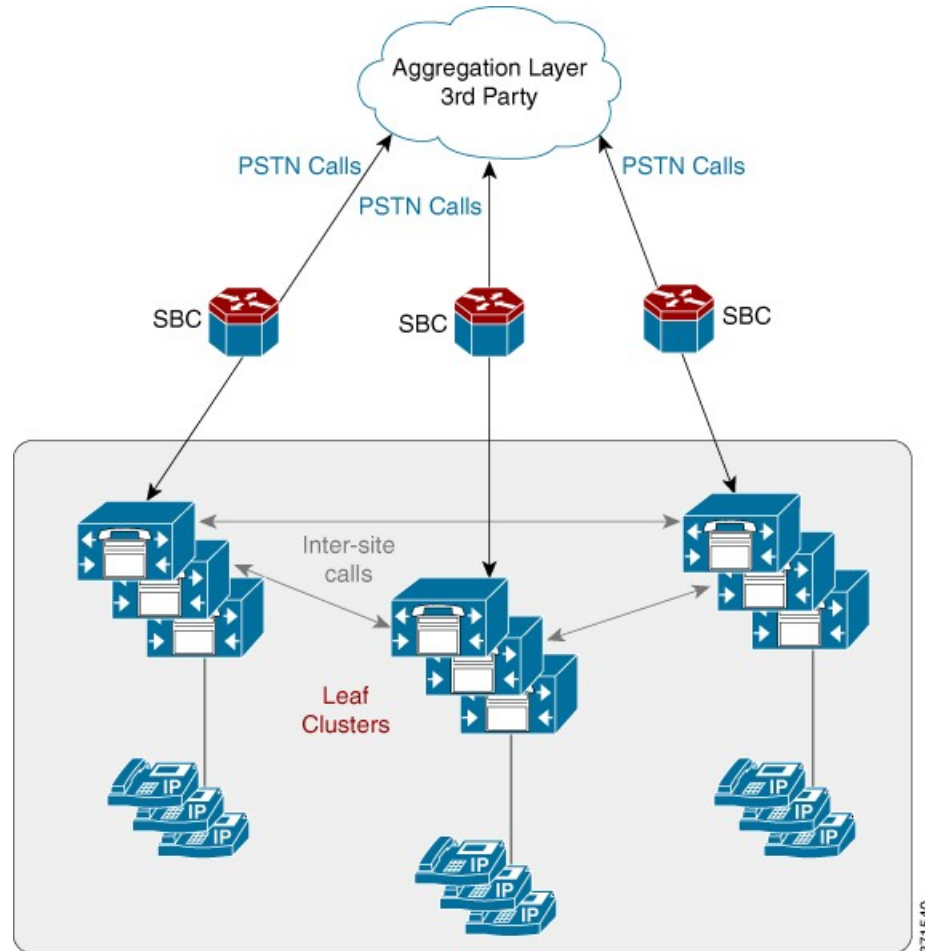

Note

The Forced On-Net feature in Cisco Unified Communications Manager can be used between users of a customer; that is, a user dialing the PSTN number of another user of the same customer.

Calls between various clusters and the aggregation traverse SIP trunks. SIP is the only protocol that must be configured for these types of trunks.

Infrastructure Layer: Unified Communications Manager - Leaf Clusters

At the infrastructure layer, the Unified Communications Manager is used to service Cisco Unified IP phones and lines. The Unified Communications Manager routes calls to local PSTN, out to local gateways if connected, and handles all E.164 to internal DN translations. The leaf clusters must also integrate into Cisco Unity

Connection, Cisco Unified Communications Manager IM and Presence Service, and Cisco Emergency Responder.

The incoming trunk from aggregation contains the e164Lookup partition, which converts E.164 to DN and points to InterSiteRouting CSS containing the InterSiteRouting partition. The InterSiteRouting partition contains the translation pattern pointing to IncomingToSite CSS which contains the site partition. For the Generic Dial Plan (G1), the DN is in the site partition.

For the Shared Instance Dial Plan (G3) some differences exist in routing. The Shared Instance Dial Plan (G3) is used for deployments that have shared instance clusters. In such deployments, multiple customers are deployed on one instance of Cisco Unified Communications Manager Virtual Machine. The Shared Instance Dial Plan is based on the Flat Dial Plan (G2) which is modified to support customer-specific dialing and routing.

For customer-to-customer calls within the same cluster using the Shared Instance Dial Plan (G3), even if two customers are on the same cluster, the routing requirements are that the calls from one customer should be routed to aggregation toward the PSTN, and then the calls should be routed back as inbound PSTN calls.

Intercluster Trunks (ICT) must be used to mesh the leaf clusters together. All intercluster intersite traffic that is dialed as Internal Unified Communications Manager DN must traverse the meshed ICTs.

All calls from the PSTN through the aggregation layer traverse SIP trunks through Cisco Unified Border Element Service Provider Edition to the leaf clusters. These trunks are marked as off-net trunks.

When an internal call is made on the leaf cluster, if the caller dials only the extension number, then the call is routed within the caller's location. If the caller dials the Internal Unified Communications Manager DN, preceded by an intersite prefix built into site code, then the originating cluster routes the call to the correct location based on the mapping of site code to location.

Generic Dial Plan (G1) and Flat Dial Plan (G2) internal calls are routed based on the Line CSS that contains the InterSiteRouting partition. All the DNs for a customer reside in this partition.

Shared Instance Dial Plan (G3) internal calls are routed based on the Line CSS that contains the customer-specific site partition. All the DNs for a customer reside in this partition.

Legacy PBX connected to a dedicated PGW per customer has all E.164 calls between the Legacy location and the Cisco Unified Communications Manager location (even within the same customer) traverse the aggregation layer.

Customer Premises Layer

This layer connects customer endpoints—phones, mobile devices, and local gateways to the SP network—and provides end user interfaces to network management software. This layer may handle PSTN routing and Survivable Remote Site Telephony (SRST) if a local breakout design is used. This layer can also include C-series servers for Unified Communications Applications as part of the Cisco HCS Extender deployment model.

VoiceMail - Cisco Unity Connection

Cisco Unity Connection is connected to the leaf clusters as a SIP connection (telephony integration). For each Cisco Unified IP Phone line that exists on the leaf cluster that requires voicemail, there is also a voice mailbox definition on the Cisco Unity Connection. On Cisco Unity Connection, the voice mailbox definition is associated to the telephony integration and leaf cluster that contains the line definition. The leaf clusters have a voicemail

Pilot Number defined that helps to route calls to the Cisco Unity Connection. With this scenario, each leaf cluster can use the same number for the voicemail pilot number.

**Note**

For Shared Instance Dial Plan (G3) dial plan, the voicemail pilot number can be shared within a customer (that is, across locations) but it has to be unique across customers that belong to the shared instance of Cisco Unified Communications Manager and Cisco Unity Connection.

Numbering Plan Design

Directory Number

The Cisco HCS dial plan creates directory numbers (Unified Communications Manager Internal DNs) consisting of a Site Location Code (SLC) + extension number for the Generic Dial Plan (G1) and just the extension number for the Flat Dial Plan (G2) on Unified Communications Manager clusters. The directory number can be configured with or without an intersite prefix (see [Intersite Prefix](#), on page 7) as part of the SLC.

For more information on the Generic Dial Plan (G1) see [Generic Dial Plan \(G1\)](#), on page 8.

For more information on the Flat Dial Plan (G2) see [Flat Dial Plan \(G2\)](#), on page 10.

For more information on the Shared Instance Dial Plan (G3), see [Shared Instance Dial Plan \(G3\)](#), on page 11. The Shared Instance Dial Plan (G3) works the same as the Flat Dial Plan (G2) except where noted in this guide.

Extension Numbers

An extension number is composed of one or more digits in the range 0 to 9 and must be unique within a site, although the same extension number can exist in multiple sites (that is, overlapping extension numbers). The length is determined on a site-by-site basis.

Extension number ranges chosen should not overlap with the intersite prefix or with PSTN access prefixes. To prevent overlap, do not use extension number ranges starting with a PSTN access prefix such as 9, or the chosen intersite prefix, commonly 8. Overlap between extension numbers and the emergency number at any location must be avoided. For example, if the emergency number is 112, then extension 112 or extension number ranges 112X (where X is one or more digits) are not permitted.

For a Flat Dial Plan (G2), the extensions and the internal DNs are the same. Extensions under Flat Dial Plan (G2) cannot overlap and have to be unique across all locations for a customer.

For a Type 4 Flat Dial Plan, the extensions and the internal DNs are the same. Extensions under Flat Dial Plan cannot overlap and have to be unique across all locations for a customer.

Site Location Codes

A Site Location Code (SLC) is a number composed of one or more digits in the range 0 to 9, used to prefix the extension number to create a unique directory number (DN). This enables the same extension number to exist in multiple sites (that is, overlapping extension numbers). Only one SLC is allowed at each site, and the SLC must be unique within the customer. An SLC is used to group a set of DNs to a site that has similar

characteristics. The length may be determined on a site-by-site basis. Unified Communications Domain Manager does not allow a site code to be created that has either of the following characteristics:

- 1 Has a first portion that matches an existing site code
- 2 Matches the first portion of an existing, longer site code

For example, if site code 123 already exists and the user attempts to create site code 12, then the provisioning system does not allow it because site code 12 matches the first portion of 123. Similarly, if the user attempts to create site code 1234, then the provisioning system does not allow it because the existing site code 123 matches the first portion of 1234.

The restrictions above are required to prevent calls from being routed to the wrong site partitions due to overlapping numbers.



Note Within the document, *site* and *location* are used interchangeably.



Note There are no SLCs for Flat Dial Plan (G2).



Note There are no SLCs for Flat Dial Plan (Type 4).

Full National Number

In Cisco Unified Communications Domain Manager and the HCS Dial Plan model, Full National Number (FNN) is a subscriber number and does not include the area code. FNN is used in Number Construction with other options to build the External Phone Number Mask on Unified Communications Manager.

E.164 Number

The Cisco HCS dial plan is structured such that the calling and called party numbers for all inbound PSTN calls entering the Unified Communications Manager are in an E.164 format. The conversion to E.164 takes place at the aggregation layer or local gateway. Similarly, the calling and called party numbers for all outbound PSTN calls leaving the Unified Communications Manager are also in an E.164 format. The conversion to E.164 takes place at the Unified Communications Manager.

The format of the E.164 number is: `+#COUNTRY##NATCODE##FNN#`, where

`+`—International Escape Character

`#COUNTRY#`—Country Code (1 for United States, 44 for United Kingdom, and so on)



Note Some countries do not use area codes; for example, Singapore.

`#NATCODE#`—Area Code

#FNN#—PSTN Subscriber Number

Intersite Prefix

The intersite dialing prefix (ISP) is optional and customer wide, and it tells the dial plan that the user is making an on-net call, and that the digits to follow must be in the format of a site location code (SLC) and an extension number. The ISP is a single digit number in the range 0 to 9 and must be unique within the customer's network. The ISP is deployment configurable to any value, but must not overlap with the PSTN dialing prefix or emergency number. The ISP is an optional configurable value within a customer's dial plan.



Note

Customer wide means that the same ISP must be used for all of a customer's sites. If the first site that is provisioned begins with the digit 8, then all other sites should also begin with the digit 8.

Under one service provider you can have the ISP as 7 for one customer and 8 for another customer.



Note

In the Cisco HCS, a standalone ISP is not supported, but rather, the ISP is implemented as the first digit of the SLC, for the following reasons:

- Corporate Directory Support—If the ISP is not included in the site code, then after directory lookup, you must manually insert the ISP before call completion.
- Callback Support—If the ISP is not included in the site code, then the calling party number is not contained in the ISP. You must manually insert the ISP before call completion.



Note

ISP does not apply to Type 4 Dial Plans.

PSTN Access Prefix

The PSTN prefix is defined on a country basis. It is specified for each service provider for each country and each customer in the country. When the caller dials a PSTN number with a PSTN access prefix (typically a 9 in the United Kingdom and United States), this tells the dial plan that the caller is making an off-net call.

When the caller dials the PSTN breakout number, the dial plan routes the call to the correct PSTN breakout location, whether it is a central or a local PSTN gateway.

Open and Closed Dialing Plan and Numbering Plan Formats

An **open dialing plan** uses different dialing arrangements for local and long distance telephone calls, whereas a **closed dialing plan** is one in which the subscriber's full number is used for all calls, even in the same area. For example, in an open dialing plan you could dial 222-1234 for a local call and dial 1-212-222-1234 for a long distance call. In a closed dialing plan you would dial the same number for both local and long distance number. Some countries like Denmark do not have area codes; they dial the same number for local and long distance.

Open and closed dialing plans should not be confused with open and closed numbering plans. An **open numbering plan** features variance in the length of area code or local number, or both; for example in Great Britain, telephone numbers can be 9, 10, or 11 digits, depending on where the call originates.

A **closed numbering plan**, such as found in North America, imposes fixed-length area codes and local numbers; for example, United States telephone numbers are always 10 digits, which includes a 3-digit area code and a 7-digit telephone number. Some countries are moving from an open numbering plan to a closed numbering plan because a closed numbering plan is much easier to manage.

Cisco HCS Numbering Considerations

Cisco Unified Communications Manager numbering allows for the following dial patterns:

- PSTN access prefix + STD¹ access prefix + national number (for example, 902081231234 in United Kingdom and 914082221234 in United States)
- PSTN access prefix + service code (for example, 9118500 in United Kingdom and 9611 in United States)
- PSTN access prefix + emergency number (for example, 9999 in United Kingdom and 9911 in United States)
- Emergency number (for example, 999 in United Kingdom and 911 in United States)
- Intersite prefix + site code + extension (for example, 8 700 1000)
- Extension number (for example, 1000) - Used for intrasite dialing. Flat dial plan it is used for both intrasite and intersite dialing

Generic Dial Plan (G1)

The Generic Dial Plan (G1) model allows you the ability to customize your dial plan.

Generic Dial Plan (G1) Number Construction

All directory numbers, voice mail pilots and mailbox numbers follow the SLC + extension format when they are provisioned from Unified Communications Domain Manager under the Generic Dial Plan (G1).

Table 1: Generic Dial Plan (G1) Directory Number Format

Customer	Site Location Code (SLC)	Extension	Unified Communications Manager Configured DN Range
Customer 1			
Location 1	80101	1000-1999	801011000 - 801011999
Location 2	80102	2000-2999	801022000 - 801022999
Customer 2			

¹ Subscriber Trunk Dialing (STD) prefix for UK is 0 and for US is 1. STD is optional; some countries do not use an STD prefix.

Customer	Site Location Code (SLC)	Extension	Unified Communications Manager Configured DN Range
Location 1	80201	1000-1999	802011000 - 802011999
Location 2	80202	2000-2999	802022000 - 802022999

**Note**

A standalone ISP is not supported, but rather, the ISP is implemented as the first digit of the SLC (ISP=8 in the preceding table). Note that you can have various digits as the first digit of the SLC; an ISP does not have to be used.

Generic Dial Plan (G1) Customization

The Generic Dial Plan (G1) has the ability to leverage the Enhanced Number Translation (ENT) feature. The following ENT templates can be used:

- Allow Call Template
- Block Call Template
- Local Calling Template
- Local Calling via Local Break-Out (LBO) Template
- Short Code (SC) Dialing Template
- Voice Mail (VM) Dialing Template
- VM Short Code Dialing Template
- Intercluster Trunk Route Patterns (ICT RP) Template
- Intercluster Trunk Unmanaged Route Patterns Template
- Intercluster Trunk VM Route Patterns Template
- Intra Site Template
- Inter Site Template
- Intra Site Extension Prefix Template
- Tail End Hop Off Route Pattern (TEHO RP) Template
- Calling Party Screening Template
- Small Contact Center (CC) RP Template
- vPGW Unmanaged Location RP Template

Flat Dial Plan (G2)

The Flat Dial Plan (G2) model provides a second option of number construction. Flat dialing consists of flat 4- to 11-digit dialing across all locations. The Flat Dial Plan (G2) supports random unique directory number assignment across locations.

Flat Dial Plan (G2) Number Construction

All directory numbers, voice mail pilots and mailbox numbers follow the extension format when they are provisioned from the Unified Communications Domain Manager under the Flat Dial Plan (G2). The SLC was removed from the Unified Communications Manager internal number format.

Table 2: Flat Dial Plan (G2) Directory Number Format

Customer	Extension	Example of a DN configured on Unified Communications Manager
Customer 1		
Location 1	16023421000-16023429999	16023429236
Location 2	13363421000-13363429999	13363425022
Customer 2		
Location 1	12123423000-12123423999	12123423044
Location 2	2000-2999	2050



Note

The Flat Dial Plan (G2) Internal Number Format rules section uses a Site Location Code (SLC) to form the Unified Communications Domain Manager internal number format. The SLC does not get provisioned to the Unified Communications Manager and is solely for use by the Unified Communications Domain Manager to construct unique internal numbers across the system for various customers. Therefore, when provisioning customers in the Unified Communications Domain Manager under the Flat Dial Plan (G2), create a range of “dummy” SLCs and allow Cisco Unified Communications Domain Manager to auto select the SLC when creating locations.

Flat Dial Plan (G2) Customization

The Flat Dial Plan (G2) has the ability to leverage the Enhanced Number Translation (ENT) feature. The following ENT templates can be used:

- Allow Call Template
- Block Call Template
- Local Calling Template
- Local Calling via Local Break-Out (LBO) Template

- Short Code (SC) Dialing Template
- Voice Mail (VM) Dialing Template
- VM Short Code Dialing Template
- Intercluster Trunk Route Patterns (ICT RP) Template
- Intercluster Trunk Unmanaged Route Patterns Template
- Intercluster Trunk VM Route Patterns Template
- Tail End Hop Off Route Pattern (TEHO RP) Template
- Calling Party Screening Template
- Small Contact Center (CC) RP Template
- vPGW Unmanaged Location RP Template

Shared Instance Dial Plan (G3)

The Shared Instance Dial Plan (G3) is used for deployments that have Shared Instance clusters. In such deployments, multiple customers are deployed on one instance of Cisco Unified Communications Manager Virtual Machine. The Shared Instance Dial Plan (G3) is based on the Flat Dial Plan (G2), which is modified to support customer-specific dialing and routing. In this guide, the Shared Instance Dial Plan (G3) works the same as the Flat Dial Plan (G2) except where specified.

Shared Instance Dial Plan (G3) Customization

The Shared Instance Dial Plan (G3) has the ability to leverage Enhanced Number Translation templates. The following ENT templates can be used:

- Allow Call template
- Block Call template
- TEHO RP template (not available with per-customer SIP trunks)
- Local Calling template
- Forced Authorization Code using the Translation Pattern method template
- Forced Authorization Code using the Route Pattern method template. For more information, see *Cisco Hosted Collaboration Solution, Release 10.6(1) Features for Shared Instance Cisco Unified Communications Manager*

Multicountry Support in Shared Instance Dial Plan (G3)

The Shared Instance Dial Plan (G3) provides multicountry support but not multicluster, multicountry support. For a customer, you can provision one site in one country and another site in another country, as long as both sites are on the same cluster.

Setting Up Number Construction in Cisco Unified Communications Domain Manager

The number construction rules in Cisco Unified Communications Domain Manager must be set for a Cisco HCS configuration. Click the **Dial Plan Tools > Number Construction** menu on the left navigation pane, and then click on the loaded dial plan.

Internal Number Construction

Cisco Unified Communications Domain Manager uses an internal number (FINT, FNN).

Cisco Unified Communications Domain Manager uses special terminology in dealing with number construction of this internal number:

- **CPID**—Call Processing ID. This is assigned to hardware as required (PBX, Cisco PGW, Voicemail, and so on). The CPID is generally configured when you add the hardware and is displayed when you view the settings.
- **RID**—Routing ID. This ID is selected for a location and is unique for the CPID. In the case of a location, the RID could be an available RID for the CPID of the IPPBX of the location. The RID that is assigned to a location can be viewed on the location details page in the Dial Plan section.
- **Site Code**—This is a location level code assigned for each location. The site code inventory is managed for each customer in Unified Communications Domain Manager. The length of the site code is always allowed to be variable with a defined maximum length. Overlapping site codes are not allowed within a single customer. The site code for a location can be viewed on the location details screen in the Dial Plan section.
- **CID**—Cluster ID. This ID is assigned to each Cisco Unified Communications Manager PBX cluster in the system. This is configured when you add the cluster and is viewed on the cluster details page.
- **FINT**—The full internal number. Unified Communications Domain Manager uses the FINT number of the lines to recognize the location. The construct of this is defined in the number construction rules. When a location is added, the full FINT inventory is created for the location.
- **FNN**—The full national number (PSTN number).

Cisco HCS Configuration of Number Construction Elements

The following number construction elements are applied when using the G1, G2 or G3 Dial Plan model sheet for Cisco HCS. These values can also be entered through the GUI.

Table 3: Number Construction Elements

Element	Description	G1	G2	G3
Name	Dial plan name	Cisco HCS-G1	Cisco HCS-G2	Cisco HCS-G3
Description	Description	Cisco HCS Generic Dial Plan (G1)	Cisco HCS Flat Dial Plan (G2)	Cisco HCS Shared Instance Dial Plan (G3)
Codec Selection				

Element	Description	G1	G2	G3
Customer Codec Configurable	Select the Customer Codec Configurable.	TRUE	TRUE	TRUE
Intra-Region Codec	This is the intraregion codec used by the system when setting up the per location Unified Communications Manager regions for locations. Example: G.711.	G.711	G.711	G.711
Inter-Region Codec	For the interregion location setup.	G.711	G.711	G.711
Dial Plan Rules				
Enforce HUICS Dial Plan	This is a legacy setting and does not apply to Cisco HCS.	N	N	N
Enforce Cisco HCS Dial Plan	This setting determines the behavior in a few places in the code that allow the flexibility of working around certain validations put in place for Cisco HCS. <ul style="list-style-type: none"> When a customer is created, Cisco PGW and Times Ten drivers perform no actions. When this option is selected, you can access the Customer Call Planner Management page by browsing to General Administration > Customers > <Customer Name> > Advanced Mgt. > Call Planner Association. This page enables you to associate and disassociate call planners (hardware groups). 	Y	Y	Y
Multi-Tenant Dial Plan	This setting assures that multiple customers are supported with the same Dial Plan.	Y	Y	Y
Site Type Selection				
Site Type Support	Leave this check box as N; selection is not used for Cisco HCS.	N	N	N
Site Type is Branch	Leave this check box as N; selection is not used for Cisco HCS.	N	N	N
Site Type is Office	Leave this check box as N; selection is not used for Cisco HCS.	N	N	N

Element	Description	G1	G2	G3
Site Type is Business	Leave this check box blank; selection is not used for Cisco HCS.	<BLANK>	<BLANK>	<BLANK>
Site Type is Residential	Leave this check box as N; selection is not used for Cisco HCS.	N	N	N
Full Internal Number (FINT) Format - Determines whether elements are included in the Unified Communications Domain Manager Internal numbering format, but does not influence whether these elements are created generally in the system. The Internal number format is: CPID:RID:SITEPREFIX:CID:SITECODE:EXTNTYPE:EXTNNUMBER				
FINT has CPID	Determines whether the call processing ID is included in the internal number format.	Y	Y	Y
CPID Digits	The length of CPID, which needs to allow a number larger than the planned number of hardware elements in the system.	4	4	4
FINT has RID	Determines whether the routing ID is included in the internal number format.	Y	Y	Y
RID Digits	The length of the RID, which needs to allow a number larger than the number of locations and customers being planned.	4	4	4
FINT has CID	Determines whether the cluster ID is included in the internal number format.	N	N	N
CID Digits	The length of the CID, which needs to allow a number larger than the number of Unified Communications Manager clusters being planned.	3	3	3
FINT has Site Code	Determines whether the site code is included in the internal number format. Regardless of whether you select this or not, Site Codes are still required for locations to be added.	Y	Y	Y
Max Site Code Digits	This number reflects the maximum number length of the site code.	5	5	5
Site Code Rules	Free text that is displayed next to site codes when they are being added to the system to communicate the rules imposed by the dial plan.	Site Code Max 5 'digits'	Site Code Max 5 'digits'	Site Code Max 5 'digits'

Element	Description	G1	G2	G3
Use Variable Length FINT	Select this box if you want the length of the extension portion of the FINT to be configurable. If Variable Length Internal Number is set to Y, the Internal Number Length field must be blank. Enabling this option results in an extension length setting being available during the Add Location operation. This option can be used to define the length of the extension. If this option is not selected, the length of the extension is determined by taking the setting below and subtracting any other digits from it. For example, a location has a site code of 123 (three digits) and the dial plan calls for no CPID, no RID, and 7 for internal number length. This would result in the extension length being $4 = 7 - 3$	Y	Y	Y
FINT Digits	This option enables the user to define the length of the internal number. This option is used only if the variable length extension is not enabled. See the entry above to determine the extension length.	N/A	N/A	N/A
Internal Number Display Rules These settings determine how internal numbers are displayed within the application.				
Includes CPID	Set this to include the CPID in the number display.	N	N	N
Includes RID	Set this to include the RID in the number display.	N	N	N
Includes Site Code	Set this to include the Site Code in the number display.	N	N	N
RID Type	Route Identifier type - customer or location.	location	location	location
Dial Prefixes This section covers dial prefixes that are required for various call types. This setting allows the requirements to be turned on/off as well as specifying the value.				
Intersite Prefix Required	This setting determines whether an intersite prefix is required for the Dial Plan.	N	N	N

Element	Description	G1	G2	G3
Intersite Prefix Configurable	This setting determines whether the prefix is a configurable value. This is configurable per customer and can be defined when adding the customer. If the configurable setting is not enabled, then the value used during the Add Customer operation must be hard coded.	N	N	N
External PSTN Access Prefix Required	This setting determines whether a PSTN breakout code is required.	Y	Y	Y
External PSTN Access Prefix Configurable	This setting determines whether the prefix is a configurable value. This is configurable per location and can be defined when adding the location. If the configurable setting is disabled, then the value used during the Add Location operation must be hard coded.	N	N	N
Format of IPPBX Configured Internal Number				
IPPBX Configured FINT has CPID	When this value is selected, the CPID is part of the DN.	FALSE	FALSE	FALSE
IPPBX Configured FINT has RID	When this value is selected, the RID is part of the DN.	FALSE	FALSE	FALSE
IPPBX Configured FINT has CID	When this value is selected, the CID is part of the DN.	FALSE	FALSE	FALSE
IPPBX Configured FINT has Site Code	When this value is selected, the Site Code is part of the DN.	TRUE	FALSE	FALSE
IPPBX Configured FINT has Extension	When this value is selected, the extension is part of the DN.	TRUE	TRUE	TRUE
Call Park Prefix	To distinguish between Call Park numbers internally, Unified Communications Domain Manager uses a custom prefix, followed by a number increment, one per call processing server in a Location's Call Manager group. For example, if an administrator selects *2 as a Call Park Prefix and creates a 10-number Call Park range, the numbers would be *20100, *20101 and so on for Server A and *20200, *20201 and so on for Server B.	*	<p>Note For G2 or G3 Dial Plan, Call Park is a customer-wide feature.</p>	*

Element	Description	G1	G2	G3
Call Park Location Configurable	This setting determines whether the prefix is a configurable value. If checked, the value in the Call Park Prefix field is displayed at a location level in a read-only text field. The Call Park Prefix is then configurable per location and can be defined when adding the location. If configurable is disabled, then the value used during the Add Location operation is hard coded.	TRUE	TRUE Note For Flat Dial Plan (G2) or Shared Instance Dial Plan (G3), Call Park is a customer-wide feature.	TRUE
<p>Format of External Phone Number Mask on Cisco Unified Communications Manager.</p> <p>This section determines how external (E.164/FNN) numbers are displayed in the system. This includes drop-downs lists for assigning lines to phones and users and also for configuring the external mask in Cisco Unified Communications Manager for the lines.</p> <p>Note If you change this setting, it must not affect any FNNs already in the system. The display E.164 value is determined for the number when it is added to the E.164 inventory. It must affect any new FNNs that are added to the system.</p>				
FNN Shows ISO Dial Prefix	This setting enables the inclusion of the PSTN breakout prefix on the front of the number.	N	N	N
FNN Shows ISO Dial Code	This setting enables the inclusion of the ISO country code at the beginning of the number (for example, GBR for Great Britain).	N	Y	Y
FNN Shows National Code Dial Prefix	This setting enables the display of the trunk access code on the front of the PSTN number (for example, 0 for Great Britain).	N	N	N
FNN Shows National Code Dial Code	This setting enables the display of the area code on the front of the PSTN number.	Y	Y	Y
Prefix Plus Symbol	This check box allows you to set a number construction option which prefixes default external line masks provisioned to the Cisco Unified Communications Manager with a +. This applies in specific cases to the following features on Cisco Unified Communications Domain Manager: Phone registration and management, Extension Mobility Profiles, Analogue Gateways, CTI Route Points or Ports, and Single Number Reach.	Optional Select the Prefix Plus Symbol check box in the Format of External Phone Number Mask on Unified Communications Manager section. FALSE	Optional Select the Prefix Plus Symbol check box in the Format of External Phone Number Mask on Unified Communications Manager section. TRUE	Select the Prefix Plus Symbol check box in the Format of External Phone Number Mask on Unified Communications Manager section. TRUE
Format of Voicemail Configured Pilot Number (SLC+Extension)				

Element	Description	G1	G2	G3
Voicemail Pilot Number has Intersite Prefix	Cisco HCS does not support intersite prefix.	FALSE	FALSE	FALSE
Voicemail Pilot Number has Site Code	Includes Site Code in the Voicemail Pilot Number (SLC).	TRUE	FALSE	FALSE
Voicemail Pilot Number has Extension	Includes Extension in the Voicemail Pilot Number.	TRUE	TRUE	TRUE
Format of Voicemail Configured Mailbox Number (SLC+Extension)				
Voicemail Mailbox Number has Site Code	Includes Site Code in the Voice-configured Mailbox Number (SLC).	TRUE	FALSE	FALSE
Voicemail Mailbox Number has Extension	Includes Extension in the Voice-configured Mailbox Number.	TRUE	TRUE	TRUE

Multiple Service Provider Support

The Cisco Unified Communications Domain Manager supports one Cisco HCS Dial Plan Model per service provider. Unified Communications Domain Manager can also be configured to support multiple service providers. Cisco HCS can take advantage of multiple service provider support capability to support multiple Cisco HCS Dial Plan Models. You can create a service provider for each Cisco HCS Dial Plan Model that is required.

Cisco HCS supports two Cisco HCS Dial Plan Models based on different number construction.

To achieve support for different dial plans in a Unified Communications Domain Manager system, create two or more service providers with a respective hardware set and dial plan association assigned.

Before creating the service provider, load the base data models to create the number construction and hardware set in Unified Communications Domain Manager. The number construction instructs Unified Communications Domain Manager to build internal system numbers and Unified Communications Domain Manager directory numbers (DNs). Hardware sets define the templates for the system to adopt in terms of the types of hardware configurations and they also define the associated dial plans for each hardware set.

After the number constructions and hardware sets have been loaded into Unified Communications Domain Manager through the base data models, service providers can be configured in the system.



Note


A hardware set can have multiple dial plans associated to it.

Considerations When Deploying Multiple Service Providers

Role Based Access Control (RBAC) stays within a service provider domain. Cisco Unified Communications Domain Manager maintains different hierarchy levels at which configuration objects are managed. The following levels are possible:

- Provider
- Reseller
- Customer
- Division
- Location
- Building
- User (End-user)

Figure 2: Hierarchy Levels

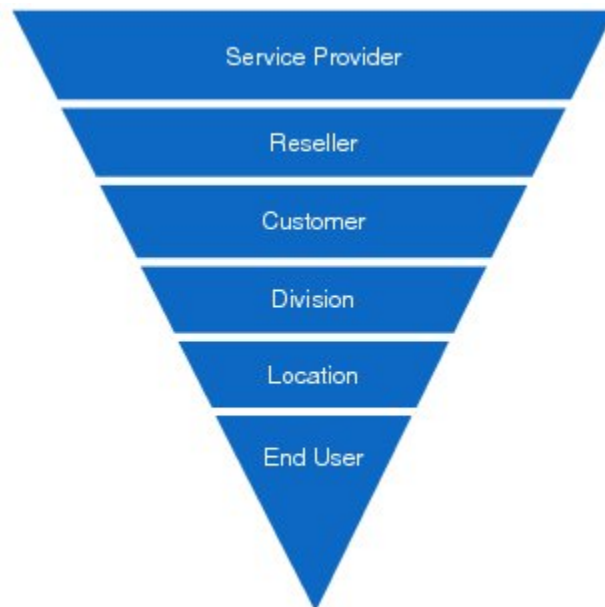

The internal system super user maintains visibility and control of all service provider hierarchical domains for the entire system. Each service provider domain can have administrators at the different provider, reseller, and customer location levels but are constrained to their parent service provider. For example, service provider Admin1 in service provider 1 cannot manage or provision elements for service provider 2 and vice versa.

Associate Dial Plan to a Service Provider

When you create a service provider linking a hardware set, associate the dial plan to the service provider.

For more information, see [Multiple Service Provider Support](#) , on page 18.

Numbering at the Cisco Unified Communications Manager Interface

The following table describes the numbering format at the Cisco Unified Communications Manager interface:

Table 4: Unified Communications Manager Interface Number Format

Call Flow	Called Number	CLI	R Number
From Unified CM to on-net destination	Site code and extension. No + for SIP, NOA = unknown for Q.931	Site code and extension. No + for SIP, NOA = unknown for Q.931	nonapplicable
From on-net to Unified CM	Site code and extension. No + for SIP, NOA = unknown for Q.931	Site code and extension. No + for SIP, NOA = unknown for Q.931	nonapplicable
From Unified CM to PSTN	Full E.164. + for SIP, NOA - international for Q.931, prefix 9 for DPNSS	Site code and extension. No + for SIP, NOA = unknown for Q.931	nonapplicable
From PSTN to Unified CM	Site code and extension. No + for SIP, NOA = unknown for Q931	Full E.164. + for SIP, NOA - international for Q931	nonapplicable
Unified CM call forward to PSTN	Full E.164. + for SIP, NOA - international for Q.931, prefix 9 for DPNSS	Either site code and extension No + for SIP, NOA = unknown for Q931 for internal originator Or Full E.164. + for SIP, NOA - international for Q.931 for PSTN originator	Unified CM site code and extension. No + for SIP, NOA = unknown for Q.931

Cisco PGW Model and Call Routing

This section describes how the Cisco vPGW dial plan is designed and implemented for Cisco HCS.



Note

PGW and *virtualized PGW (vPGW)* are used interchangeably in this Guide.

The Dial Plan design provides basic functionality to meet customer requirements for calling and called number analysis. The Dial Plan also enables the creation of permutations of combined open and closed numbering plans, and the ability to easily modify them. The Cisco Media Gateway Controller (MGC) Dial Plan design also provides the interface to a real-time database.

The Dial Plan is, of necessity, the final step in provisioning the MGC node. To create a Dial Plan, you must first determine what routes, trunk groups, and trunks are provisioned in the MGC. The MGC provisioning information provides a logical representation of the actual routes, trunk groups, and trunks on the media gateways that are controlled by the MGC.

The routing plan types that are developed during provisioning of the MGC determine what trunks in a media gateway are assigned to a specific trunk group, and what trunk groups are assigned to what routes. The routes determine what originating and terminating points are serviced by the MGC.

All required routes, trunk groups and trunks are created manually on the Cisco vPGW softswitch.

The Dial Plan determines how each call that comes into the MGC is processed. Call processing rules in Dial Plans are static, but the events that determine how each call is ultimately processed are dynamic, and depend on several factors within and external to the MGC.

Before you can build a Dial Plan, you must understand the functions that the Dial Plan can perform:

- Call processing (digit collection)
- Call analysis
- Call routing

Cisco PGW Dial Plan Design


Each time a Unified Communications Manager is connected to the Cisco PGW Softswitch or Cisco Virtualized PGW (vPGW) Softswitch, an associated Dial Plan is created; the name of the Dial Plan is the CPID of the cluster. This Dial Plan performs the following functions:

- Incoming call from the leaf cluster:
 - Converts the Redirecting Number DN to a DDI number. This function is done in the leaf cluster.
 - Forwards the call to the B and A number analysis Routing Table (BART) Dial Plan for routing to the PSTN or Forced On-Net.
- Outgoing call to leaf cluster:
 - Routes the call to the correct leaf cluster based on the CPID number prefix to the A or B number by Leaf Cluster Routing Table (LCRT) Dial Plan.
 - Uses the TGAdvance feature to reroute for trunk failed between the leaf cluster and the Cisco PGW.

Based on the Dialed Number, the BART Dial Plan switches the call analysis between Origination Based Routing Table (OBRT) and Destination Based Routing Table (DBRT). Only DBRT is currently used; by default all PSTN calls are forced on-net if the number belongs to the Cisco HCS. Forced On-Net can be overwritten through the Forced Off-Net feature in Unified Communications Domain Manager. Further call analysis is performed by the Destination Based A number analysis Routing Table (DART) Dial Plan, which routes the call to the appropriate F<PADDEDCC> country Dial Plan, which handles call egressing to the PSTN.

Incoming PSTN calls are handled by the P<PADDEDCC> country Dial Plan. The Dial Plan does an A number Times Ten Database lookup for Fixed Mobile Convergence (FMC) feature and B number Times Ten Database lookup for normal incoming calls to Cisco HCS. If found, the call is forwarded to LCRT Dial Plan.

Figure 3: Cisco PGW Dial Plan Design

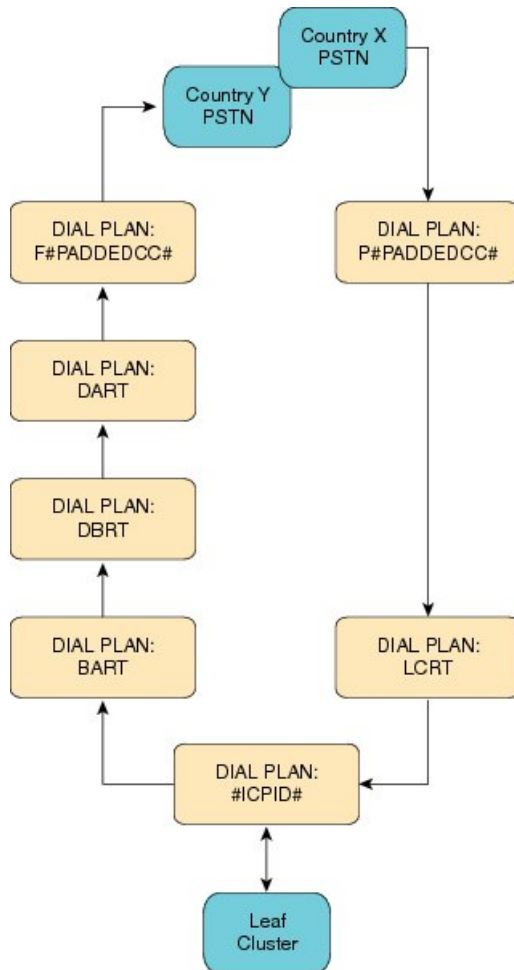

A Cisco PGW Dial Plan to analyze both calling and called number (A-number and B-number) to route calls either to a central PSTN breakout or a leaf cluster is assumed, with the following inbound and outbound call number format:

- E.164 lookup to internal DN mapping is not done by the Cisco PGW. Lookup happens on leaf clusters.
- Number normalization is done by the leaf clusters. Cisco PGW does minimal normalizations if required. The numbering format is as shown in the table that follows.

Table 5: Numbering Format

Calls	Numbering Format
Calls from leaf cluster to Cisco PGW	<ul style="list-style-type: none"> • Calling Party Number (A num): +<CC><DDI> • Called Party Number (B num): +<CC><DDI>
Calls from Cisco PGW to leaf clusters	<ul style="list-style-type: none"> • Calling Party Number (A num): +<CC><DDI> • Called Party Number (B num): +<CC><DDI>
Calls from Cisco PGW to PSTN breakout (international format with + on SIP trunks, with leading 00 on other PSTN interfaces)	<ul style="list-style-type: none"> • Calling Party Number (A num): <CC><DDI> , SetANOA= Int • Called Party Number (B num): <CC><DDI> , SetBNOA= Int
Calls from Central PSTN breakout to leaf clusters	<ul style="list-style-type: none"> • National Calls: (Normalize to International format with +) • Calling Party Number (A num): <AddCC> with DDI, Set NOA = Int • Called Party Number (B num): dialed number with leading 0 (if any) removed, <AddCC> with Dialed Number, Set NOA = Int
International Calls (Normalize to append +)	<ul style="list-style-type: none"> • Calling Party Number (A num): <AddCC> with DDI, Set NOA = Int • Called Party Number (B num): dialed number with leading 00 (if any) removed, Set NOA = International

- Leaf clusters do not send R-Number to Cisco PGW for the redirected calls, so R-Number is not handled at Cisco PGW.

Cisco PGW Provisioning

Cisco Unified Communications Domain Manager provisions the PGW when the following events occur in the Cisco Unified Communications Domain Manager:

- When the Cisco PGW is activated.
- When a new Cisco Unified Communications Manager cluster is added to the Cisco PGW.
- When a Country PSTN interconnection is added to the Cisco PGW.

- When a PSTN number is associated with a Cisco Unified Communications Manager cluster.

Cisco Unified Communications Manager provisions the PGW when the following events occur:

- When a location is added, even if it is a Local Breakout location
- When E.164 is added to PGW for routing incoming calls from PSTN through Central Breakout.

Dial Plan Enhancements for vPGW

Deploying Virtualized PGW for Legacy PBX Support

Cisco HCS provides Legacy PBX support using Virtualised PGW (vPGW). The vPGW deployment is a dedicated per-customer deployment requiring Legacy PBX support. The PGW Legacy PBX support should not be deployed with the PGW that serves as an aggregator for off-net calls. In other words, PGW should only be used to support either Legacy PBX or Aggregation.

Changes to PGW Static Configuration

ConnectIPPBXTransit

For the ConnectIPPBXTransit to be successful, two route lists must be created in PGW:

- rtlist2pstn#PADDEDCC#
- rtlist2lc#ICPID#

Once the SIP trunks are created, it is important to associate them with the correct dial plans to ensure that calls are routed successfully:

- Incoming trunks from Cisco Unified Communications Manager to PGW Legacy should be associated with the **EGRESSCUSTDIALPLAN2** dial plan. Value can be obtained by navigating to the **Customer > Advanced Management > View PGW Config**.
- Outgoing trunk from PGW Legacy to Cisco Unified Communications Manager should be associated with dial plan **CCMO**
- Incoming trunk from Cisco Unified Border Element to PGW Legacy should be associated with dial plan **FPADEDCC** (for example, F044)
- Outgoing trunk from PGW Legacy to Cisco Unified Border Element should be associated with dial plan **PPADEDCC** (for example, P044)

Below is an example configuration of the manual SIP Trunk required on the PGW. In the following example, the highlighted legend is as follows:

- **4000** = The Unique ID for the trunk group IN
- **4001** = The Unique ID for the trunk group OUT

- **LCprof-6** = The 6 here is used to identify the profile that is associated with the IN and OUT groups, and needs to be unique
- **10.120.1.162** = This is the IP address of the Cisco Unified Communications Manager you are connecting to vPGW
- **5100** = The 5100 is the CPID defined in the system, of the Cisco Unified Communications Manager
- **000X** = The EGRESS CUSTDIALPLAN2 configured for the Customer requiring Legacy PBX Support. This value can be obtained by navigating to the **Customer > Advanced Management > View PGW Config**

```

prov-add:trnkgrp:name="4000",type="SIP_IN",svc="sip-sigpath",clli="sip"
prov-add:profile:name="LCprof-6",type="SIPPROFILE",custgrpID="000X",MGCDomain="lc6.com",trustlevel="1",
    topologyhidingenabled="1",unsolicitednotifymethod="1"
prov-add:trnkgrp:profile:name="4000",profile="LCprof-6"
prov-add:trnkgrp:name="4001",type="IP_SIP",svc="sip-sigpath",clli="sip"

prov-add:trnkgrp:profile:name="4001",profile="LCprof-6"
prov-add:IPROUTE:NAME="ipr1-6-4001",DESC="IPRoute to 6
6001",DEST="10.120.1.162",NETMASK="255.255.255.255",
NEXTHOP="IP_NextHop1",IPADDR="IP_Addr1",PRI=1
prov-add:IPROUTE:NAME="ipr2-6-4001",DESC="IPRoute to 6
6001",DEST="10.120.1.162",NETMASK="255.255.255.255",
NEXTHOP="IP_NextHop2",IPADDR="IP_Addr2",PRI=2
prov-add:IPINMAPPING:NAME="sipin6-4001",DESC="",SIGSVCS="sip-sigpath",ALLOWEDIP="10.120.1.162",
    ALLOWEDIPNETMASK="255.255.255.255",SIPPORT=5060,TRNKGRPNUM=4000
prov-add:siptrtrnkgrp:name="4001",url="10.120.1.162",svrr=0,sipproxypport=5060,version="2.0",cutthrough=2,
    extsupport=1
prov-add:rttrnk:weightedTG="OFF",name="rtetolc6-1",trnkgrpnum=4001
prov-add:rtlist:name="rtlist2pstn#PADDEDCC#5100",rtname="rtetolc6-1",distrib="ON"

```

Cisco Unified Communications Domain Manager Provisioning of Virtualized PGW for Legacy PBX Support

Configure Virtualized PGW

Before You Begin

Before provisioning virtualized PBW, it is assumed that

- The components (vPGW, Cisco Unified Communications Manager, IOS Devices) all conform to the Cisco HCS versions stated in the *Cisco HCS Compatibility Matrix*.
- The latest 8.1.x-G1 Model including IOS_15.x and PGW MML and Times Ten models have been loaded.
- Provider, Reseller, Customers, and Locations have been provisioned.
- Cisco Unified Communications Manager clusters are added with a CPID > 5000 or above.

- The Cisco Unified Communications Manager cluster has been connected to the Classic or Standard PGW if there is one in the network.

Procedure

- Step 1** Under **Network > Transit**, add the vPGW to the Provider network.
- Step 2** Choose the newly-added vPGW and load the initial configuration on vPGW.
- Step 3** Under **Network > PBX Devices**, add an Unmanaged PBX to mirror the legacy PBX.
- Step 4** Under **Network > PBX Devices**, choose the appropriate Unified Communications Manager device being used by the Customer. Select **Connectivity** and **PBX > Transit**. Connect Unified Communications Manager to vPGW.
- Step 5** Under **Network > PBX Devices**, choose the appropriate Unified Communications Manager device being used by the customer. Select **Connectivity** and **PBX > Connection Destination**. Add a Connection Destination.
- Step 6** Under **Parent Connection > Trunks**, add a Trunk with **protocol = SIP, template = TovPGW-Legacy**.
- Step 7** Under **Parent Connection > Route Patterns**, add a Route Pattern in the InterSiteRoutingPT partition to route all calls beginning with “!” to the SIP trunk above.
- Step 8** Under **Network > Hardware Groups**, add Hardware Group with Action = “Adding Locations – Transit”. Choose the vPGW and Unmanaged PBX to be part of the Hardware Group.
- Step 9** Choose the customer requiring Legacy PBX support. Under **Advanced Management > Hardware Groups**, connect the customer to the new Hardware Group.
- Step 10** Add an Unmanaged Location using the above Hardware Group.
-

Configure IOS Device

Use the following procedure to configure an IOS device. For the actions in this procedure, follow the steps documented in *CUCDM IOS Gateways Guide for HCS 9.1(1)*.

Procedure

- Step 1** Under **Network > IOS Devices**, add a transit-controlled MGCP Device. Ensure that **Gateway** is the Device Role chosen.
- Step 2** Add IOS Gateway. Select **MGCP** as the protocol for legacy gateways.
- Step 3** Add **Legacy PBX Hardware Configuration**.
- Note** If using a C29xx gateway, Cisco recommends that you add the device with a gateway type = C28xx. This is because PGW generates an error during trunk activation on the unsupported extnode type.
- Step 4** Add and configure legacy port settings.
- Note** For DPNSS, an ISDN switch type of primary-dpnss should be selected. However, Cisco Unified Communications Domain Manager currently does not display this option in the drop-down menu.
-

Activate IOS Gateway

Procedure

Under **Location Administration > Telephony > Legacy Gateways**, select the ports to be activated. This adds the DPNSS/QSIG trunk on the vPGW.

Cisco vPGW Softswitch Dial Plans

Cisco Unified Communications Domain Manager creates the dial plans shown in the following table on the Cisco vPGW Softswitch. Trunks are added manually and the trunk profiles are associated with respective dial plans like cluster CPID, P(PADDEDCC).

Table 6: Cisco vPGW Softswitch Dial Plans

Dial Plan Name	Function	Step to Create
LCRT	Leaf cluster routing for routing the call to the correct leaf cluster that owns the PSTN number.	InitTransit
BART	Destination and Origination based Routing Determination table.	InitTransit
DART, DBRT and DCRT	Destination Based Routing Table.	InitTransit
F#PADDEDCC# and P#PADDEDCC#	Adding Country Dial Plan to handle incoming and outgoing calls using the country specified interconnect.	AddCountryTransits
DBRT	Provision Force Off-Net support, by default all calls are Force On-Net.	AddTransitForceOffNet
#ICPID#	Per-cluster Dial Plan, for handling calls to and from the cluster.	ConnectIPPBXTransit

Bulk Load Dial Plan and Platform Base Data Settings

To begin the initial system build, upload the Base Data loaders into Cisco Unified Communications Domain Manager. For details about base data loaders, refer to *Bulk Loader Guide for Cisco Unified Communications Domain Manager 8.1.4*.

Procedure

- Step 1** Browse to **General Tools > Bulk Load Tools**. Select **Schedule New Job**.
- Step 2** Browse to the folder containing the Base Data workbooks.
- Step 3** Load the following files:
- 01-CUCDM814-VS-P1-BaseData-DialPlanSpecific-v1-x(HCS-G1-G2-G3), where x is the workbook version number
 - 01-CUCDM814-VS-P1-BaseData-PlatformSpecific-v1.x, where x is the workbook version number
-

Bulk Load HCS Dial Plan Models

For details about bulk load dial plan models, refer to *Bulk Loader Guide for Cisco Unified Communications Domain Manager 8.1.4*.

Procedure

- Step 1** Browse to **Dial Plan Tools > Configuration Models > Model Loader**. Select **Schedule New Job**.
- Step 2** Click the **Browse** button.
- Step 3** Upload the required set of dialplan loaders.
- Note**
- Discuss the exact selection of Cisco HCS models with your Cisco HCS Platform dial team in advance, and check for any model updates.
 - Ensure the Base-Data loaders have been loaded BEFORE loading any dialplan models.
 - Ensure the loaders are added in the order shown.
 - If the main leaf-cluster model has to be reloaded, it will clear ALL the Unified Communications Manager model tables and all the Add-On Country dialplan loaders need to be reloaded.
-

Cisco IOS Model and Call Routing

The Cisco IOS model is used to provision analog gateways and Cisco IOS gateways. Cisco IOS gateways can be deployed at each location and can be used for the local breakout (LBO) to PSTN (optional). An IOS gateway may be used to route IP phone connectivity to Cisco Unified Communications Manager and may be used as a DHCP server for local phones. Cisco IOS gateways can also be deployed to provide Survivable Remote Site Telephony (SRST), media resources, and legacy PBX (QSIG, DPNSS) connection gateways that are MGCP controlled.


Looping Dial Plan Call Processing

The HCS 10.0 CUCDM 8.1(x) Looping CSS dial plan leverages the Use Originator's CSS feature of CUCM 10.0.


The call processing consists of the following stages as shown in the diagram below.

- Dial Plan Determination (Internal and PSTN dial plan), subsequent bullet points are only applicable to PSTN calls
- Origination Call Screening
- Country Dial Plan PDD elimination, Normalization and Call Type Classification
- Feature processing (i.e. Forced OnNet, COS, CLIP/CLIR, FAC, CMC and Security Screening)
- Line CSS based Routing (except Emergency Calls - Device CSS based)

Figure 4: Call Processing – Overview

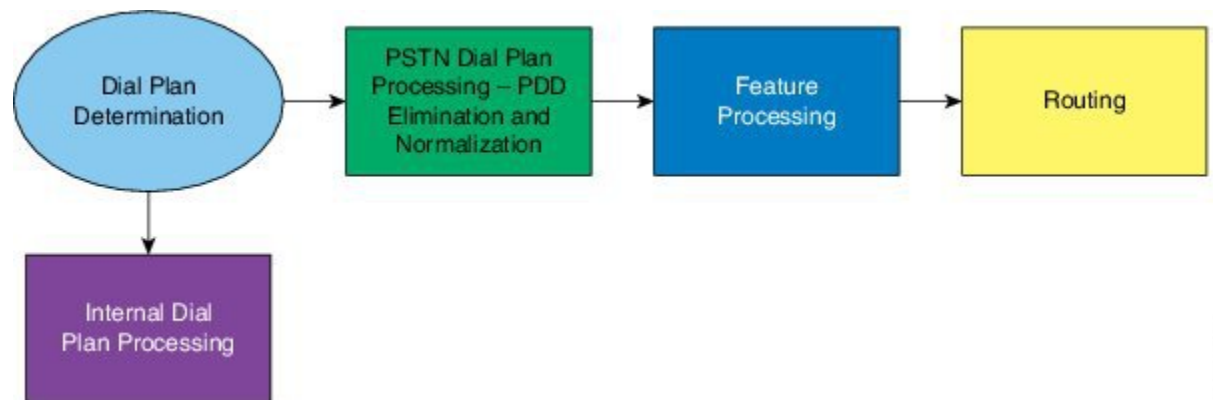

The call processing is implemented as shown below.

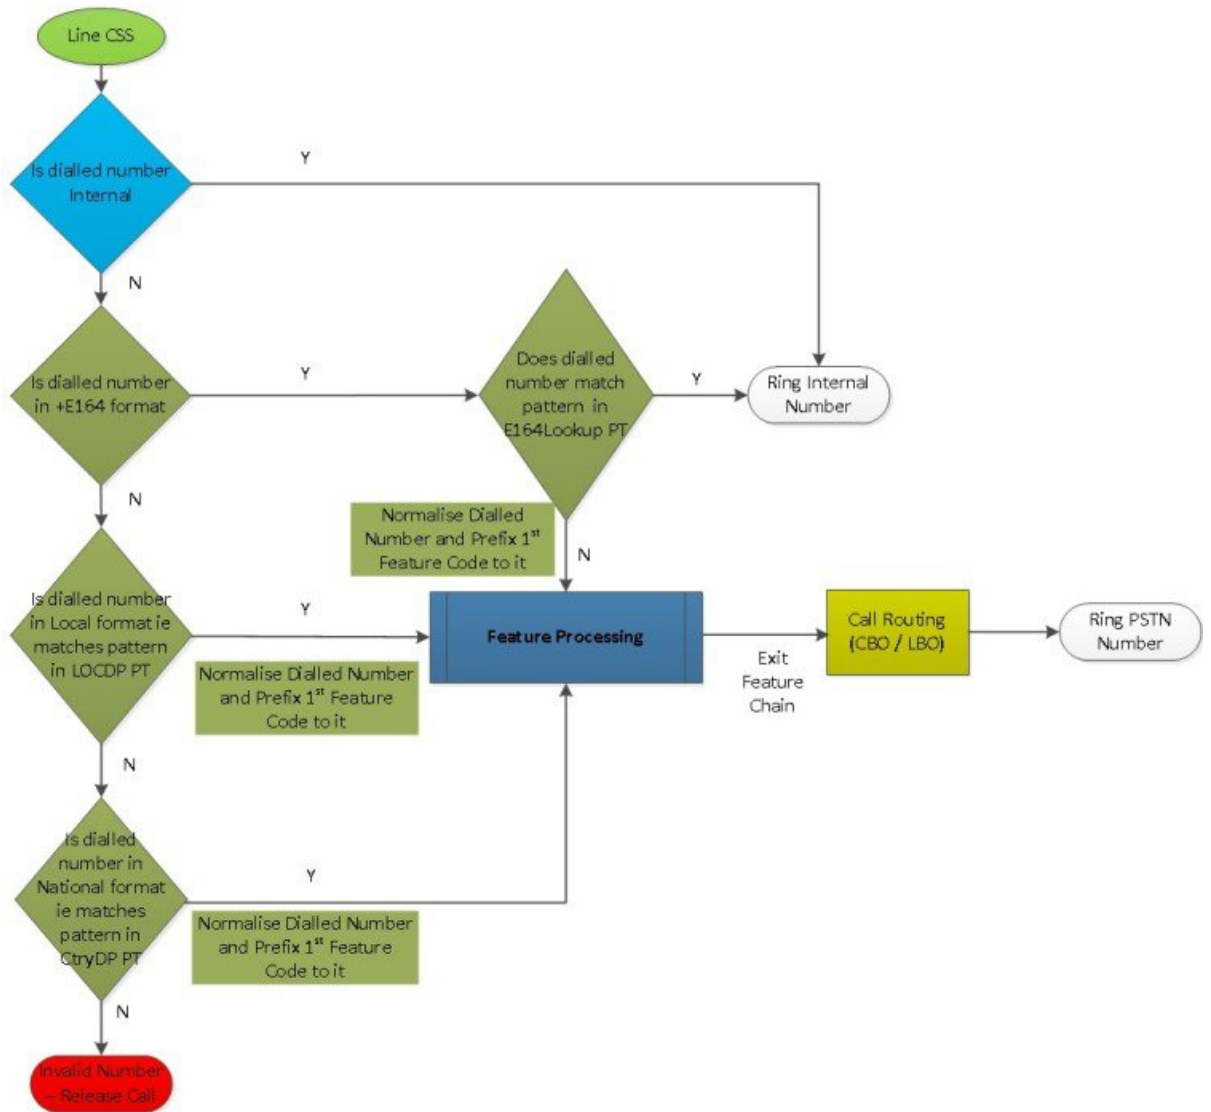

Note Features and Routing is based on Call Type rather than Dialed Number.



Note Features are independent of the country dial plan.



Note Country Dial Plan consists of only blocking and allow patterns.

Dial Plan Determination

The first stage of call processing is the determination of which dial plan to apply against the incoming call.

Option 1: Incoming Dial Plan Processing

Internal call handling is based on Flat Dial Plan.

Option 2: PSTN Dial Plan Processing

PSTN Breakout code is used for dialing PSTN numbers. It is a single digit number and is country specific (i.e. PSTN breakout code is per country).

For example all Singapore locations will be configured with 9 as PSTN access prefix.



Note

The PSTN dialing prefix is set as an HCS system setting in the Country Dial Plan Base Data file and cannot be changed on a per tenant basis.

Internal Dial Plan

The HCS G2 dial plan requires unique extensions (including Voicemail pilot numbers) across all of the customer's locations. This uniqueness needs to be managed by the provider. Cisco Unified Communications Domain Manager will not enforce extension number uniqueness in the system.

Extension numbers lengths are variable but are fixed within a customer and can vary across different customers.

Country Dial Plan

Each country dial plan deployed will have a Country DP PT (CTRYDP4-#ISO#-PT) containing all country specific Translation Patterns for all call types except Local and for each site/location a Local DP PT (LOCLDP4-#ISO#-PT) containing Translation Patterns for Local dialing.

The local dialing pattern is build base on the following data collected from the user:

- 1 Local Area Code if present and if it part required for local dialing
- 2 The number of digits for the local (subscriber) number.

The objective of each pattern in these two partitions is to eliminate PDD, Normalize the Called Number, Prefix the first feature code (FONet) of the feature chain, the CLIP/CLIR indicator and the Call Type to the Called Number.

Site/Location specific Partitions for Emergency Dialing and AnalogLineCOS are also present.

All the above mentioned partitions have a time schedule set to 'All Day'.

Feature Processing

Feature Chaining Concept

The feature chaining concept is when a set of feature are link together to form a list of feature to be process sequentially. Each feature in the chain follows the following implementation guide:

- 1 Each feature is made up of a feature component with or without a Time Schedule partition.
- 2 Each feature code is implemented by a one or more Translation Patterns.
- 3 Feature Code patterns are unique within the CSS.
- 4 The Translation Patterns belonging to a feature strip the existing Feature code pattern and Prefix the next feature code pattern in the Called Number Transformation except for the last feature in the chain.
- 5 The translation patterns of the first feature code in the chain matches the Feature code inserted by the Country Dial Plan. The Country Dial Plan prefixes the following pattern to the Normalized Called Number:
 - a ++010<CallType><IntlDialCode> - FONet feature with Default CLIR/CLIP invoked
 - b ++011<CallType><IntlDialCode> - FONet feature with per Call CLIR/CLIP invoked
 - c ++012<CallType><IntlDialCode> - FONet feature with toggle CLIR/CLIP invoked.

Where,

The first two digits is the 1st feature Code (FONet).

The 3rd digit is the CLIP/CLIR indicator. Possible values are:

- 0 - Default COS. Either Default CLIP or Default CLIR
- 1 - Per Call CLIP or CLIR
- 2 - Per Call Toggle CLIP/CLIR

The next 2 digits are the 12 Call Types. Possible values are:

- 01 - International (Intl)
- 02 - National (Natl)
- 03 - Mobile (Mobl)
- 04 - Emergency (Emer)
- 05 - Service (SVC)
- 06 - Local (Locl)
- 07 - Premium Rate Service (PRS)
- 08 - Free Phone Numbers (FPN)
- 09 - Personnal Communication Service (PCS)
- 10 - Special Rate Service (SRS)
- 11 - Operator (OPR)
- 12 - International Restricted (IntIR)

The last set of digits is the IntlDialCode. The Country specific International Dial Code is present in the CtryDP Base Data xls.

All feature in the chain use the CSS Hierarchy feature except for the last feature in the Chain.

Feature that involves Route Pattern is the last combine feature of the chain.

The diagram below is a logical view of a chain of features.

Figure 5: Feature Chain



The following features are supported with the current HCS Dial Plan:

- 1 Forced OnNet (Feature Code 01)
- 2 Originating Call Screening (Feature Code 02)
- 3 Time of Day (ToD) with CLIR / CLIP (Feature Code 03)
- 4 FAC (Feature Code 04)
- 5 CMC (Feature Code 05)
- 6 Security Screening for Routing (Feature Code 06)

Forced OnNet Feature

This feature handles a user dialing a PSTN number of another user within the same organization. In the case of click to dial (assumption is that the number is in plus E164 format), Forced OnNet is always enforced via the inclusion of the E164LookUp partition in the Class of Service CSS in order to bypass the blocking partition.



Note

This feature handles the use case where a User with a particular COS dials the allowed numbers using PSTN breakout code and IDD/STD code. I.e. non-E164 number format.

The Forced OnNet feature is only applicable for the Intl, Natl, Mobl, Locl and PCS call types.

The Forced OnNet feature does not do Forced OnNet for call types other than the ones listed i.e. SVC, PRS, FPN, SRS, OPR call types.

For the Intl, IntlR, Natl, Mobl, Locl and PCS call types the Forced OnNet feature is implemented as follows for the 3 CLIP/CLIR scenarios - default CLIP/CLIR COS, per call CLIP/CLIR and toggle CLIP/CLIR-

- 1 a partition to handle Forced OnNet.
- 2 a CSS and a partition for each Call Type.
- 3 the E164LookUp and per Call Type partition associated to the per Call Type CSS. If the Called Number matches a pattern in the E164LookUp the call is Forced OnNet.
- 4 the '+.!' Pattern added to the per Call Type partition, which does a PreDot and Prefix the code of the next feature to the Called Number. This wild card patterns traps all calls that are not Forced OnNet for that Call Type. The pattern is mark to use 'Use Originator's CSS'. At this point, for security purpose, the Calling Number is prefixed with *2* and it (Calling Number) will be checked during the last feature (Security Screening) implementation
- 5 Similar patterns added to the Forced OnNet partition to handle each supported Call Type.
- 6 Each of these patterns remove the feature code and normalize it to plus E164 Called Number and send the call to the above per Call Type CSS.



Note

To simplify the diagrams in the sections of Stage2: Feature Processing and Stage3: Routing, the Line CSS is shown twice.

Figure 6: Forced OnNet with default CLIP/CLIR COS

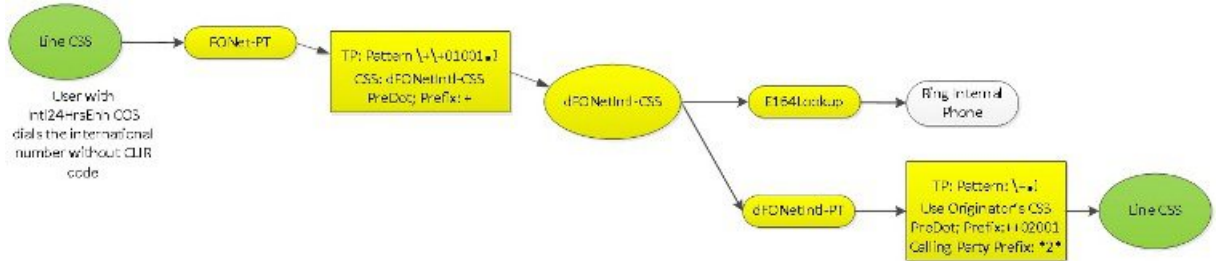


Figure 7: Forced OnNet with Per Call CLIP/CLIR code


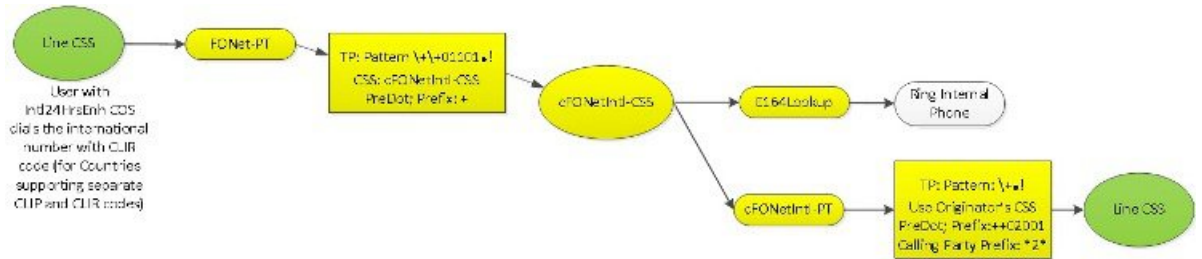


Figure 8: Forced OnNet with toggle CLIP/CLIR code

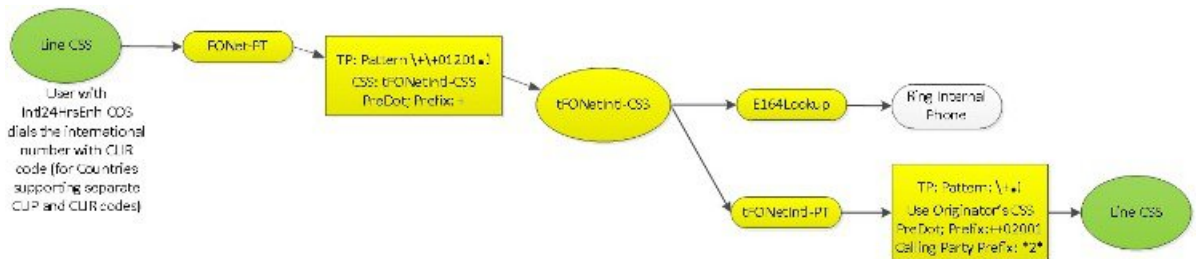

Similar flows are allowed in the dial plan for Users dialing International Restricted, National, Mobile, Local and PCS numbers in non-E164 format.

Originating Call Screening Feature


Originating Call Screening is achieved by using a combination of the available Blocking partitions and an Allow Partition.



Note All blocking is 'All Day'.

At present there are 11 blocking partitions associated with a specific Call Type and a Block All PSTN partition as follows:

Figure 9: Originating Call Screening

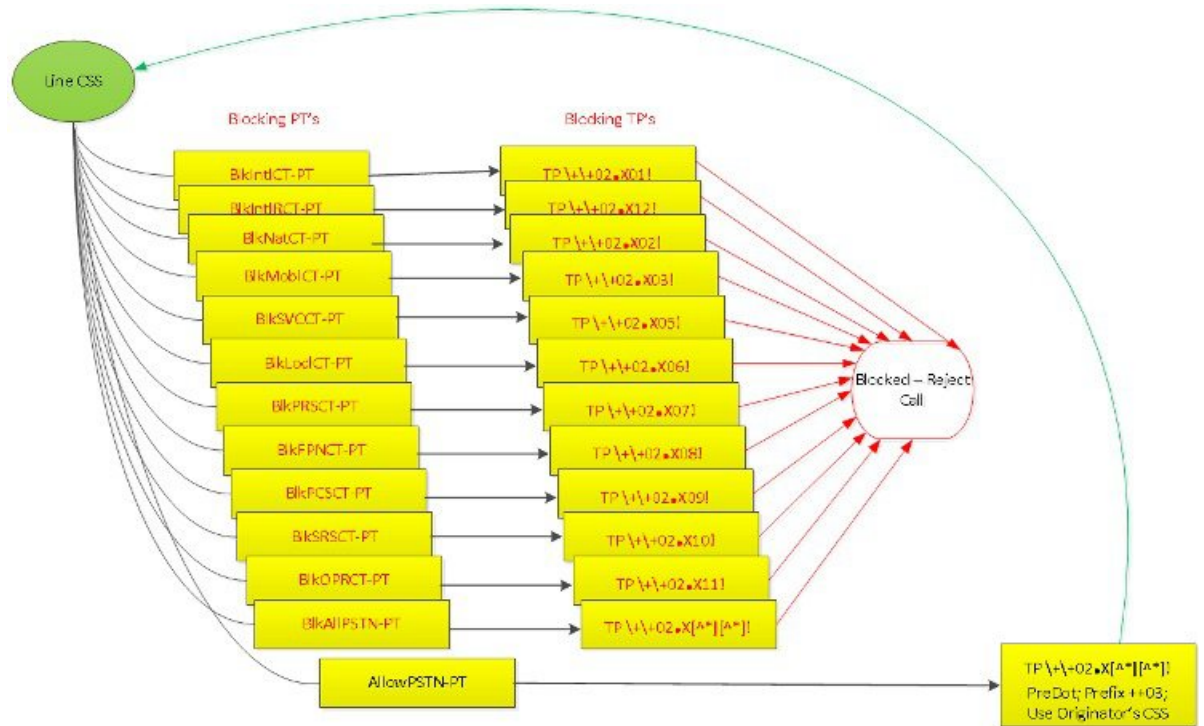

- 1 BlkIntlCT-PT - Block International Call Type (01) Numbers
- 2 BlkIntlRstCT-PT - Block International Restricted Call Type (12) Numbers
- 3 BlkNatlCT-PT - Block National Call Type (02) Numbers
- 4 BlkMoblCT-PT - Block Mobile Call Type (03) Numbers
- 5 BlkSVCCT-PT - Block Service Call Type (05) Numbers - Any number that needs to be sent as Dialed excluding the PSTN Breakout Code)
- 6 BlkLoclCT-PT - Block Local Call Type (06) Numbers
- 7 BlkPRSCT- PT - Block Premium Rate Service Call Type (07) Numbers
- 8 BlkFPNCT- PT - Block Free Phone Service (Toll Free) Call Type (08) Numbers
- 9 BlkPCSCT- PT - Block Personal Communications Service Call Type (09) Numbers
- 10 BlkSRCT- PT - Block Special Rate Service Call Type (10) Numbers
- 11 BlkOPRCT- PT - Block Operator Rate Service Call Type (11) Numbers
- 12 BlkAllPSTN- PT - Block All PSTN Numbers

**Note**

Call Type 04 is for Emergency Calls but is not relevant for this feature as Emergency Calls use the Device CSS and are always allowed.

Each of the above partition contains a set of Translation Pattern that blocks the specific call type associated to that partition.

For example, calls made to International number by a User with Natl24HrsEnh COS will be blocked.

ToD with CLIP/CLIR Feature

The third feature that consumes the above feature code is the Time of Day in combination with CLIR/CLIP feature. This combination produces 4 partition options listed below but only one is used to create a Class of Service.

- 1 24Hrs with Default CLIP
- 2 24Hrs with Default CLIR
- 3 Working Hrs with Default CLIP
- 4 Working Hrs with Default CLIR

The feature is implemented as follows:

- 1 Two Time Schedules are created, i.e. 24 hours and Working hours.
- 2 Each Time Schedule support two partitions, one for handling Default CLIR and the other for Default CLIP.
- 3 Each partition contains three patterns to handle the Feature Code ++030, ++031 and ++032, by modifying the Calling Name and Number Presentation.

4 Each translation pattern in turn prefixes code for the next feature (FAC) in the chain.

Figure 10: 24 Hours CLIP

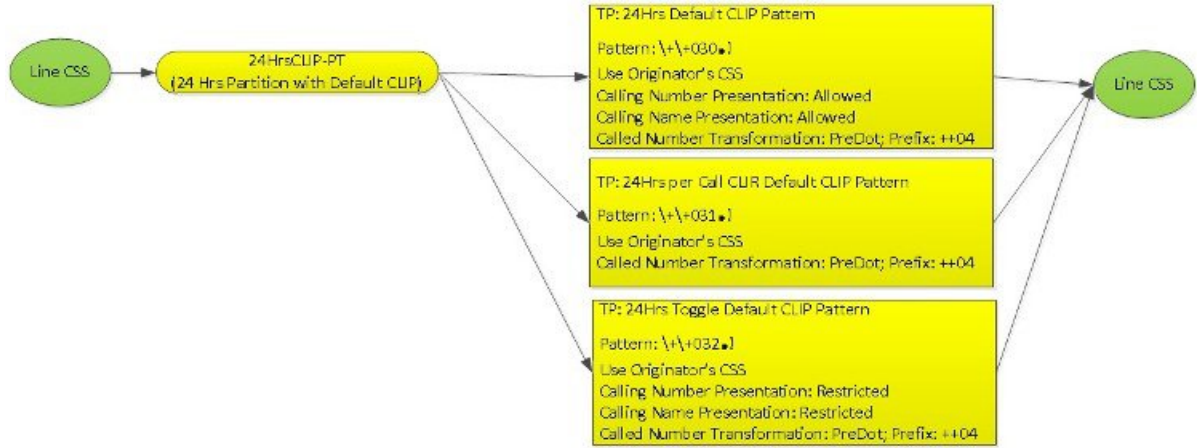


Figure 11: 24 Hours CLIR

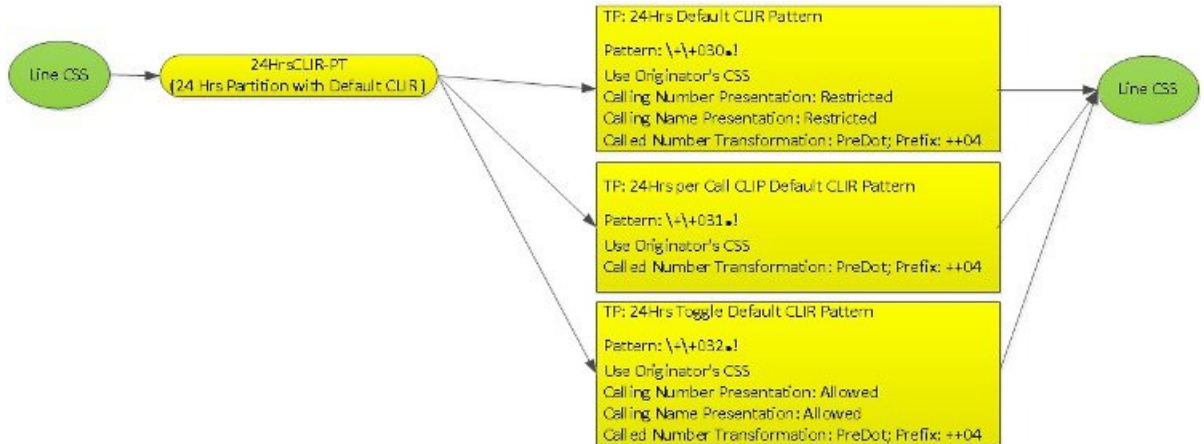


Figure 12: Working Hours CLIP


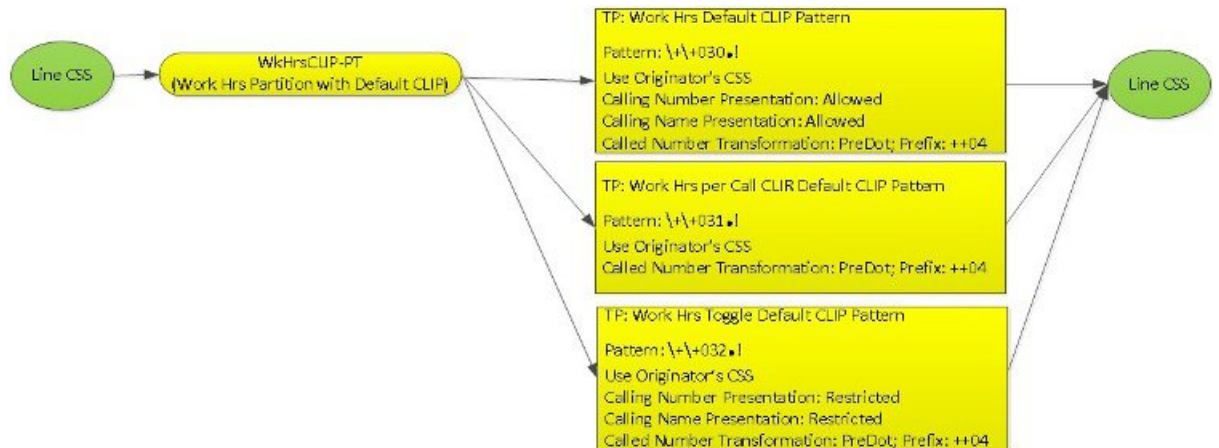


Figure 13: Working Hours CLIR

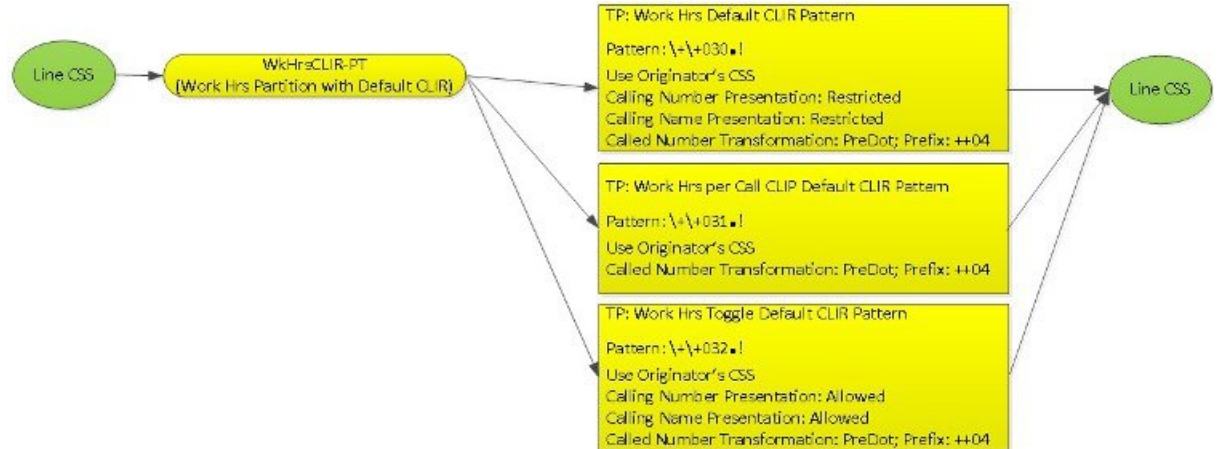

Forced Authorization Code (FAC) Feature


The fourth feature that consumes the above feature code is the FAC feature. Depending on the COS assigned to the worker type, he/she can either dial the destination numbers without having to enter the FAC codes OR can dial the destination numbers only after entering the FAC codes.

Implementation as follows:

- 1 FAC Feature Code is ++04.
- 2 The FAC feature supports two partitions, one for handling all call types without FAC and the other for handling all call types with FAC.
- 3 Each partition contains two translation patterns to handle all the call types.


- For all call types without FAC, the two translation patterns in the noFAC-PT prefix the called number with ++050 code for the next feature (CMC) in the chain.

Figure 14: no FAC for all Call Types

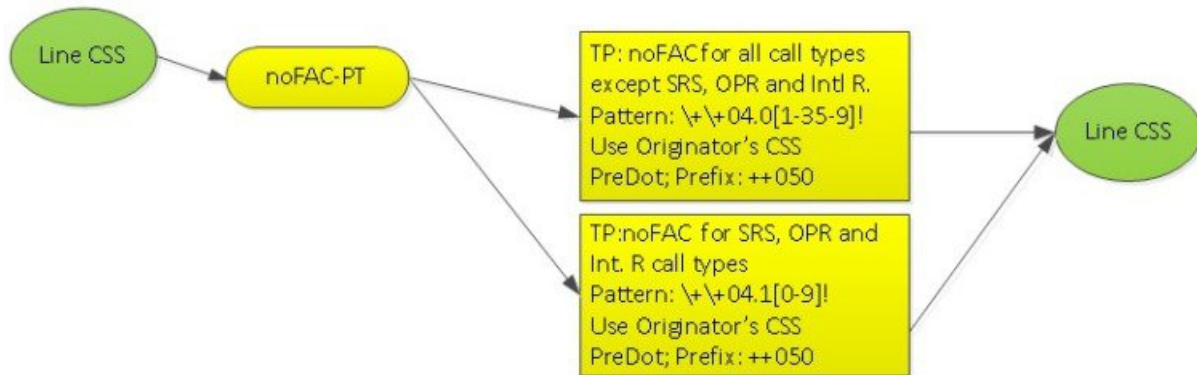

- For all call types with FAC, the two translation patterns in the FAC-PT prefix the called number with ++051 code for the next feature (CMC) in the chain.

Figure 15: FAC for all Call Types

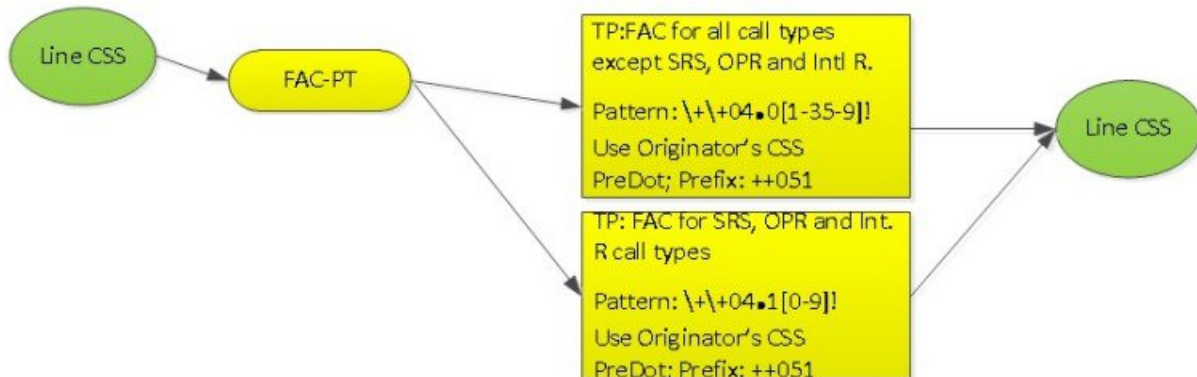

Client Matter Code (CMC) Feature


The fifth feature that consumes the above feature code is the CMC feature. Depending upon the COS assigned to the worker type, he/she can dial the destination numbers using either of following FAC/CMC codes combination.

- no FAC with no CMC
- FAC with no CMC
- no FAC with CMC
- FAC with CMC

Similar to FAC handling, the CMC feature supports two partitions.

The partition noCMC-PT has four translation patterns as shown below of which two are for handling no FAC and no CMC combination for all call types - Called Number Prefix with ++0610 and the other two translation patterns for handling FAC with no CMC combination for all call types - Called Number Prefix with ++0611.


Figure 16: FAC/no CMC for Call Types

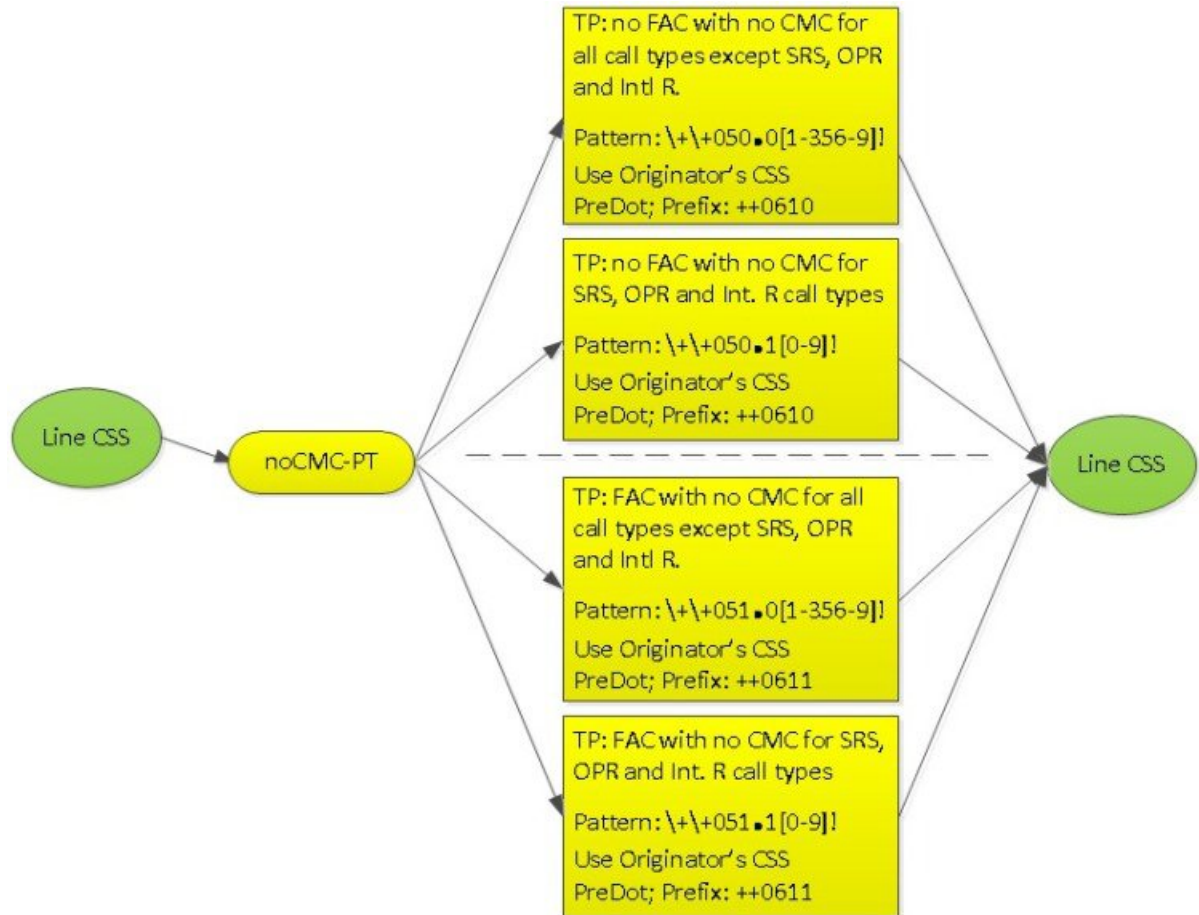

The partition CMC-PT has four translation patterns shown below of which two are for handling no FAC with CMC combination for all call types - Called Number Prefix with ++0612 and the other two translation patterns are for handling FAC with CMC combination for all call types - Called Number Prefix with ++0613.

The above translation patterns prefix the last feature (Security Screening for Routing).

Figure 17: FAC/CMC for Call Types

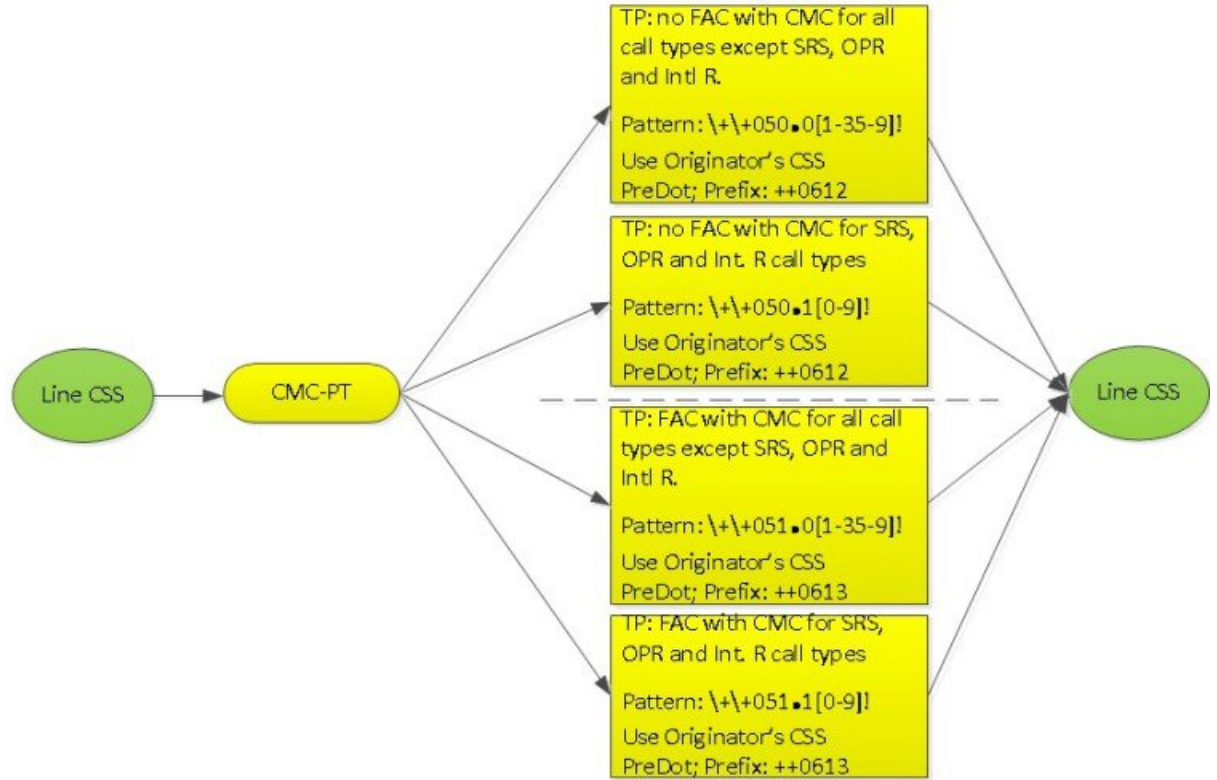

Security Screening for Routing Feature

Prior to routing the call either using Central Breakout (CBO) or Local Breakout (LBO), the last feature in the feature chain does the following


- 1 For all call types (with all FAC/CMC combinations), the call is routed based on Calling number
- 2 For CBO, the Calling number is screened to check if it is prefixed with *X* and For LBO, the Calling number is screened to check if it prefixed with a more specific pattern *2*.
- 3 Transforms the Called Party Number for all call types (except Service and Operator) by doing a PreDot discard and prefixes +
- 4 Transforms the Called Party Number for Service and Operator Call Types by doing a PreDot discard and prefixes +#COUNTRY#

Please refer the following diagrams for details.

Figure 18: Security Screening for CBO Routing – Part 1 – Calling Number Screened and Modified



Figure 19: Security Screening for CBO Routing – Part 2 – Called Number Modified

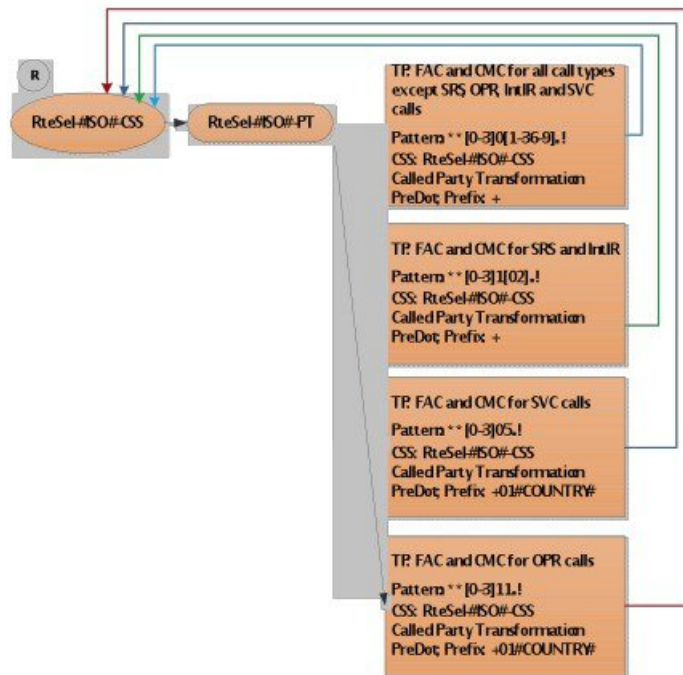



Note

Depending on Customer requirement to route specific call types with a particular FAC/CMC combination, more specific Route Patterns can be used to override the catch all Translation Patterns for Call Types and all FAC/CMC combinations. For CBO, this can be done using Generic SIP Trunk as shown in Stage 3: Routing section.

Figure 20: Security Screening for LBO Routing – Part1 – Calling Number Screened and Modified


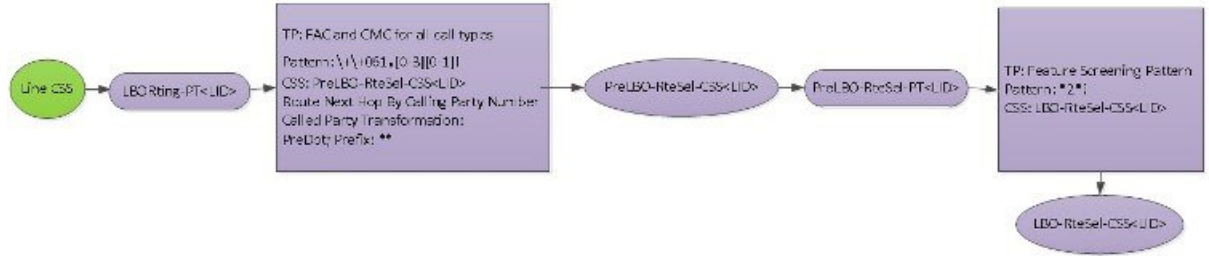


Figure 21: Security Screening for LBO Routing – Part2 – Called Number Modified

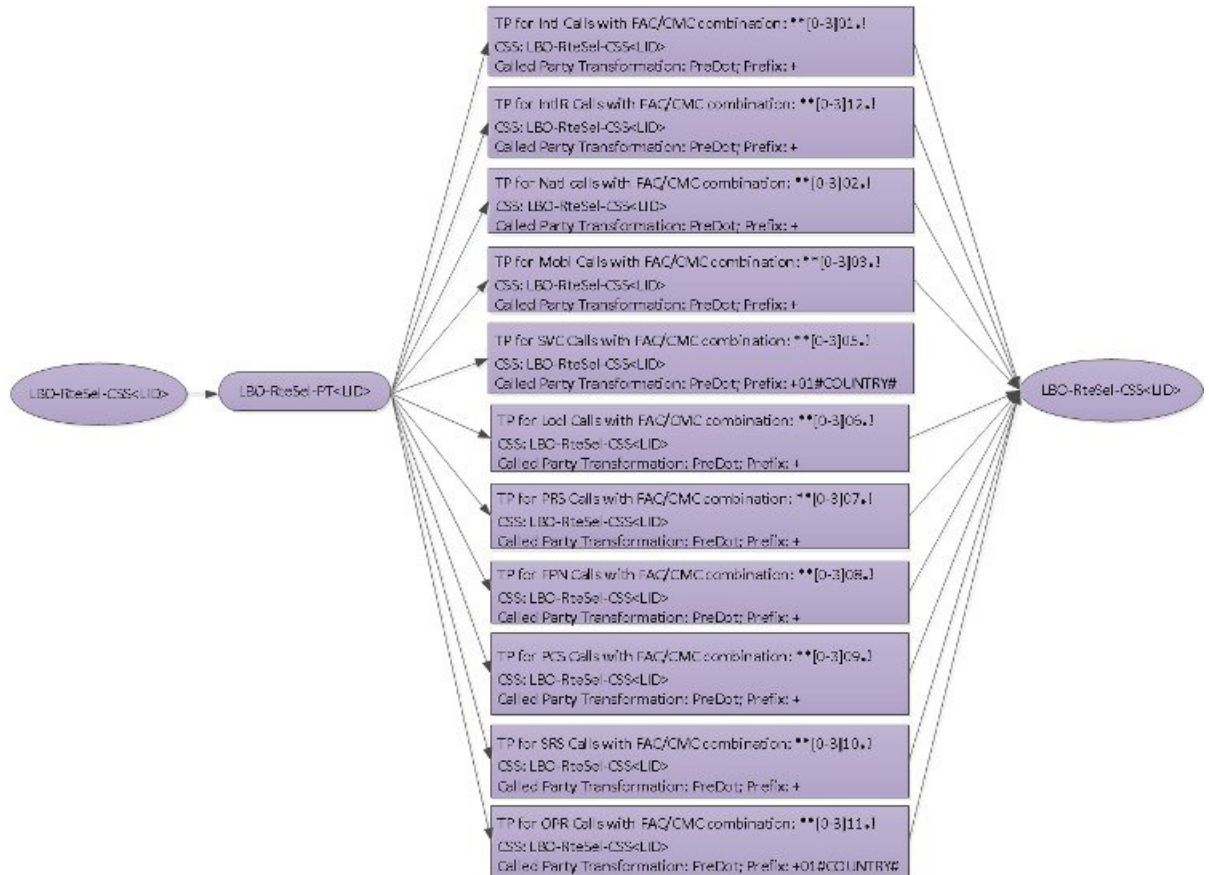

**Note**

To simplify the Called Number modified diagram, the LBO-RteSel-CSS<LID> is shown twice instead of showing the Translation Patterns return to the same CSS.

**Note**

Depending on Customer requirement to route specific call types with a particular FAC/CMC combination using LBO, more specific Route Patterns can be used to override the catch all Translation Patterns for Call Types and all FAC/CMC combinations. For LBO, this can be done using ENT template as shown in the Stage3: Routing section.

Routing


The routing is done in the following ways for CBO and LBO.

Central Break Out (CBO)

The routing of all call types without FAC/CMC is achieved using the Route Patterns, Route Lists, Route Groups, Trunks defined in the Generic SIP trunk.

Depending on Customer requirement, the routing of specific call types with a particular FAC/CMC combination can be done using the specific route patterns in the Generic SIP trunk. As mentioned previously these specific route patterns would override the catch all translation patterns listed earlier.

Figure 22: CBO Routing FAC/CMC Combinations

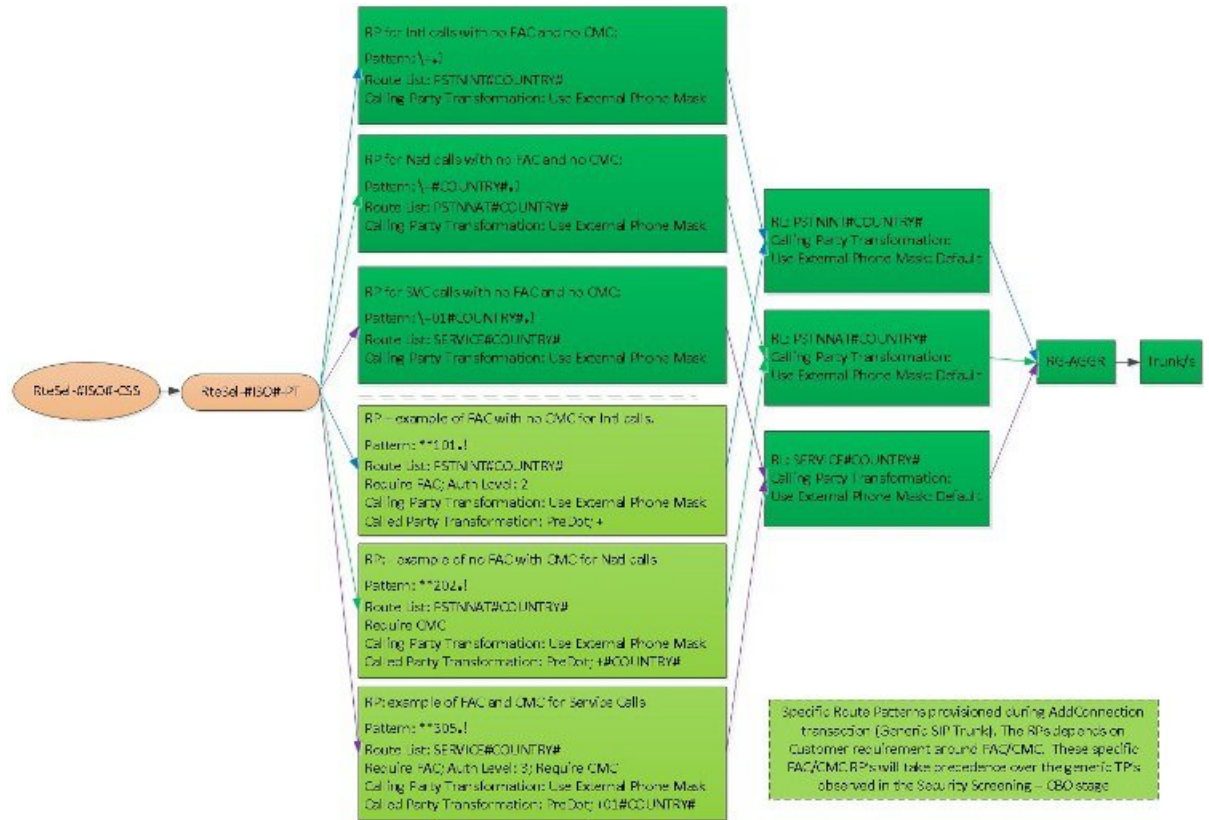


Local Break Out (LBO)

The routing of all call types without FAC/CMC is achieved using the Route Patterns, Route Lists, Route Groups, IOS g/w defined in the Generic Leaf Cluster Model.

Depending on Customer requirement, the routing of specific call types with particular FAC/CMC combinations can be achieved using ENT templates. As mentioned previously these specific route patterns would override the catch all translation patterns listed earlier.

Figure 23: LBO Routing FAC/CMC Combinations

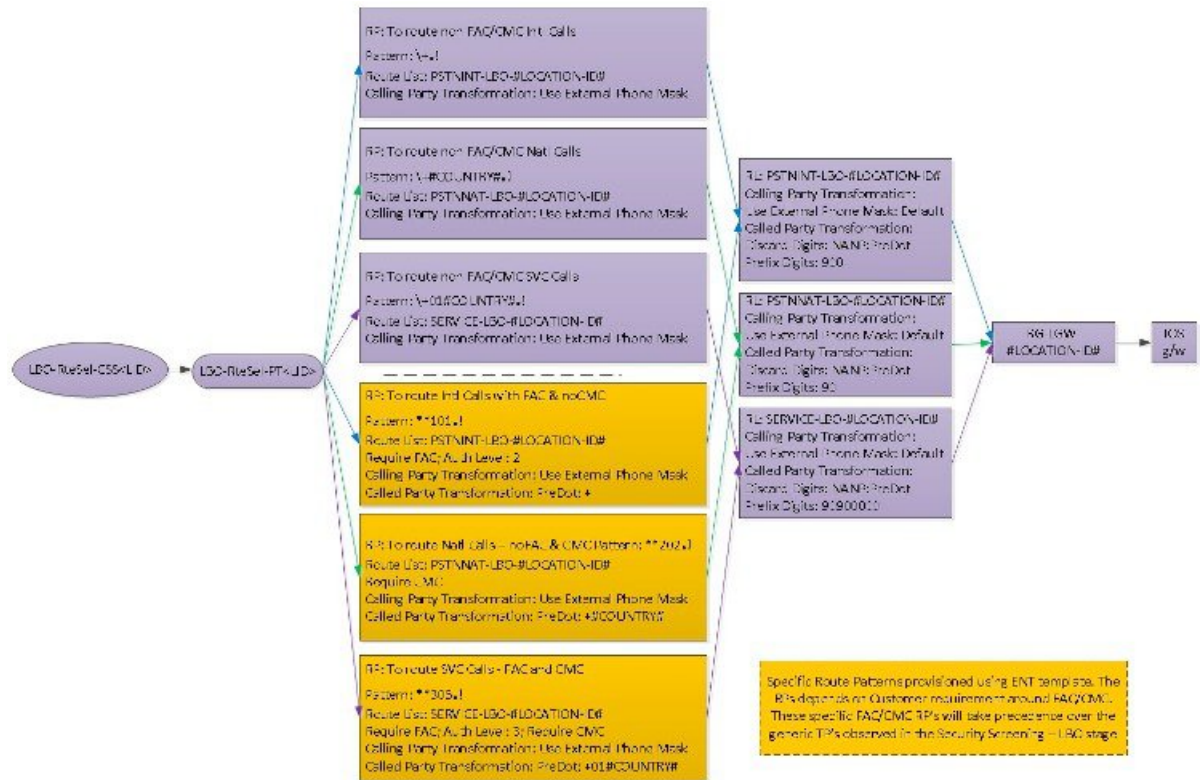

Other Considerations

There are several considerations to the current Dial Plan Model. Some of the considerations and their impact are listed in the following table.

Table 7: Dial Plan Considerations

Item	Description	Impact
Number of Dial Plans	Only one Dial Plan Model per Service Provider is supported.	This limit affects migration of customers from one release to another. After the new Dial Plan Model is loaded, all customers on the previous model must migrate to the new model.
Number Construction	The number construction rules define how an internal DN, site codes, display policies, and so on are constructed.	The rules limit how Internal DNs are constructed, how calling party number appear for intrasite calls, intersite calls, and so on.

Item	Description	Impact
Dial Prefixes	Dial prefixes include: Extension prefix, Intersite prefix, and PSTN prefixes.	<p>The PSTN prefix is currently defined at a Country Level. All customers within the same country have to dial the same PSTN prefix.</p> <p>If ISP is used, the extension prefix is supported using ENT templates.</p> <p>There is no support for Extension Prefix in the current model.</p>

