



Phase 5-Upgrading Optional Components

- [Cisco Expressway, on page 1](#)
- [Cisco Paging Server, on page 1](#)

Cisco Expressway

To upgrade Cisco Expressway, see the *Install and upgrade Guides*: <http://www.cisco.com/c/en/us/support/unified-communications/expressway-series/products-installation-guides-list.html>.

Cisco Paging Server

To upgrade Cisco Paging Server, see the *Maintain and Operate Guides*: <http://www.cisco.com/c/en/us/support/unified-communications/paging-server/products-maintenance-guides-list.html>.

