



## Service Discovery

- [Configuration URL Workflow, page 1](#)
- [Mobile Configuration Using Enterprise Mobility Management, page 4](#)
- [Manual Connection Settings, page 5](#)
- [Installer Switches: Cisco Jabber for Windows, page 8](#)

## Configuration URL Workflow

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<a href="#">Configuration URL, on page 1</a>	
<b>Step 2</b>	<a href="#">Provide Users with Configuration URL from a Website, on page 4</a>	

## Configuration URL

To enable users to launch Cisco Jabber without having to manually enter service discovery information, create and distribute a configuration URL to users.

You can provide a configuration URL link to users by emailing the link to the user directly, or by posting the link to a website.

Include the following parameters in the URL:

- **ServicesDomain**—Required. Every configuration URL must include the domain of the IM and presence server that Cisco Jabber needs for service discovery.
- **VoiceServiceDomain**—Required only if you deploy a hybrid cloud-based architecture where the domain of the IM and presence server differs from the domain of the voice server. Set this parameter to ensure that Cisco Jabber can discover voice services.

- **ServiceDiscoveryExcludedServices**—Optional. You can exclude any of the following services from the service discovery process:
  - **WEBEX**—When you set this value, the client:
    - Does not perform CAS lookup
    - Looks for:
      - `_cisco-uds`
      - `_cuplogin`
      - `_collab-edge`
  - **CUCM**—When you set this value, the client:
    - Does not look for `_cisco-uds`
    - Looks for:
      - `_cuplogin`
      - `_collab-edge`
  - **CUP**—When you set this value, the client:
    - Does not look for `_cuplogin`
    - Looks for:
      - `_cisco-uds`
      - `_collab-edge`

You can specify multiple, comma-separated values to exclude multiple services.

If you exclude all three services, the client does not perform service discovery and prompts the user to manually enter connection settings.

- **ServicesDomainSsoEmailPrompt**—Optional. Specifies whether the user is shown the email prompt for the purposes of determining their home cluster.
  - ON
  - OFF
- **EnablePRTEncryption**—Optional. Specifies that the PRT file is encrypted. Applies to Cisco Jabber for Mac.
  - true
  - false
- **PRTCertificateName**—Optional. Specifies the name of the certificate. Applies to Cisco Jabber for Mac.
- **InvalidCertificateBehavior**—Optional. Specifies the client behavior for invalid certificates.

- **RejectAndNotify**—A warning dialog displays and the client doesn't load.
- **PromptPerSession**—A warning dialog displays and the user can accept or reject the invalid certificate.
- **PRTCertificateUrl**—Specifies the name of a certificate with a public key in the trusted root certificate store. Applies to Cisco Jabber mobile clients.
- **Telephony\_Enabled**—Specifies whether the user has phone capability or not. The default is true.
  - True
  - False
- **ForceLaunchBrowser**—Used to force user to use the external browser. Applies to Cisco Jabber mobile clients.
  - True
  - False




---

**Note** ForceLaunchBrowser is used for client certificate deployments and for devices with Android OS below 5.0.

---

Create the configuration URL in the following format:

```
ciscojabber://provision?ServicesDomain=<domain_for_service_discover>
&VoiceServicesDomain=<domain_for_voice_services>
&ServiceDiscoveryExcludedServices=<services_to_exclude_from_service_discover>
&ServicesDomainSsoEmailPrompt=<ON/OFF>
```




---

**Note** The parameters are case sensitive. When you create the configuration URL, you must use the following capitalization:

- ServicesDomain
- VoiceServicesDomain
- ServiceDiscoveryExcludedServices
- ServicesDomainSsoEmailPrompt
- EnablePRTEncryption
- PRTCertificateURL
- PRTCertificateName
- InvalidCertificateBehavior
- Telephony\_Enabled
- ForceLaunchBrowser

---

## Examples

- `ciscojabber://provision?ServicesDomain=cisco.com`
- `ciscojabber://provision?ServicesDomain=cisco.com  
&VoiceServicesDomain=alphauk.cisco.com`
- `ciscojabber://provision?ServicesDomain=service_domain  
&VoiceServicesDomain=voiceservice_domain&ServiceDiscoveryExcludedServices=WEBEX`
- `ciscojabber://provision?ServicesDomain=cisco.com  
&VoiceServicesDomain=alphauk.cisco.com&ServiceDiscoveryExcludedServices=CUCM,CUP`
- `ciscojabber://provision?ServicesDomain=cisco.com  
&VoiceServicesDomain=alphauk.cisco.com&ServiceDiscoveryExcludedServices=CUCM,CUP  
&ServicesDomainSsoEmailPrompt=OFF`

## Provide Users with Configuration URL from a Website

You can provide a configuration URL link to users by emailing the link to the user directly, or by posting the link to a website.



### Note

Due to a limitation of the Android operating system, Cisco Jabber for Android users can encounter an issue if they open the configuration URL directly from an Android application. To work around this issue, we recommend that you distribute your configuration URL link using a website.

If you want to use the website explore option for URL provisioning, we recommended you to use Mozilla Firefox.

Use the following procedure to distribute the link from a website.

### Procedure

**Step 1** Create an internal web page that includes the configuration URL as an HTML hyperlink.

**Step 2** Email the link to the internal web page to users.  
In the email message, instruct users to perform the following steps:

- 1 Install the client.
- 2 Click the link in the email message to open the internal web page.
- 3 Click the link on the internal web page to configure the client.

## Mobile Configuration Using Enterprise Mobility Management

Before using Enterprise Mobility Management (EMM), ensure:

- The EMM vendor supports Android for Work or Apple Managed App Configuration.
- Android devices OS is 5.0 or later and iOS devices have iOS 8.0 or later.

You can configure Cisco Jabber using EMM on Cisco Jabber for Android and Cisco Jabber for iPhone and iPad. For more information on setting up EMM, refer to the instructions for administrators provided by the EMM provider.

If you want Jabber to run only on managed devices, then you can deploy certificate-based authentication, and enroll the client certificate through EMM.

## Manual Connection Settings

Manual connection settings provide a fallback mechanism when Service Discovery is not used.

When you start Cisco Jabber, you can specify the authenticator and server address in the **Advanced settings** window. The client caches the server address to the local application configuration that loads on subsequent starts.

Cisco Jabber prompts users to enter these advanced settings on the initial start as follows:

- On-Premises with Cisco Unified Communications Manager release 9.x and Later — If the client cannot get the authenticator and server addresses from the service profile.
- Cloud-Based or On-Premises with Cisco Unified Communications Manager release 8.x — If you do not set the authenticator in the bootstrap file. The client also prompts users to enter server addresses in the **Advanced settings** window if you do not set server addresses in the bootstrap file or with SRV records.

Settings that you enter in the **Advanced settings** window take priority over any other sources including SRV records and bootstrap settings.

If you select either **Cisco IM & Presence** or **Cisco Communications Manager 8.x** options, the client retrieves UC services from Cisco Unified Presence or Cisco Unified Communications Manager IM and Presence Service. The client does not use service profiles or SSO discovery.



### Note

For Cisco Jabber for Windows, service discovery stops after 20 seconds regardless of the number of servers the SRV record resolves to. During service discovery, once Cisco Jabber finds `_cisco-uds`, it attempts to connect to the first 2 servers within 20 seconds. Cisco Jabber doesn't attempt to connect to any servers after it's attempted service discovery for the highest 2 priority servers.

Users can manually point to the working server or re-order SRV priorities to at least one of the top two priority servers available for service discovery.

## Automatic Connection Setting for Service Discovery

Users can select the **Automatic** option in the **Advanced settings** window to discover servers automatically.

The Automatic option allows users change from manually setting the service connection details to using service discovery. For example, on the initial launch, you manually set the authenticator and specify a server address in the **Advanced settings** window.

The client always checks the cache for manual settings. The manual settings take higher priority over SRV records, and for Cisco Jabber for Windows, the bootstrap file. For this reason, if you decide to deploy SRV records and use service discovery, you override the manual settings from the initial launch.


## Manual Connection Settings for On-Premises Deployments

Users can set Cisco Unified Presence or Cisco Unified Communications Manager IM and Presence Service as the authenticator and specify the server address in the **Advanced settings** window.



**Remember** You can automatically set the default server address with the `_cuplogin` SRV record.

The following diagram illustrates how the client uses manual connection settings in on-premises deployments:

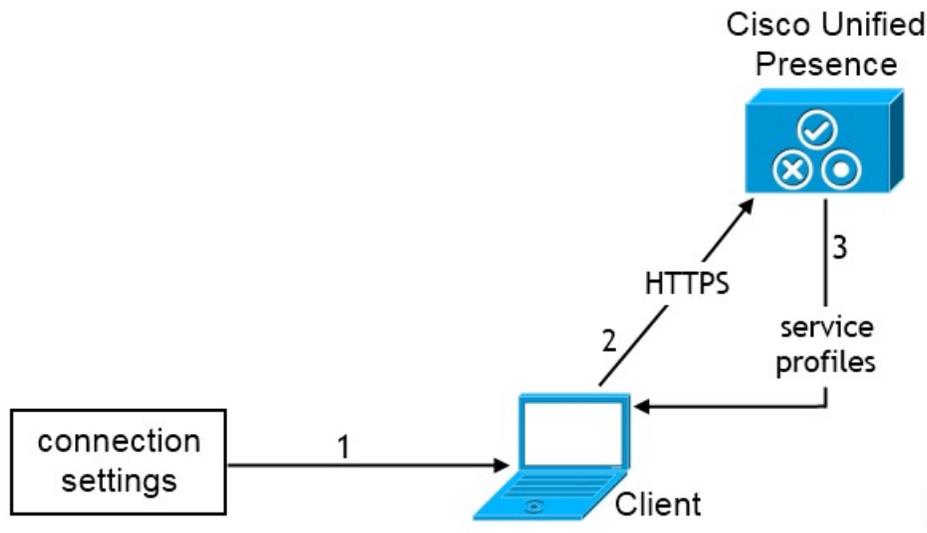


- 1 Users manually enter connection settings in the **Advanced settings** window.
- 2 The client authenticates to Cisco Unified Presence or Cisco Unified Communications Manager IM and Presence Service.
- 3 The client retrieves service profiles from the presence server.

## Manual Connection Settings for On-Premises Deployments in Phone Mode

Users can set Cisco Unified Communications Manager as the authenticator and specify the following server addresses in the **Advanced settings** window:

- TFTP server
- CCMCIP server
- CTI server (Cisco Jabber for Windows and Cisco Jabber for Mac)

The following diagram illustrates how the client uses manual connection settings in phone mode deployments:

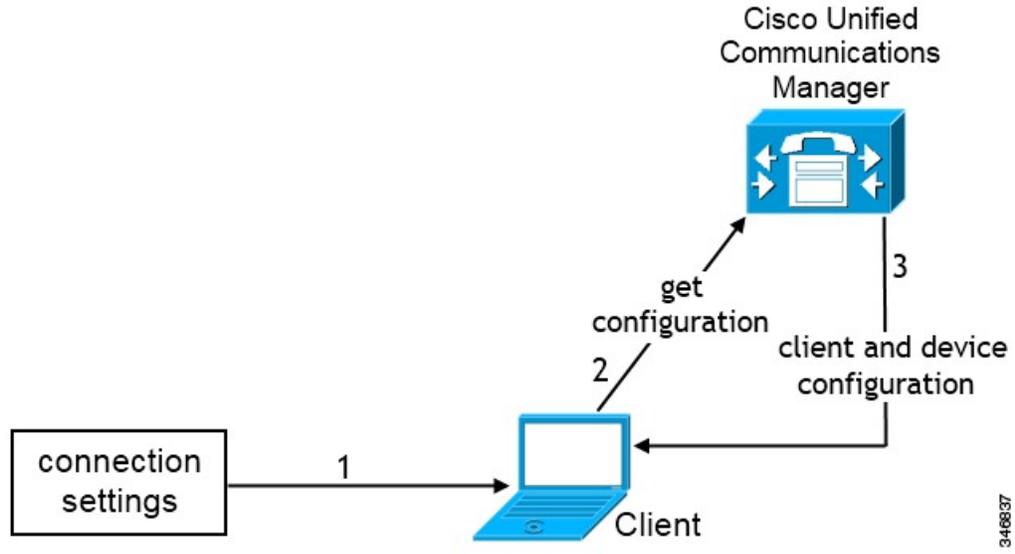


- 1 Users manually enter connection settings in the **Advanced settings** window.
- 2 The client authenticates to Cisco Unified Communications Manager and gets configuration.
- 3 The client retrieves device and client configuration.

346837

## Manual Connection Settings for Cloud-Based Deployments

Users can set the Cisco WebEx Messenger service as the authenticator and specify the CAS URL for login in the Advanced settings window.

The following diagram illustrates how the client uses manual connection settings in cloud-based deployments:

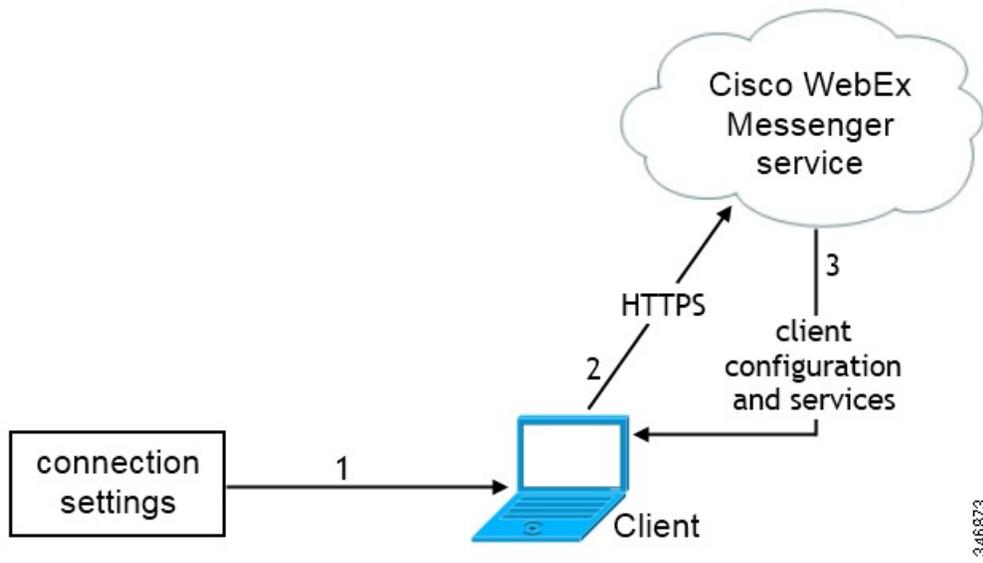

346873

- 1 Users manually enter connection settings in the Advanced settings window.
- 2 The client authenticates to the Cisco WebEx Messenger service.
- 3 The client retrieves configuration and services.

## Installer Switches: Cisco Jabber for Windows

When you install Cisco Jabber, you can specify the authenticator and server addresses. The installer saves these details to a bootstrap file. When users launch the client for the first time, it reads the bootstrap file. The bootstrap file takes priority if service discovery is deployed.

Bootstrap files provide a fallback mechanism for service discovery in situations where service discovery has not been deployed and where you do not want users to manually specify their connection settings.

The client only reads the bootstrap file on the initial launch. After the initial launch, the client caches the server addresses and configuration, and then loads from the cache on subsequent launches.

We recommend that you do not use a bootstrap file, and instead use service discovery, in on-premises deployments with Cisco Unified Communications Manager release 9.x and later.


## Bootstrap Settings for On-Premises Deployments

The following table lists the argument values for various deployment types.

Product Mode	Server Releases	Argument Values
Full UC (Default Mode)	Release 9 and later: <ul style="list-style-type: none"> <li>• Cisco Unified Communications Manager</li> <li>• Cisco Unified Communications Manager IM and Presence Service</li> </ul>	Use the following installer switches and values: <ul style="list-style-type: none"> <li>• AUTHENTICATOR=CUP</li> <li>• CUP_ADDRESS= &lt;presence_server_address&gt;</li> </ul>
Full UC (Default Mode)	Release 8.x: <ul style="list-style-type: none"> <li>• Cisco Unified Communications Manager</li> <li>• Cisco Unified Presence</li> </ul>	Use the following installer switches and values: <ul style="list-style-type: none"> <li>• AUTHENTICATOR=CUP</li> <li>• CUP_ADDRESS= &lt;presence_server_address&gt;</li> </ul>
IM Only (Default Mode)	Release 9 and later: <ul style="list-style-type: none"> <li>• Cisco Unified Communications Manager IM and Presence Service</li> </ul>	Use the following installer switches and values: <ul style="list-style-type: none"> <li>• AUTHENTICATOR=CUP</li> <li>• CUP_ADDRESS= &lt;presence_server_address&gt;</li> </ul>

Product Mode	Server Releases	Argument Values
IM Only (Default Mode)	Release 8.x:  Cisco Unified Presence	Use the following installer switches and values: <ul style="list-style-type: none"> <li>• AUTHENTICATOR=CUP</li> <li>• CUP_ADDRESS= &lt;presence_server_address&gt;</li> </ul>

The following diagram illustrates how the client uses bootstrap settings in on-premises deployments:

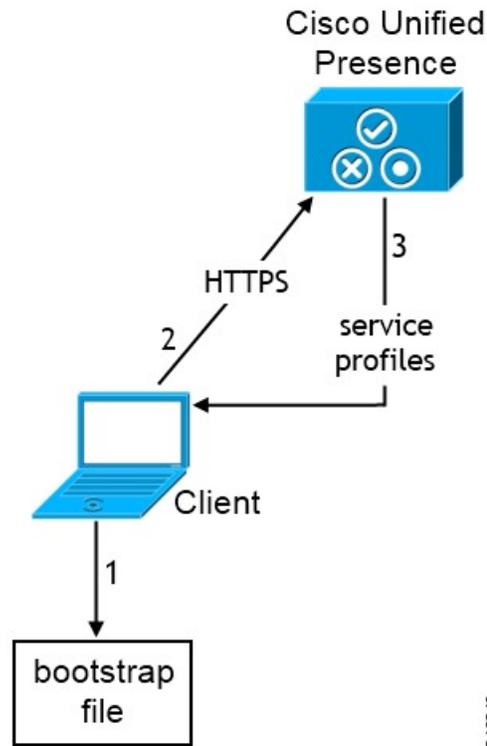

When users start the client for the first time, the following occurs:

- 1 The client retrieves settings from the bootstrap file.  
The client starts in default mode and determines that Cisco Unified Communications Manager IM and Presence Service is the authenticator. The client also gets the address of the presence server, unless Service Discovery results dictate otherwise.
- 2 The client authenticates to Cisco Unified Communications Manager IM and Presence Service .
- 3 The client retrieves service profiles from the presence server.


## Bootstrap Settings for On-Premises Deployments in Phone Mode

During installation, you set values for arguments as follows:

- Set `CUCM` as the value for `AUTHENTICATOR`.
- Set `phone_mode` as the value for `PRODUCT_MODE`.
- Set the TFTP server address as the value for `TFTP`.
- Set the CTI server address as the value for `CTI`.
- Set the CCMCIP server address as the value for `CCMCIP`.

Cisco Unified Communications Manager release 9.x and earlier—If you enable Cisco Extension Mobility, the `Cisco Extension Mobility` service must be activated on the Cisco Unified Communications Manager nodes that are used for CCMCIP. For information about Cisco Extension Mobility, see the *Feature and Services* guide for your Cisco Unified Communications Manager release.

The following diagram illustrates how the client uses bootstrap settings in phone mode deployments:

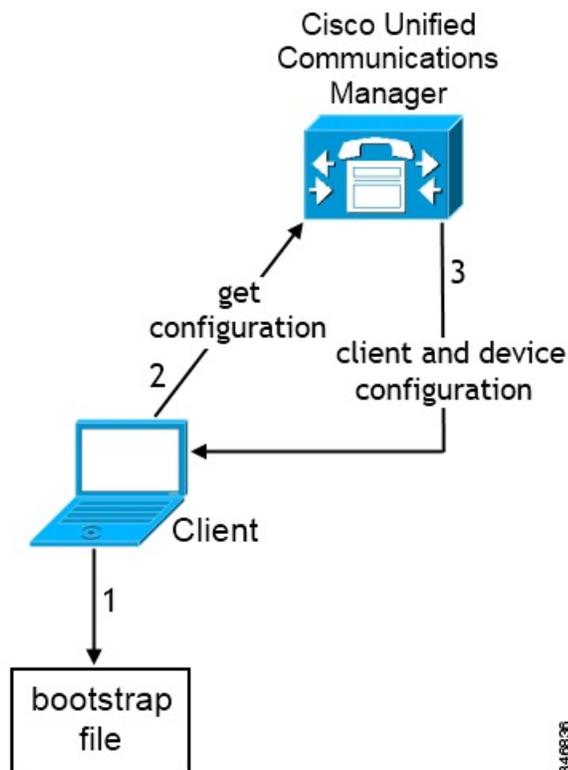

When users start the client for the first time, the following process occurs:

- 1 The client retrieves settings from the bootstrap file.

The client starts in phone mode and determines that Cisco Unified Communications Manager is the authenticator. The client also gets the addresses for the TFTP server (and CTI servers for Jabber for Windows and Jabber for Mac), unless Service Discovery results dictate otherwise.


- 2 The client authenticates to Cisco Unified Communications Manager and gets configuration.
- 3 The client retrieves device and client configuration.

## Bootstrap Settings for Cloud-Based Deployments

During installation, you set values for arguments as follows:

- Set `WEBEX` as the value for `AUTHENTICATOR`.

The following diagram illustrates how the client uses bootstrap settings in cloud-based deployments:

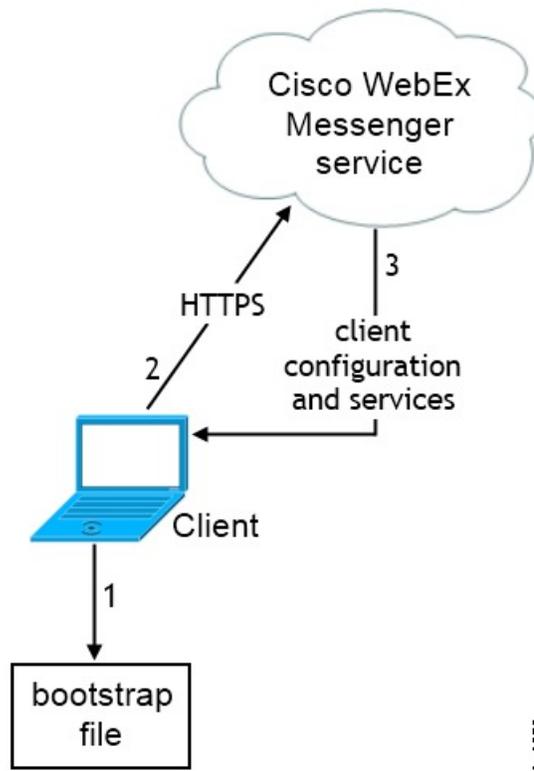

346872

When users start the client for the first time, the following occurs:

- 1 The client retrieves settings from the bootstrap file.  
The client starts in default mode and determines that the Cisco WebEx Messenger service is the authenticator, unless Service Discovery results dictate otherwise.
- 2 The client authenticates to the Cisco WebEx Messenger service.
- 3 The client retrieves configuration and services.

