



Troubleshooting

This chapter provides information on troubleshooting and contains the following sections:

- [Troubleshooting Guidelines](#), page 1
- [Troubleshooting Commands](#), page 6

Also check *Cisco Unity Express Installation and Upgrade Guide* in case system limitations are involved in the problem under consideration.



Tip

Bookmark the [Cisco Unity Express documentation home page](#) for easy access to all the documents. Print out and have available the documentation for these Ongoing and As-Needed tasks.

Troubleshooting Guidelines

The following sections provide information and suggestions for troubleshooting the Cisco Unity Express configuration and applications:

- [System Reports](#), page 1
- [Log Files](#), page 2
- [Users and Groups](#), page 2
- [Hardware and Software](#), page 2
- [Voice Mail](#), page 5
- [Message Waiting Indicators \(MWIs\) \(Cisco Unified CME Only\)](#), page 5
- [Auto-Attendant Prompts](#), page 6



Tip

The [Cisco Technical Support & Documentation](#) website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content.

System Reports

Cisco Unity Express provides the following system reports in both the graphical user interface (GUI) and the command-line interface (CLI):

- Mailbox and message statistics
- Mailbox size monitoring
- Backup and restore history
- System hardware parameters
- Memory and CPU usage (CLI only)
- Call history

Log Files

Symptom: I cannot display log files in the GUI.

Explanation Log files are kept for error reporting and troubleshooting. The GUI does not have access to system error messages.

Recommended Action

Use the CLI to display log files.

Users and Groups

Symptom: I cannot get in to the GUI.

Explanation You forgot to enter a system administrator during the initialization wizard.

Recommended Action Use the administrator login ID created during the post-installation procedure or create an administrator login ID using the following CLI commands, starting in Cisco Unity Express EXEC mode, where *user-id* is the user ID and *password* is the subscriber's password:

- cue-10-0-0-0# **username** *user-id* **create**
- cue-10-0-0-0# **username** *user-id* **password** *password*
- cue-10-0-0-0# **config t**
- cue-10-0-0-0(config)# **groupname Administrators member** *user-id*

Symptom: I need to recover a user's password or personal identification number (PIN).

Explanation The subscriber has forgotten the password or PIN.

Recommended Action For security reasons, passwords and PINs are not displayed on the screen or printed out. You must create a new password or PIN and give that new code to the subscriber. See [“Adding and Modifying a Group” on page 7](#) for the commands to create a new password or PIN.

Hardware and Software

Rebooting the System

Symptom: Is it necessary to reboot the router when rebooting the Cisco Unity Express module?

Explanation A reboot of the Cisco Unity Express module does not require a reboot of the router. The Cisco Unity Express module and the router can be rebooted independently of each other. However, if you reboot the router, no calls will reach the module until IP connectivity is reestablished between the router and the module.

**Caution**

Always do a shutdown of the module before power-cycling the router to avoid data loss or file corruption. To perform a graceful shutdown of the Cisco Unity Express module, enter the **service-module service-engine slot/port shutdown** command. To perform a graceful shutdown of the enhanced Cisco Unity Express module, enter the **service-module integrated service-engine slot/unit shutdown** command.

Setting Daylight Savings Time

Symptom: I need to set daylight savings time.

Explanation Cisco Unity Express sets daylight savings time automatically on the basis of the time zone, which is selected during the installation procedure or with the **Administration > Network Time & Time Zone Settings** GUI screen.

Communicating Between Components

Symptom: I cannot open a session in to the Cisco Unity Express module.

Explanation The TTY line associated with the module is occupied.

Recommended Action Use the **service-module service-engine slot/port session clear** command to clear the TTY line.

Symptom: I cannot change or remove the IP address or IP default-gateway configurations with the Cisco Unity Express CLI.

Explanation The IP address and IP default-gateway configurations are controlled from the Cisco IOS software.

Recommended Action Make the required changes from the service-engine interface.

Symptom: Service-module commands do not seem to take effect.

Explanation The service-module status might not be steady state. RBCP configuration messages go through only when the service-module is in steady state.

Recommended Action Use the **service-module service-engine slot/port reload** command to reload the Cisco Unity Express module.

Symptom: I cannot ping the internal address when using the IP unnumbered scheme.

Explanation The IP route table is not correct.

Recommended Action When using IP unnumbered, add a static route that points to the service-engine interface.

Symptom: I cannot set the speed of the terminal line from the router side or the Cisco Unity Express side.

Explanation Cisco Unity Express does not have a CLI command to set the speed. The speed is set to 9600, 8-N-1 on both the Cisco Unified Communications Manager and Cisco Unity Express sides. Although Cisco IOS software allows you to change the speed settings, the changes do not take effect.

Online Insertion and Removal (OIR)

Symptom: I did an OIR of the Cisco Unity Express network module on my router but it does not seem to be working.

Explanation Only the Cisco 3745 and 3845 routers support OIR. OIR is not available on the AIM.

Symptom: I did an OIR on the Cisco 3745. Now the Cisco Unity Express network module is not working.

Explanation The Cisco Unity Express network module must be shutdown before OIR.

Recommended Action OIR requires the following steps:

- a. Shut down the service-engine interface.
- b. Issue the **service-module service-engine slot/port shutdown** command.
- c. Wait for confirmation that the network module has been shut down.
- d. Proceed with the OIR.

Saving and Viewing Log Files

Symptom: I need to be able to store log files to a remote location.

Recommended Action Log files are stored on the disk, which is the default location. You can configure Cisco Unity Express to store the log files to a separate server. Also, you can copy log files on the disk to a separate server if they need to be kept for history purposes, for example:

```
copy log filename.log url ftp://ftp-user-id:ftp-user-passwd@ftp-ip-address/directory
se-10-0-0-0# copy log messages.log url ftp://admin:voice@172.168.0.5/log_history
```

Symptom: I cannot display the contents of log files on the GUI.

Explanation The GUI cannot display log files. Troubleshooting commands and files are available only through the CLI.

Recommended Action Copy the log files from Cisco Unity Express to an external server and use a text editor, such as **vi**, to display the content.

Saving Configuration Changes

Symptom: I lost some configuration data when the GUI timer expired.

Explanation You did not save the data while you were entering it.

Recommended Action While making some configuration changes in the GUI, use the **Apply** icon to save your changes to the running configuration before the timer logs you out of the system. If the timer logs you out and you did not use the **Apply** icon, your changes are not saved.



Note The timer affects only the GUI, not the CLI.

Symptom: I lost configuration data when I rebooted the system.

Explanation You did not save the data before the reboot.

Recommended Action Perform a **Save Configuration** operation in the GUI or enter a **copy running-config startup-config** command in the CLI to copy your changes from the running configuration to the startup configuration. When Cisco Unity Express reboots, it reloads the startup configuration.



Note Voice-mail messages, which are considered application data and are saved directly to the disk, are preserved automatically in the startup configuration. (They should be backed up to preserve them on another server in case of a power outage or a new installation.) All other configuration changes require an explicit “save configuration” operation to preserve them in the startup configuration.

Voice Mail

Symptom: A subscriber received a message with an envelope that says “unknown caller.”

Explanation Cisco Unity Express has a Lightweight Directory Access Protocol (LDAP) directory with the names and extensions of the subscribers who have voice mailboxes. When a message comes in, Cisco Unity Express tries to match the caller’s ID (name or extension) to an entry in the LDAP directory. If a match is found, the subscriber’s name or extension is included in the message envelope.

If a subscriber is configured on the Cisco Unified CME or Cisco Unified Communications Manager platform but not in Cisco Unity Express, for example, Cisco Unity Express has no record of that subscriber in its directory and announces that caller as “unknown caller.”

Recommended Action You may want to synchronize the platform and Cisco Unity Express databases if some platform subscribers are not defined in the directory.

Message Waiting Indicators (MWIs) (Cisco Unified CME Only)

Symptom: After upgrading to a new version of Cisco Unity Express, the MWIs do not light up even when messages are left in the mailboxes.

Explanation The upgrade procedure removed the IP address of the Session Initiation Protocol (SIP) subsystem.

Recommended Action Reconfigure the SIP IP address to point to the Cisco Unified CME router.

Auto-Attendant Prompts

Symptom: The custom auto-attendant prompt is not working.

Recommended Action Verify that the prompt format is CCITT G.711 u-law, 8kHz, 8-bit, Mono.

Checking Log and Trace Files

To check the log and trace files on the flash memory, use the **show logs** command in Cisco Unity Express EXEC mode.

show logs

Logging and tracing to flash memory is turned off by default. Executing the **log trace** command starts the log and trace functions immediately.

The command displays the `atrace.log` and `messages.log` files. Each file has a fixed length of 10 MB, and tracing or logging stops automatically when the file reaches this length. New files overwrite the old files.

Troubleshooting Commands

[Table 1-1](#) lists Cisco Unity Express troubleshooting commands. Cisco technical support personnel may request that you run one or more of these commands when troubleshooting a problem. Cisco technical support personnel will provide additional information about the commands at that time.



Caution

Some of these commands may impact performance of your system. We recommend that you do not use these commands unless directed to do so by Cisco Technical Support.

Table 1-1 Troubleshooting Commands

Command	Purpose	Cisco Unity Express EXEC Mode	Cisco Unity Express Configuration Mode
log console monitor <i>module all</i>	Displays messages on the console.	Yes	—
log console { errors info warning }	Displays messages on the console.	—	Yes
log server address { <i>ip-address</i> <i>hostname</i> }	Configures an external server for storing log files.	—	Yes
show arp	Displays the Cisco Unity Express ARP table entries.	Yes	—
show crash buffer	Displays the most recent crash log.	Yes	—
show errors	Displays any errors reported in the messages log.	Yes	—

Table 1-1 Troubleshooting Commands (continued)

Command	Purpose	Cisco Unity Express EXEC Mode	Cisco Unity Express Configuration Mode
show exception	Displays any exceptions that are thrown out.	Yes	—
show interfaces	Displays all available interfaces.	Yes	—
show log name filename	Displays a specific log.	Yes	—
show logging	Displays the current active logging level.	Yes	—
show logs	Displays a list of log files.	Yes	—
show memory	Displays current Cisco Unity Express memory statistics.	Yes	—
show processes	Displays CPU or memory processes.	Yes	—
show software directory {downgrade download}	Displays configured software information.	Yes	—
show software download server	Displays configured software information.	Yes	—
show software licenses	Displays configured software information.	Yes	—
show software packages	Displays configured software information.	Yes	—
show software versions [detail]	Displays configured software information.	Yes	—
show tech-support	Displays complete system information.	Yes	—
show trace	Do not use except by permission from Cisco Technical Support.	Yes	—
show version	Displays the version of all hardware components.	Yes	—
trace all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace caff-sip all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace ccn all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace config-ccn all	Do not use except by permission from Cisco Technical Support.	Yes	—

Table 1-1 Troubleshooting Commands (continued)

Command	Purpose	Cisco Unity Express EXEC Mode	Cisco Unity Express Configuration Mode
trace configapi all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace dbclient all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace dns all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace dns_cache all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace entityManager all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace imap all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace management all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace networking all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace ntp all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace smtpclient all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace snmp all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace superthread all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace sysdb all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace udppacer all	Do not use except by permission from Cisco Technical Support.	Yes	—

Table 1-1 *Troubleshooting Commands (continued)*

Command	Purpose	Cisco Unity Express EXEC Mode	Cisco Unity Express Configuration Mode
trace vmclient all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace voicemail all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace voiceview all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace voiceview-ccn all	Do not use except by permission from Cisco Technical Support.	Yes	—
trace webInterface all	Do not use except by permission from Cisco Technical Support.	Yes	—

