



## Configure the System Login Banner

---

Use this procedure to configure your system login banner.

---

**Step 1** Choose **System > Login Banner**. The Login Banner window appears.

**Step 2** Enter the text for the login banner.

**Step 3** Click **Apply** to save your settings.

---

