



---

**ip domain-name**  
**ip name-server**  
**idletimeout (ccn trigger jtapi)**  
**idletimeout (ccn trigger sip)**

# ip domain-name

To configure the domain name server (DNS) domain name, use the **ip domain-name** command in Cisco Unity Express configuration mode. To delete the domain name, use the **no** form of this command.

**ip domain-name** *dns-server-domain-name*

**no ip domain-name**

## Syntax Description

*dns-server-domain-name* Domain name for the DNS server.

## Defaults

No domain name is configured.

## Command Modes

Cisco Unity Express configuration

## Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco CallManager Express 3.0.
1.1	This command was implemented on the advanced integration module (AIM) and in Cisco CallManager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

## Usage Guidelines

Use this command with the **ip name-server** command to configure the DNS server.

## Examples

The following example changes the domain name to mycompany.com:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ip domain-name mycompany.com
se-10-0-0-0(config)# ip name-server 10.0.61.1
```

## Related Commands

Command	Description
<a href="#">hostname</a>	Specifies the server that stores the Cisco Unity Express applications.
<a href="#">ip name-server</a>	Specifies the DNS server name.
<a href="#">ntp server</a>	Specifies the NTP clocking server.
<a href="#">show hosts</a>	Displays all configured hosts.
<a href="#">show ip route</a>	Displays IP route destinations, gates, and masks.

# ip name-server

To configure the domain name server (DNS) server IP address, use the **ip name-server** command in Cisco Unity Express configuration mode. To delete the name server, use the **no** form of this command.

```
ip name-server ip-address [ip-address] [ip-address] [ip-address]
```

```
no ip name-server ip-address
```

<b>Syntax Description</b>	<i>ip-address</i>	IP address of the DNS server.
---------------------------	-------------------	-------------------------------

<b>Defaults</b>	No name server is configured.
-----------------	-------------------------------

<b>Command Modes</b>	Cisco Unity Express configuration
----------------------	-----------------------------------

<b>Command History</b>	<b>Cisco Unity Express Release</b>	<b>Modification</b>
	1.0	This command was introduced on the Cisco Unity Express network module and in Cisco CallManager Express 3.0.
	1.1	This command was implemented on the advanced integration module (AIM) and in Cisco CallManager 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

<b>Usage Guidelines</b>	Up to four DNS servers may be configured. Use this command with the <b>ip domain-name</b> command to configure the DNS server.
-------------------------	--

<b>Examples</b>	The following example changes the IP name server to 10.3.61.16:
-----------------	---

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ip name-server 10.0.61.1
se-10-0-0-0(config)# ip domain-name mycompany.com
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<a href="#">hostname</a>	Specifies the server that stores the Cisco Unity Express applications.
	<a href="#">ip domain-name</a>	Specifies the DNS domain name.
	<a href="#">ntp server</a>	Specifies the NTP clocking server.
	<a href="#">show hosts</a>	Displays all configured hosts.
	<a href="#">show ip route</a>	Displays IP route destinations, gates, and masks.

# idletimeout (ccn trigger jtapi)

To specify the number of seconds to wait for a caller's response, use the **idletimeout** command in Cisco Unity Express configuration trigger mode.

**idletimeout** *seconds*

## Defaults

10000 seconds

## Syntax Description

*seconds* The number of seconds to wait for a caller's response before disconnecting the call.

## Command Modes

CCN configuration trigger mode

## Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco CallManager Express 3.0.
1.1	This command was implemented on the Advanced Integration Module (AIM) and in Cisco CallManager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

## Usage Guidelines

Use the **idletimeout** command to set the number of seconds to wait for a caller's response before disconnecting the call.

## Examples

The following examples sets the idletimeout to 15000 seconds.

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ccn trigger jtapi phonenumber 1234
se-10-0-0-0(config-trigger)# idletimeout 15000
se-10-0-0-0(config-trigger)# end
se-10-0-0-0(config)#
```

## Related Commands

Command	Description
<b>ccn trigger jtapi phonenumber</b>	Enters trigger configuration mode.
<b>show ccn trigger</b>	Displays the CCN trigger details.

# idletimeout (ccn trigger sip)

To specify the number of seconds to wait for a caller's response, use the **idletimeout** command in Cisco Unity Express configuration trigger mode.

**idletimeout** *seconds*

## Defaults

10000 seconds

## Syntax Description

<i>seconds</i>	The number of seconds to wait for a caller's response before disconnecting the call.
----------------	--

## Command Modes

CCN configuration trigger mode

## Command History

Cisco Unity Express Release	Modification
1.0	This command was introduced on the Cisco Unity Express network module and in Cisco CallManager Express 3.0.
1.1	This command was implemented on the Advanced Integration Module (AIM) and in Cisco CallManager 3.3(3).
1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.

## Usage Guidelines

Use the **idletimeout** command to set the number of seconds to wait for a caller's response before disconnecting the call.

## Examples

The following examples sets the idletimeout to 15000 seconds.

```
se-10-0-0-0# config t
se-10-0-0-0(config)# ccn trigger sip phonenumber 1234
se-10-0-0-0(config-trigger)# idletimeout 15000
se-10-0-0-0(config-trigger)# end
se-10-0-0-0(config)#
```

## Related Commands

Command	Description
<a href="#">ccn trigger sip phonenumber</a>	Enters trigger configuration mode.
<a href="#">show ccn trigger</a>	Displays the CCN trigger details.

