



A

active calls
 restore **263**
addressing remote messages **218**
administration
 CLI **13**
 GU and CLI **21**
 GUI **13**
Administration via Telephone **108**
Administration viaTelephone system
 configuring **55**
AIM module
 usage **256**
 wear **256**
application command **201**
applications
 deleting **73**
atrace.log file **274**
attended transfer mode **37**
auto attendant
 AvT **61**
 configuring **55**
 deleting a greeting **62, 64**
 maximum retries **57**
 maximum sessions **58**
 operator extension **57**
 recording a greeting **57, 61, 63**
 telephone number **57**
 uploading greeting file **61, 63**
AvT **55, 108**
 recording a greeting **61**

B

backup
 command **258**
 FTP server **257**
 numbering scheme **260**
 offline mode **257**
 parameters **258**
 restrictions **257, 258**
 revision number **257**
 backup category command **260**
 backup history report **270**
 blind addressing **218**
 blind bye-also transfer mode **37**
 blind refer transfer mode **37**
 broadcast expiration time parameter **77**
 broadcast message MWI status parameter **78**
 broadcast message recording time, configuring **77**
 broadcast privilege **108**
 bulk provisioning **8**
 bye-also transfer mode **37**

C

call
 displaying by application **245**
 displaying by route **247**
 implementation ID **249**
 caller ID information parameter **77**
 caller recording prompt parameter **78**
capacity
 configuring **77**
ccn application command **45, 53, 58, 196**

ccn call terminate command **249**
 ccn copy url command **61, 63**
 ccn delete command **62, 64**
 ccn rename prompt command **62**
 ccn subsystem sip command **34**
 ccn trigger command **64, 67, 200**
 Cisco Unity Express prompt **204**
 CLI administration **13, 21**
 clock timezone command **214**
 command **79**
 application **201**
 backup **258**
 backup category **260**
 ccn application **45, 53, 58, 196**
 ccn call terminate **249**
 ccn copy url **61, 63**
 ccn delete **62, 64**
 ccn rename prompt **62**
 ccn subsystem sip **34**
 ccn trigger **64, 67, 200**
 clock timezone **214**
 continue **260**
 copy ftp **266**
 copy running-config **98, 105, 266**
 copy startup-config **265**
 copy tftp **267**
 default **196, 201**
 description **58, 114, 196**
 enable **225**
 expiration **115**
 gateway address **34**
 gateway port **34**
 greeting **115**
 groupname
 config mode **105**
 EXEC mode **105**
 hostname **204**
 idletimeout **201**
 ip domain-name **206**
 ip name-server **206**
 locale **201**
 mailbox size **115**
 maxsessions **53, 58, 64, 67, 196, 201**
 message size **115**
 mwi refresh **120**
 no ccn application **73**
 no ccn trigger **69, 71, 73**
 no parameter **201**
 ntp server **208, 210**
 offline **260, 263**
 parameter **45, 58, 196**
 parameters
 voicemail **53**
 reload **263**
 restore id **263**
 script **196**
 service-module **20**
 session **20**
 show backup **258**
 show backup history **260, 263**
 show backup server **263**
 show backup server command **260**
 show ccn applicable **53**
 show ccn application **58, 73, 196**
 show ccn call application **245**
 show ccn call route **247**
 show ccn scripts **196**
 show ccn subsystem sip **35**
 show ccn trigger **64, 67, 69, 71, 73, 201**
 show clock detail **214**
 show group detail groupname **105**
 show groups **105**
 show hosts **204**
 show interface ide 0 **256**
 show ip route **206**
 show logs **274**
 show ntp configuration **208, 210**
 show ntp status **208, 210**

show user detail username **98**
 show users **98**
 show voicemail **115**
 telnet **20**
 troubleshooting
 log **274**
 show **274**
 trace **274**
 username
 config mode **98**
 EXEC mode **98**
 voice mailbox unlock **119**
 voicemail callerid **79**
 voicemail capacity time **78**
 voicemail conversation caller recording-prompt **79**
 voicemail default **79**
 voicemail mailbox **114**
 voicemail mailbox-selection **79**
 voicemail message expiry **78**
 voicemail operator telephone **79**
 voicemail recording time **79**
 command environment **19**
 commands **14, 271**
 configuration **272**
 caller recording prompt **78**
 running **266**
 startup **265**
 TFTP **267**
 configuration mode
 backup commands **257**
 definition **19**
 configurations, copying **265**
 configuring
 Administration via Telephone **55**
 auto attendant **55**
 broadcast message MWI status **78**
 broadcast message recording time **77**
 capacity **77**
 DNS server **206**
 expiration time **77**
 host name **204**
 language **77**
 mailbox selection **78**
 mailbox size **77**
 message length **77**
 multiple triggers **200**
 MWI lights **44**
 NTP server **208**
 operator extension
 parameters
 operator extension **77**
 recording time **77**
 voice mail **52**
 configuring time zone **214**
 console display, system messages **256**
 continue command **260**
 copy ftp command **266**
 copy running-config command **98, 105, 266**
 copy startup-config command **265**
 copy tftp command **267**
 copying
 configurations **265**
 copying log files, troubleshooting **272**

D

databases, synchronizing **98**
 daylight savings time **271**
 default command **196, 201**
 default mailbox size **10, 11, 12**
 default values
 system-wide **77**
 delete a network location **221**
 deleting
 triggers **71**
 deleting applications **73**
 deleting messages **114**
 deleting triggers **73**

description command **58, 114, 196**

differences

 passwords **98, 100, 102**

 user IDs **98, 100, 102**

disable vCard information **237**

distribution list

 everyone **122**

distribution lists

 recursive **122**

DNS server

 resolving host name to IP address **208**

DNS server, configuring **206**

E

enable command **225**

everyone distribution list **122**

EXEC mode, definition **19**

expiration command **115**

expiration time

 configuring **77**

expired messages **114**

expiry timer **114**

expiry, message **77**

extension

 group **104**

extension for message storage **81**

external syslog server **256**

F

factory-set system limits **10**

file

 atrace.log **274**

 messages.log **256, 274**

file size

 messages.log **274**

prompt **61**

script **63**

Flash memory **266**

 log and trace **274**

flash memory **19**

Flash memory module

 wear **256**

From field address **163, 167**

FTP configuration **266**

FTP server **8**

 backup and restore **257**

G

G711 ulaw **61**

gateway address command **34**

gateway port command **34**

GDM **113**

general delivery mailboxes **113**

GMS

 telephone numbers **55**

greeting command **115**

greetings

 deleting a file **62, 64**

 uploading **61, 63**

group

 definition **104**

 mailbox **104**

 owner **104**

groupname command

 config mode **105**

 EXEC mode **105**

groups

 extension **104**

GUI administration **13, 21**

H

host name **34**

host name configuration **204**

hostname command **204**

idletimeout **24, 67, 200**

idletimeout command **201**

IMAP

mandatory message expiry **155**

implementation ID **249**

initialization wizard **21**

IP

addressing **271**

default-gateway **271**

unnumbered **271**

ip domain-name command **206**

ip name-server command **206**

IP network access **8**

J

JTAPI

deleting triggers **71**

triggers **66**

JTAPI route point **200**

L

language

configuring **77**

last redirected number **78**

last-redirect parameter **81**

license

SKUs **8**

Linux software **7**

list

everyone **122**

lists

recursive **122**

locale command **201**

location spoken name, uploading and downloading **226, 234**

log files

system **8**

troubleshooting **270, 272**

loop, voice mail **77**

lost data, troubleshooting **272**

LRD **78**

LRU

maximum capacity **239**

M

mailbox

zerooutnumber **115**

mailbox mask **78**

mailbox selection **81**

mailbox selection, configuring **78**

mailbox size

configuring **77**

default **10, 11, 12**

mailbox size command **115**

mailboxes **114**

expiration time **114**

general delivery **113**

group **104**

limitations **113, 114**

message size **114**

number of **10, 11, 12**

number supported **98**

personal **113**

storage size **114**

telephones supported **114**

types **113**

unlocking **119**

ManagePrompts privilege **108**

ManagePublicList privilege **108**

mandatory message expiry **77**

- IMAP messages **155**
mask, mailbox **78**
maximum
 sessions
 trigger **24, 67**
maximum callers **64, 200**
maximum number of triggers **10, 200**
maximum retries
 auto attendant **57**
maximum sessions **64, 200**
 auto attendant **58**
maximum users
 voice mail **52**
maxsessions command **53, 58, 64, 67, 196, 201**
members of a group
 definition **104**
message
 tutorial **115**
message length
 configuring **77**
message recording time, configuring **77**
message size command **115**
message storage extension **81**
message, mandatory expiry **77**
messages
 expired **114**
messages.log file **256, 274**
messages.log, file size **274**
mode
 offline **260**
modes, EXEC and configuration **19**
MWI lights
 configuring **44**
off extension **45**
on extension **45**
refresh **44**
refreshing **120**
troubleshooting **273**
mwi refresh command **120**
- MWI status, broadcast message **78**
-
- N**
- NDR **218**
network location
 delete **221**
network module
 spare **8**
network module card
 processor **7**
 software **7**
networked configurations **217**
networking **13**
no ccn application command **73**
no ccn trigger command **69, 71, 73**
no parameter command **201**
Non Deliver Record **218**
NTP server
 removing **210**
ntp server command **208, 210**
NTP server, configuring **208**
number of
 mailboxes **10, 11, 12**
 ports **10, 11, 12**
numbering scheme, backup files **260**
-
- O**
- OCN **78**
offline command **260, 263**
offline mode **260, 263**
 backup commands **257**
OIR
 troubleshooting **272**
operator extension
 auto attendant **57**
 configuring **77**

original called number **78**
 original-called parameter **81**
 owner of a group **104**

P

parameter
 broadcast expiration time **77**
 caller ID **77**
 caller recording prompt **78**
 parameter command **45, 58, 196**
 parameters
 backup **258**
 capacity **77**
 expiration time **77**
 language **77**
 last-redirect **81**
 mailbox selection **78**
 mailbox size **77**
 message length **77**
 original-called **81**
 recording time **77**
 system-wide
 configuring **77**
 parameters command
 voicemail **53**
 passwords
 characters allowed **98, 100, 102**
 personal mailboxes **113**
 pinging internal address **271**
 port, implementation ID **249**
 ports
 number of **10, 11, 12**
 privilege
 broadcast **108**
 ManagePrompts **108**
 ManagePublicList **108**
 superuser **108**
 ViewPrivateList **108**

prompt
 file size **61**
 record your message **78**
 prompt, formation **204**
 provisioning
 bulk **8**
 proxy server **34**

R

rebooting network module **270, 271**
 rebooting router **270, 271**
 record your message prompt **78**
 recording
 AvT **61**
 recording a greeting **57**
 auto attendant **61, 63**
 recording prompt parameter **78**
 recording time
 configuring **77**
 recording time, configuring **77**
 recursive distribution list **122**
 refreshing MWI lights **44, 120**
 reload command **263**
 removing an NTP server **210**
 reports
 backup **270**
 call history **270**
 CPU usage **270**
 mailbox **270**
 mailbox size **270**
 memory **270**
 message status **270**
 restore **270**
 system **8**
 system hardware **270**
 resolving host name to IP address **208**
 restore
 active calls **263**

FTP server **257**
procedure **263**
restrictions **257, 258**
restore history report **270**
restore id command **263**
restrictions
 backup and restore **257, 258**

S

saving data, troubleshooting **272**
script
 file size **63**
script command **196**
semi-attended transfer mode **37**
server
 syslog **256**
service-module command **20**
service-module, troubleshooting **271**
session command **20**
sessions **64, 200**
setting daylight savings time **271**
severity level, system messages **256**
show backup command **258**
show backup history command **260, 263**
show backup server command **263**
show ccn applicable **53**
show ccn application command **58, 73, 196**
show ccn call application command **245**
show ccn call route command **247**
show ccn scripts command **196**
show ccn subsystem sip command **35**
show ccn trigger command **64, 67, 69, 71, 73, 201**
show clock detail command **214**
show group detail groupname command **105**
show groups command **105**
show hosts command **204**
show interface ide 0 command **256**
show ip route command **206**

show logs command **274**
show ntp configuration command **208, 210**
show ntp status command **208, 210**
show user detail username command **98**
show users command **98**
show voicemail command **115**
SIP proxy server **34**
 hostname **34**
 ports **34**
SIP triggers **64**
 deleting **69**
SKUs **10, 11, 12**
spare network modules **8**
speed of internal line **272**
spoken name
 distribution list **122**
 enabling **220, 222**
 LRU cache **239**
 network location **226, 234**
 recording **228**
 remote user **228**
 vCard **236**
Startup configuration **265**
storage extension **81**
storage hours **10, 11, 12**
superuser privilege **108**
synchronizing databases **98**
syslog server **256**
system access using IP network **8**
system capacities **10, 11, 12**
system limits
 factory set **10**
system log files **8**
system messages
 console display **256**
 severity **256**
system reports **8, 270**
system-wide
 default values **77**

system-wide parameters
configuring **77**

T

Table

Table 4 Configuration Task Sequence **22**

TCP port **34**

telephone number

auto attendant **57**

triggers **24, 64, 67, 200**

telephone numbers

auto attendant **57**

GMS **55**

voice mail **52**

telephones supported for voice mail **114**

telnet command **20**

Telnet session **20**

terminating a call **249**

terminating VoiceView session **190, 194**

TFTP configuration **267**

time zone

configuring **214**

timeout **24, 67, 200**

total storage hours **10, 11, 12**

transfer mode

attended **37**

blind bye-also **37**

blind refer **37**

semi-attended **37**

trigger

maximum sessions **24, 67**

triggers

auto attendant **64, 66**

configuring multiple **200**

deleting **69, 71, 73**

maximum number **10, 200**

sessions **64, 200**

telephone number **24, 64, 67, 200**

timeout **24, 67, 200**

voice mail **64, 66**

troubleshooting

access to GUI **270**

copying log files **272**

IP address **271**

IP unnumbered **271**

IP, default-gateway **271**

log files **270**

lost data **272**

MWI lights **273**

OIR **272**

opening a session **271**

pinging internal address **271**

rebooting network module **270, 271**

rebooting router **270, 271**

saving data **272**

service-module status **271**

speed of terminal line **272**

unknown caller **273**

user password **270**

user PIN **270**

users and groups **270**

voice mail **273**

TUI

recording a greeting **61**

tutorial command **115**

U

UDP port **34**

unknown caller

troubleshooting **273**

unlocking a mailbox **119**

usage

Flash memory **256**

user IDs

characters allowed **98, 100, 102**

user password, troubleshooting **270**

user PIN, troubleshooting **270**

username command

 config mode **98**

 EXEC mode **98**

users

 adding **98**

 modifying **98**

 number supported **98**

VPIM **217**

W

wav file **61**

wear

 Flash memory **256**

Z

zerooutnumber command **115**

V

vCard

 disable **237**

 spoken name **236**

ViewPrivateList privilege **108**

voice mail

 configuring **52**

 conflicting extensions **77**

 networking **13**

 telephone numbers **52**

 telephones supported **114**

 troubleshooting **273**

voice mail loop **77**

voice mailbox unlock command **119**

Voice Profile for Internet Mail protocol **217**

voicemail

 maximum users **52**

voicemail callerid command **79**

voicemail capacity time command **78**

voicemail conversation caller recording-prompt **79**

voicemail default command **79**

voicemail mailbox command **114**

voicemail mailbox mask **78**

voicemail mailbox-selection command **79**

voicemail message expiry command **78**

voicemail operator telephone command **79**

voicemail recording time command **79**

VoiceView

 terminating a session **190, 194**