



# Configuring Users and Groups

**Last Updated:** June 21, 2007

All configuration and administration functions for Cisco Unity Express are available through the graphical user interface (GUI). However, you may find using the command-line interface (CLI) is more efficient than using the GUI. For example, you may want to create a script to configure a large number of subscribers for a specific system. In this case, the CLI may be more useful.

This chapter describes the commands that would do the following tasks and contains the following sections:

- [Prerequisites, page 101](#)
- [Adding and Modifying a User, page 101](#)
- [Adding and Modifying a Group, page 106](#)
- [Configuring Privileges, page 110](#)

## Prerequisites

Verify that the telephones and extensions connected to the Cisco Unified CME router or Cisco Unified Communications Manager server are configured. If you have not completed the configuration, see your [Cisco Unified Communications Manager administrator guide](#) or [Cisco Unified CME administrator guide](#) for the procedures. For Cisco Unified CME systems, you can use the Cisco Unity Express GUI for these procedures.

## Adding and Modifying a User

Users, or subscribers, configured in Cisco Unified CME or Cisco Unified Communications Manager may be imported to the Cisco Unity Express database.

- Cisco Unity Express does *not* automatically synchronize its database with the Cisco Unified Communications Manager database. If a subscriber defined in Cisco Unity Express must be in the Cisco Unified Communications Manager database, go back to Cisco Unified Communications Manager later and define the subscriber there.
- To synchronize the Cisco Unity Express and Cisco Unified CME databases, use the Cisco Unity Express GUI option **Administration > Synchronize Information**.

The procedure described in this section allows you to create a new user in the system. Use the same commands to modify an existing user's properties.

Cisco Unity Express supports twice as many users as mailboxes. Some subscribers, such as system administrators, may not be assigned a voice mailbox. The maximum number of users is determined by the license of the module. See “[Recording a Greeting or Prompt File](#)” on page 53 for the maximum number of users permitted for your module.

## Required Data for This Procedure

The following information is required for adding or modifying a user:

- Username—The user ID. The username must be at least 3 and no more than 32 characters in length. Cisco Unity Express allows only letters, numbers, underscore (\_), dot (.), and dash (-) in user IDs. User IDs must start with a letter. Do not use spaces in the username.
- (Optional) Full name—First and last name of the subscriber. Enter this name in quotation marks (“ ”).
- (Optional) Group—Name of an existing group in which this subscriber is a member.
- (Optional) Password—Password for logging into the Cisco Unity Express GUI. The password must be at least 3 and no more than 32 characters. Spaces are not allowed.
- (Optional) PIN—Personal identification number for logging into the TUI. The PIN must be at least 3 and no more than 16 digits.

## SUMMARY STEPS

EXEC mode:

1. **username *userid* [create | delete | fullname [first “*first-name*” | last “*last-name*” | display “*full-name*”] | group *group-name* | language “*language*”| password “*password*” | pin *number*] ]**
2. **show users**  
or  
**show user detail username *userid***
3. **copy running-config startup-config**

Configuration mode:

1. **config t**
2. **username *userid* [create | phonenumbers *phone-number* | phonenumbersE164 *full-number*] ]**
3. **exit**
4. **show users**  
or  
**show user detail username *userid***
5. **copy running-config startup-config**

## DETAILED STEPS

**EXEC mode:**

Command or Action	Purpose
<b>Step 1</b> <pre>username userid [create   delete   fullname [first "first-name"   last "last-name"   display "full-name"]   group group-name   language "language"   password "password"   pin number]</pre>	<p>Creates the subscriber with the specified user ID. The optional parameters configure more information for the subscriber:</p> <ul style="list-style-type: none"> <li>• <b>userid</b>—User ID of the subscriber. The user ID must be at least 2 and no more than 31 characters in length. Cisco Unity Express allows only letters, numbers, underscore (_), dot (.), and dash (-) in user IDs. Do not use spaces in the username. User IDs must start with a letter.</li> <li>• <b>create</b>—Creates the subscriber with no other information.</li> <li>• <b>delete</b>—Deletes an existing subscriber.</li> <li>• <b>fullname</b>—Specifies a full name for this subscriber. This full name appears on telephone displays.</li> <li>• <b>group</b>—Associates this subscriber with an existing group.</li> <li>• <b>language</b>—Specifies the default language used for the specified user. See the <i>Release Notes for Cisco Unity Express 3.1</i> for a list of available languages.</li> <li>• <b>password</b>—Specifies a password for this subscriber. The <i>password</i> value must be entered within quotation marks (""). Spaces are not allowed. Acceptable password characters are lowercase letters a to z, uppercase letters A to Z, digits 0 to 9, and the following symbols: - , . + = _ ! @ # \$ ^ * ( ) ? / ~ &lt; &gt; &amp; %.</li> <li>• <b>pin</b>—Specifies a personal identification number (PIN) for this subscriber. The subscriber enters this number from the telephone when accessing the voice-mail system. The PIN may contain a maximum number of 16 digits. The asterisk (*) and pound sign (#) may not be used.</li> </ul>

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 2</b>	<pre>show users</pre> <p>or</p> <pre>show user detail username userid</pre> <p><b>Example:</b></p> <pre>se-10-0-0-0# show user detail username user2</pre>	<p>Displays a list of user IDs for all subscribers configured on the system.</p> <p>or</p> <p>Displays the detailed information configured for the specified subscriber.</p>
<b>Step 3</b>	<pre>copy running-config startup-config</pre> <p><b>Example:</b></p> <pre>se-10-0-0-0# copy running-config startup-config</pre>	Copies the configuration changes to the startup configuration.

## Examples

The following output illustrates the **show users** and **show user detail username** commands:

```
se-10-0-0-0# show users
user1
user2

se-10-0-0-0# show user detail username user2
Full Name:          User 2
First Name:
Last Name:           user2
Nickname:            user2
Phone:
Phone(E.164):
Language:            en_ENU
se-10-0-0-0#
```

**Configuration mode:**

Command or Action	Purpose
<b>Step 1</b> <code>config t</code>	Enters configuration mode.
<b>Example:</b> <code>se-10-0-0-0# config t</code>	
<b>Step 2</b> <code>username userid [create   phonenumbers phone-number   phonenumbersE164 full-number]</code>  <b>Example:</b> <code>se-10-0-0-0(config)# username user3 create</code> <code>se-10-0-0-0(config)# username user3 phonenumbers</code> <code>50180</code> <code>se-10-0-0-0(config)# username user3 phonenumbersE164</code> <code>13335550180</code>	Creates the subscriber with the specified user ID. The optional parameters configure more information for the subscriber: <ul style="list-style-type: none"> <li>• <b>userid</b>—User ID of the subscriber. The user ID must be at least 2 and no more than 31 characters in length. Cisco Unity Express allows only letters, numbers, underscore (_), dot (.), and dash (-) in user IDs. Do not use spaces in the username. User IDs must start with a letter.</li> <li>• <b>create</b>—Creates the subscriber with no other information.</li> <li>• <b>phonenumbers</b>—Specifies a number or extension for this subscriber. Spaces or dashes are not allowed.</li> <li>• <b>phonenumbersE164</b>—Specifies a telephone number with area code for this subscriber. Spaces or dashes are not allowed.</li> </ul>
<b>Step 3</b> <code>exit</code>	Exits configuration mode.
<b>Example:</b> <code>se-10-0-0-0(config)# exit</code>	
<b>Step 4</b> <code>show users</code>  or  <code>show user detail username userid</code>  <b>Example:</b> <code>se-10-0-0-0# show user detail username user2</code>	Displays a list of user IDs for all subscribers configured on the system.  or  Displays the detailed information configured for the specified subscriber.
<b>Step 5</b> <code>copy running-config startup-config</code>	Copies the configuration changes to the startup configuration.
<b>Example:</b> <code>se-10-0-0-0# copy running-config startup-config</code>	

**Examples**

The following example illustrates configuring a subscriber and the output from the **show** commands:

```
se-10-0-0-0(config)# username user3 create
se-10-0-0-0(config)# username user3 phonenumbers 50180
se-10-0-0-0(config)# exit
se-10-0-0-0# show users
```

## ■ Adding and Modifying a Group

```

user1
user2
user3
se-10-0-0-0# show user detail username user3
Full Name:          User 3
First Name:
Last Name:           user3
Nickname:            user3
Phone:               50180
Phone(E.164):
Language:            en_ENU

```

# Adding and Modifying a Group

A group is a collection of subscribers, usually with a common function or purpose, such as sales, main office, customer service, or technicians. A group has the following characteristics:

- Members of the group can be individual subscribers or other groups.
- The group is assigned an extension.
- The group may have a mailbox assigned to it.
- A group may have zero or more subscribers as owners. An owner of a group can add and delete members. Additionally, an owner can add and delete other owners to the group.
- Members may belong to more than one group.
- Members can be added to the group using the configuration mode **groupname** command or using the EXEC mode **username** command. See “[Adding and Modifying a User](#)” on page 101 for details about the **username** command.



**Note** Subscribers must exist before being added to a group. See “[Adding and Modifying a User](#)” on page 101 to configure the subscriber’s detailed information.

- Only members have access to the messages in a group’s voice mailbox. The owner is not considered a member of the group. If the owner needs to access the group’s mailbox, add the owner as a member of the group. (The owner’s name appears twice in the group, once as a member and once as the owner.)
- A group may be assigned a privilege level. The privilege level permits the members of the group to access all or a restricted set of administrative functions. Use the **show privileges** command to display the privilege levels installed on your system. Use the **show groups privileges** command to display the privileges assigned to each group. See “[Configuring Privileges](#)” on page 110 for more information about privilege levels.

See “[Recording a Greeting or Prompt File](#)” on page 53 for the maximum number of groups, owners, and members permitted on your system.

The following procedure allows you to create a new group in the system.

## Required Data for This Procedure

The following information is required to define a group:

- EXEC mode:

- Name of group
- (Optional) Description of group
- (Optional) Full name of group
- Configuration mode:
  - Name of group
  - (Optional) One or more existing user or group IDs to be added as members
  - (Optional) One or more existing user IDs to be added as owners
  - (Optional) Extension or telephone number of the group
  - (Optional) Full E.164 telephone number of the group
  - (Optional) Privilege level for the group

## SUMMARY STEPS

EXEC mode:

1. **groupname userid [create | delete | description "description" | fullname "full-name"]**
2. **show groups**  
or  
**show group detail groupname groupid**
3. **copy running-config startup-config**

Configuration mode:

1. **config t**
2. **groupname groupid [member username | owner ownername | phonenumbers phone-number | phonenumbersE164 full-number | privilege privilege-id]**
3. **exit**
4. **show groups**  
or  
**show group detail groupname groupid**
5. **copy running-config startup-config**

**DETAILED STEPS****EXEC mode:**

Command or Action	Purpose
<b>Step 1</b> <pre>groupname <i>groupid</i> [create   delete   description "description"   fullname "full-name"]</pre> <p><b>Example:</b></p> <pre>se-10-0-0-0# groupname sales fullname "Sales Department" se-10-0-0-0# groupname sales description "Retail Sales Department" se-10-0-0-0# groupname sales delete</pre>	Creates the group with the <i>groupid</i> value. The optional parameters configure more information for the group: <ul style="list-style-type: none"> <li>• <b>create</b>—Creates the group with no other information.</li> <li>• <b>delete</b>—Deletes an existing group.</li> <li>• <b>description</b>—Specifies a description of the group.</li> <li>• <b>fullname</b>—Specifies a long name for the group.</li> </ul>
<b>Step 2</b> <pre>show groups</pre> <p>or</p> <pre>show group detail groupname <i>groupid</i></pre> <p><b>Example:</b></p> <pre>se-10-0-0-0# show group detail groupname sales</pre>	Displays a list of group IDs for all configured groups. This command does not display the details for the groups. or Displays the detailed configuration information for the group <i>groupid</i> value.
<b>Step 3</b> <pre>copy running-config startup-config</pre> <p><b>Example:</b></p> <pre>se-10-0-0-0# copy running-config startup-config</pre>	Copies the configuration changes to the startup configuration.

**Examples**

The following example creates a group and displays the output of the **show** commands:

```
se-10-0-0-0# groupname sales fullname "Sales Department"
se-10-0-0-0# groupname sales description "CA office"

se-10-0-0-0# show groups
Administrators
sales

se-10-0-0-0# show group detail groupname sales
Full Name:          Sales Department
Description:        CA office
Phone:
Phone(E.164):
Language:           en_ENU
Owners:
Members:
se-10-0-0-0#
```

**Configuration mode:**

Command or Action	Purpose
<b>Step 1</b> config t	Enters configuration mode.
<b>Example:</b> <pre>se-10-0-0-0# config t</pre> <b>Step 2</b> groupname <i>groupid</i> [ <i>member username</i>   <i>owner ownername</i>   <i>phononenumber phone-number</i>   <i>phonenumbere164 full-number</i>   <i>privilege privilege-id</i> ]	Creates the group with the <i>groupid</i> value. The optional parameters configure more information for the user: <ul style="list-style-type: none"> <li>• <b>member</b>—Associates an existing subscriber as a member of this group. Repeat this command to assign multiple subscribers to the group.</li> <li>• <b>owner</b>—Specifies the owner of the group. The owner is not considered a member. If the owner is to have access to the group's voice mailbox, also assign the owner as a member.</li> <li>• <b>phononenumber</b>—Associates a number or extension with this group. No spaces or dashes are allowed.</li> <li>• <b>phonenumbere164</b>—Associates a telephone number and area code with this group. No spaces or dashes are allowed.</li> <li>• <b>privilege</b>—Specifies the privilege level for the group. Members assigned to this group have the designated privilege rights.</li> </ul>
<b>Step 3</b> exit	Exits configuration mode.
<b>Example:</b> <pre>se-10-0-0-0(config)# exit</pre>	
<b>Step 4</b> show groups  or  show group detail groupname <i>groupid</i>	Displays a list of group IDs for all configured groups. This command does not display the details for the groups.  Displays the detailed configuration information for the group <i>groupid</i> value.
<b>Step 5</b> copy running-config startup-config	Copies the configuration changes to the startup configuration.
<b>Example:</b> <pre>se-10-0-0-0# copy running-config startup-config</pre>	

**Examples**

The following example adds an owner and two members to the group sales and assigns sales a phone number:

```

se-10-0-0-0# config t
se-10-0-0-0(config)# groupname sales member user1
se-10-0-0-0(config)# groupname sales member user2
se-10-0-0-0(config)# groupname sales owner user1
se-10-0-0-0(config)# groupname sales phonenumbers 50163
se-10-0-0-0(config)# groupname sales phonenumbersE164 12225550163
se-10-0-0-0(config)# groupname sales privilege ManagePrompts
sse-10-0-0-0(config)# exit

se-10-0-0-0(# show groups
Administrators
sales

se-10-0-0-0# show group detail groupname sales
Full Name: Sales Department
Description: CA office
Phone: 50163
Phone(E.164): 12225550163
Language: en_ENU
Owners: user1
Members: user1 user2
se-10-0-0-0(#
```

## Configuring Privileges

The Cisco Unity Express software recognizes these privileges for subscribers:

- Superuser—The superuser privilege permits subscribers to log in to the Cisco Unity Express GUI as an administrator. Additionally, it permits subscribers to record spoken names for remote subscribers and locations through the Administration via Telephone (AvT).
- ManagePrompts—The prompt management subscriber has access to the AvT but not to any other administrative functions.
- broadcast—The broadcast privilege permits the subscriber to send broadcast messages across the network.
- local-broadcast—The local-broadcast privilege permits subscribers to send broadcast messages only to subscribers on the local network.
- ManagePublicList—The ManagePublicList privilege permits the subscriber to create and modify public distribution lists.
- ViewPrivateList—The ViewPrivateList privilege allows the subscriber to view another subscriber's private distribution lists. The subscriber cannot modify or delete the private lists.
- vm-imap—The vm-imap privilege gives subscribers access to the IMAP feature.

These privilege levels are assigned to a group, and any member of the group is granted the privilege rights. The software initialization process created an Administrator group from the imported subscribers designated as administrators. Other groups can be created with these privileges. Assign subscribers to an existing group using the CLI commands or the GUI option **Configure> Users**.

To display a list of privileges, use the **show privileges** command in Cisco Unity Express EXEC mode.

To configure a group with a privilege level, see “[Adding and Modifying a Group](#)” on page 106.