



# U

---

**Last Updated: June 21, 2007**

**username (configuration)**

**username (gateway configuration)**

username generate

username notification cascade-to after

username profile (phone devices)

username profile email

username profile num-pager

username profile text-pager

# username (configuration)

To configure a Cisco Unity Express subscriber, use the **username** command in either Cisco Unity Express EXEC mode or configuration mode.

## EXEC Mode

```
username name [create | delete | faxnumber extension fullname [first “first” | last “last-name” | display “full-name”] | group group-name | language xx_YY | password “password” | pin number]
```

## Configuration Mode

```
username name [password “password” | phonenumber phonenumber | phonenumberE164 full-number | pin number]
```

### Syntax Description

<i>name</i>	Specifies the name or ID of the subscriber to be created. The username must be at least 3 and no more than 32 characters in length. Cisco Unity Express allows only letters, numbers, underscore (_), dot (.), and dash (-) in user IDs. User IDs must start with a letter. Do not use spaces in the username.
<b>create</b>	(Optional) Creates a subscriber with no other information.
<b>delete</b>	(Optional) Deletes the subscriber.
<b>faxnumber</b> <i>extension</i>	Assigns the specified fax number to the user. In case of a single DID, there is no need to configure this number.
<b>fullname</b> <b>first</b> “ <i>first</i> ”	(Optional) First name of the subscriber. The name must be entered in double quotes (“ ”).
<b>fullname</b> <b>last</b> “ <i>last-name</i> ”	(Optional) Last name of the subscriber. The name must be entered in double quotes (“ ”).
<b>fullname</b> <b>display</b> “ <i>full-name</i> ”	(Optional) Name as the subscriber wants it to appear on other telephone displays. The name must be entered in double quotes (“ ”).
<b>group</b> <i>group-name</i>	(Optional) Group with which this subscriber is associated. If the <i>group-name</i> value does not exist, this command creates it.
<b>language</b> <i>xx_YY</i>	(Optional) Language of the prompt. See <a href="#">Release Notes for Cisco Unity Express 2.3</a> for a list of supported languages.
<b>password</b> “ <i>password</i> ”	(Optional) Password for the subscriber. The password must be entered in double quotes (“ ”). Valid values contain at least 3 but not more than 32 characters in length. Spaces are not allowed. Acceptable password characters are lowercase letters a to z, uppercase letters A to Z, digits 0 to 9, and the following symbols: -, ., +, =, _ ! @ # \$ ^ * ( ) ? / ~ < > & %.
<b>phonenumber</b> <i>phonenumber</i>	(Optional) Extension or number for this subscriber.

<b>phonenumE164</b> <i>full-number</i>	(Optional) Full telephone number, including area code, for the subscriber.
<b>pin</b> <i>number</i>	(Optional) Personal identification number for the subscriber. Valid values are at least 3 but not more than 19 characters in length, consisting of letters and numbers. No other characters are permitted.

**Command Default**      **language:** U.S. English

**Command Modes**      Cisco Unity Express EXEC  
Cisco Unity Express configuration

<b>Command History</b>	<b>Cisco Unity Express Version</b>	<b>Modification</b>
	1.0	This command was introduced on the Cisco Unity Express network module and in Cisco Unified Communications Manager Express 3.0.
	1.1	This command was implemented on the advanced integration module (AIM) and in Cisco Unified Communications Manager 3.3(3).
	1.1.2	This command was implemented on the Cisco 2800 series and Cisco 3800 series routers.
	2.0	This command supports additional languages for prompts.
	3.0	This command was modified to allow you to assign a fax extension to a mailbox.

**Usage Guidelines**      The EXEC version of the command stores the permitted information in Cisco Unity Express flash memory. If a problem with the disk occurs, this information is available so that the subscriber may access the voice-mail system.

The configuration version of the command is stored in the Cisco Unity Express system configuration file. If a power outage or a system shutdown occurs, the subscriber information can be retrieved.

**Examples**      The following example creates a subscriber user1, assigns her as a member to the Sales group, and assigns the extension 0190, a password, and a PIN.

```
se-10-0-0-0# username user1 fullname display "User 1"
se-10-0-0-0# username user1 faxnumber 0100
se-10-0-0-0# username user1 group Sales
se-10-0-0-0# username user1 password "sales123"
se-10-0-0-0# username user1 pin 4122
se-10-0-0-0# config t
se-10-0-0-0(config)# username user1 phonenum 50190
se-10-0-0-0(config)# username user1 phonenumE164 12225550190
se-10-0-0-0(config)# end
se-10-0-0-0# show user detail username user1
Full Name:           User 1
```

```
First Name:
Last Name:      user1
Nickname:       user1
Phone:          50190
Phone (E.164): 12225550190
Language:       en_ENU
se-10-0-0-0#
```

---

**Related Commands**

<b>Command</b>	<b>Description</b>
<a href="#">show groups</a>	Displays the configured groups.
<a href="#">show user detail username</a>	Displays details for a specific subscriber.
<a href="#">show users</a>	Displays a list of all usernames.

---

# username (gateway configuration)

To specify the username and password used when attempting to register with the messaging gateway, use the **username** command in Cisco Unity Express gateway configuration mode. Use the no form of the command to negate the username configured for the messaging gateway registration.

**username** *text* {**password** {**text** | **encrypted**} *password*} [**retry-interval** *integer*]

**no username** *text*

## Syntax Description

<i>text</i>	Username used when attempting to register to the primary or secondary messaging gateway.
<b>password</b>	Require a password used when attempting to register to the primary or secondary messaging gateway.
<b>text</b>	Send the password as unencrypted text.
<b>encrypted</b>	Send an encrypted password.
<i>password</i>	Password used when attempting to register to the primary or secondary messaging gateway.
<b>retry-interval</b>	Specify a retry interval for attempting to register to the primary or secondary messaging gateway.
<i>integer</i>	Retry interval in minutes.

## Command Modes

Cisco Unity Express gateway configuration

## Command History

Release	Modification
3.1	This command was introduced.

## Usage Guidelines

This command specifies the username used to register to either the primary or secondary messaging gateway. You can also optionally specify a retry interval. The default retry interval is five minutes.

## Examples

The following example specifies the username for registration to the primary messaging gateway:

```
se-10-0-0-0# config t
se-10-0-0-0(config)# messaging-gateway primary 59000 192.0.2.24
se-10-0-0-0(config-gateway)# username cue31 password pass31 retry-interval 20
```

```
Status : Registered (Tue Aug 21 17:09:08 PDT 2006)
Reg-expiration : Wed Aug 22 17:09:08 PDT 2006
Location-id : 1234
Reg-id : 1234
Reg-password : (Not displayed)
Retry-interval : 10 minute(s)
```

Related Commands	Command	Description
	<b>show messaging-gateway</b>	Displays the details associated with the registration of the messaging gateway
	<b>messaging-gateway registration</b>	Causes the endpoint (Cisco Unity Express) to send a registration message to its messaging gateway.
	<b>messaging-gateway</b>	Specifies the location ID and IP address for the primary or secondary messaging gateway.

# username generate

To generate a temporary password or PIN for a subscriber, use the `username generate` command in Cisco Unity Express EXEC mode.

```
username username generate {password | pin}
```

Syntax Description		
	<i>username</i>	User ID for the subscriber that needs the password or PIN.
	<b>password</b>	Authentication needed to access the Cisco Unity Express GUI.
	<b>pin</b>	Authentication needed to access the Cisco Unity Express telephone user interface (TUI).

**Defaults** Password and PIN are blank.

**Command Modes** Cisco Unity Express EXEC

Command History	Cisco Unity Express Version	Modification
	2.2	This command was introduced.

**Usage Guidelines** To display the generated password or PIN, use the `show user auth username username` command. The subscriber must change this password or PIN after logging in to the GUI or TUI.

**Examples** The following example generates a temporary password and PIN for user5:

```
se-10-0-0-0# username user5 generate password
se-10-0-0-0# username user5 generate pin
se-10-0-0-0# show user auth username user5
```

```
Password:          rfg889920
Pin:               7850
```

Related Commands	Command	Description
	<code>show user auth username</code>	Displays the authentication information (password and PIN) for the subscriber.

# username notification cascade-to after

To define a rule for cascading a notification, use the **username notification cascade-to after** command in Cisco Unity Express EXEC mode. Use the **no** form of this command to remove the rule and disable cascading to the specified user.

**username** *user-id* **notification cascade-to** *uid* **after** *minutes*

**no username** *user-id* **notification cascade-to** *uid* **after** *minutes*

## Syntax Description

<i>user-id</i>	The ID of the user for whom notification cascading is being configured.
<i>uid</i>	The ID of the user to whom cascaded notification is being sent.
<i>minutes</i>	The amount of time after which the notification cascade occurs.

## Command Default

There are no notification cascading rules defined for the subscriber.

## Command Modes

Cisco Unity Express EXEC

## Command History

Cisco Unity Express Version	Modification
3.0	This command was introduced.

## Usage Guidelines

Use the **username notification cascade-to after** command in Cisco Unity Express configuration mode to define:

- The user for whom notification cascading is being configured.
- The user to whom cascaded notification is being sent.
- The amount of time after which the notification cascade occurs.

An error message appears when:

- The specified user or profile does not exist on the local system.
- The user exists but a rule is already defined to cascade to that user.
- The user does not have a mailbox.
- The user cannot define a rule to cascade notification to himself.
- The maximum number of users have already been configured for cascading.
- The time is outside the allowed range.
- The time is within the allowed range, but a rule is already defined to cascade notification at that time.

## Examples

The following example define a rule to cascade notification from user22 to user 42 after 10 minutes:

```
se-10-0-0-0# username user22 notification cascade-to user42 after 10
```



<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show voicemail msg-notification restriction-table</b>	Displays information about the restriction table associated with the non-subscriber message delivery feature.
	<b>show voicemail notification</b>	Displays the message notification configuration.
	<b>show voicemail notification owner cascade</b>	Displays the details of the message notification configuration for a specific user.

## username profile (phone devices)

To configure a subscriber's cell phone for message notification, use the **username profile (phone devices)** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the cell phone, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile { cell-phone | home-phone | work-phone }
  { enable
  extra-digits digits
  phonenumber phonenumber
  preference { all | urgent }
  schedule day day-of-week active from hh:mm to hh:mm }
```

```
no username username profile vm-notif-profile { cell-phone | home-phone | work-phone }
  { enable
  extra-digits digits
  phonenumber phonenumber
  preference { all | urgent }
  schedule day day-of-week active from hh:mm to hh:mm }
```

```
default username username profile vm-notif-profile { cell-phone | home-phone | work-phone }
  preference { all | urgent }
```

Syntax Description		
<b>username</b> <i>username</i>		User ID for the voice-mail subscriber who owns the cell phone.
<b>enable</b>		Enables the device in the subscriber's profile.
<b>extra-digits</b> <i>digits</i>		Extra digits to be sent as DTMF digits. Valid values include numbers 0 to 9, pound or hash mark (#), star (*), and plus (+) for a 1-second pause.
<b>phonenumber</b> <i>phonenumber</i>		Phone number of the subscriber's phone device. The system dials this number when the subscriber's mailbox receives a message. Valid values include digits 0 to 9.
<b>preference</b> { <b>all</b>   <b>urgent</b> }		Enables the message notification type for the device. <b>all</b> sends all voice messages to the device. <b>urgent</b> sends only urgent messages to the device.
<b>schedule day</b> <i>day-of-week</i> <b>active from</b> <i>hh:mm</i> to <i>hh:mm</i>		Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.

### Defaults

Cell phone notifications are disabled.  
Default preference is **urgent**.

### Command Modes

Cisco Unity Express EXEC

**Command History**

Cisco Unity Express Release	Modification
2.3	This command was introduced.

**Usage Guidelines**

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- *phonenumber* is a restricted number.
- More than 64 digits are entered for *digits*.
- A valid phone number is not assigned to the device.
- The administrator has disabled message notification on a system-wide basis.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } extra-digits** removes the extra digits assigned to the device.
- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } phonenumber** removes the phone number from the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile { cell-phone | home-phone | work-phone } schedule day *day-of-week* active from *hh:mm* to *hh:mm*** deactivates the sending of notifications for the specified time slot.

**Examples**

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone phonenumber 12225550150
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone enable
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone extra-digits 9
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone all
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 2 active from
08:00 to 17:00
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 3 active from
08:00 to 12:00
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 4 active from
13:00 to 16:00
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 5 active from
08:00 to 14:00
```

```
se-10-0-0-0# username user3 profile vm-notif-profile cell-phone schedule day 6 active from
08:00 to 17:00
```

---

**Related Commands**

<b>Command</b>	<b>Description</b>
<a href="#">show voicemail notification owner</a>	Displays the voicemail notification configuration for specific subscribers or groups.
<a href="#">username profile email</a>	Configures notification parameters for a subscriber's e-mail.
<a href="#">username profile num-pager</a>	Configures notification parameters for a subscriber's numeric pager.
<a href="#">username profile text-pager</a>	Configures notification parameters for a subscriber's text pager.

# username profile email

To configure a subscriber's e-mail for message notification, use the **username profile email** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the e-mail device, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile email
  {address email-address
  attach
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text email-text}
```

```
no username username profile vm-notif-profile email
  {address email-address
  attach
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text email-text}
```

```
default username username profile vm-notif-profile email attach
```

```
default username username profile vm-notif-profile email preference {all | urgent}
```

## Syntax Description

<i>username</i>	User ID for the voice-mail subscriber who owns the e-mail.
<b>address</b> <i>email-address</i>	E-mail address to which an outgoing text notification will be sent.
<b>attach</b>	Enables a voice message to be attached to the outgoing e-mail notification. The default is disabled.
<b>enable</b>	Enables the device in the subscriber's profile.
<b>preference</b> { <b>all</b>   <b>urgent</b> }	Enables the message notification type for the device. <b>all</b> sends all voice messages to the device. <b>urgent</b> sends only urgent messages to the device.
<b>schedule day</b> <i>day-of-week</i> <b>active from</b> <i>hh:mm</i> <b>to</b> <i>hh:mm</i>	Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.
<b>text</b> <i>email-text</i>	Text of the message that will be appended to the outgoing e-mail notification. The message can contain all alphanumeric characters except question mark (?). The maximum message length is 128 characters. Enclose the text in double quotes (" ").

## Defaults

E-mail notifications are disabled.  
E-mail attachments are disabled.  
Default preference is **urgent**.

**Command Modes**

Cisco Unity Express EXEC

**Command History**

Cisco Unity Express Release	Modification
2.3	This command was introduced.

**Usage Guidelines**

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- The administrator has disabled message notification on a system-wide basis.
- The administrator has disabled e-mail attachments on a system-wide basis.
- E-mail is enabled before the e-mail address is defined.
- E-mail is enabled and an SMTP server is not configured.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.
- E-mail text contains a question mark (?).
- E-mail text is longer than 128 characters.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile email enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile email address *email-address*** removes the email address assigned to the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile email attach** disables attaching voice messages to outgoing e-mail notifications for this device.
- **no (or default) username *username* profile vm-notif-profile email preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile email schedule *day day-of-week active from hh:mm to hh:mm*** deactivates the sending of notifications for the specified time slot.
- **no username *username* profile vm-notif-profile email text** removes the text associated with this device.

**Examples**

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile email address user1@company.com
se-10-0-0-0# username user3 profile vm-notif-profile email enable
se-10-0-0-0# username user3 profile vm-notif-profile email attach
se-10-0-0-0# username user3 profile vm-notif-profile email all
```

```

se-10-0-0-0# username user3 profile vm-notif-profile email schedule day 3 active from
08:00 to 10:00
se-10-0-0-0# username user3 profile vm-notif-profile email text "Sales meeting scheduled
in main office conference room C 1:00-3:00 p.m. 4/19/06"

```

**Related Commands**

Command	Description
<a href="#">show voicemail notification owner</a>	Displays the voicemail notification configuration for specific subscribers or groups.
<a href="#">username profile (phone devices)</a>	Configures notification parameters for a subscriber's cell phone.
<a href="#">username profile num-pager</a>	Configures notification parameters for a subscriber's numeric pager.
<a href="#">username profile text-pager</a>	Configures notification parameters for a subscriber's text pager.

# username profile num-pager

To configure a subscriber's numeric pager for message notification, use the **username profile num-pager** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the home phone, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile num-pager
  { enable
    extra-digits digits
    phonenumber phonenumber
    preference { all | urgent }
    schedule day day-of-week active from hh:mm to hh:mm }
```

```
no username username profile vm-notif-profile num-pager
  { enable
    extra-digits digits
    phonenumber phonenumber
    preference { all | urgent }
    schedule day day-of-week active from hh:mm to hh:mm }
```

```
default username username profile vm-notif-profile num-pager preference { all | urgent }
```

Syntax Description		
<b>username</b> <i>username</i>		User ID for the voice-mail subscriber who owns the numeric pager.
<b>enable</b>		Enables the device in the subscriber's profile.
<b>extra-digits</b> <i>digits</i>		Extra digits to be sent as DTMF digits. Valid values include numbers 0 to 9, pound or hash mark (#), star (*), and plus (+) for a 1-second pause.
<b>phonenumber</b> <i>phonenumber</i>		Phone number of the subscriber's numeric pager. The system dials this number when the subscriber's mailbox receives a message. Valid values include digits 0 to 9.
<b>preference</b> { <b>all</b>   <b>urgent</b> }		Enables the message notification type for the device. <b>all</b> sends all voice messages to the device. <b>urgent</b> sends only urgent messages to the device.
<b>schedule day</b> <i>day-of-week</i> <b>active from</b> <i>hh:mm</i> <b>to</b> <i>hh:mm</i>		Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.

## Defaults

Numeric pager notifications are disabled.  
Default preference is **urgent**.

## Command Modes

Cisco Unity Express EXEC

## Command History

Cisco Unity Express Release	Modification
2.3	This command was introduced.



## Usage Guidelines

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- *phonenumber* is a restricted number.
- More than 64 digits are entered for *digits*.
- A valid phone number is not assigned to the device.
- The administrator has disabled message notification on a system-wide basis.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile num-pager enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile num-pager extra-digits** removes the extra digits assigned to the device.
- **no username *username* profile vm-notif-profile num-pager phonenumber** removes the phone number from the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile num-pager preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile num-pager schedule day *day-of-week* active from *hh:mm* to *hh:mm*** deactivates the sending of notifications for the specified time slot.

## Examples

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile num-pager phonenumber 12225550150
se-10-0-0-0# username user3 profile vm-notif-profile num-pager enable
se-10-0-0-0# username user3 profile vm-notif-profile num-pager extra-digits 9
se-10-0-0-0# username user3 profile vm-notif-profile num-pager all
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 2 active from
08:00 to 17:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 3 active from
08:00 to 12:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 4 active from
13:00 to 16:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 5 active from
08:00 to 14:00
se-10-0-0-0# username user3 profile vm-notif-profile num-pager schedule day 6 active from
08:00 to 17:00
```

Related Commands	Command	Description
	<a href="#">show voicemail notification owner</a>	Displays the voicemail notification configuration for specific subscribers or groups.
	<a href="#">username profile (phone devices)</a>	Configures notification parameters for a subscriber's cell phone.
	<a href="#">username profile email</a>	Configures notification parameters for a subscriber's e-mail.
	<a href="#">username profile text-pager</a>	Configures notification parameters for a subscriber's text pager.

## username profile text-pager

To configure a subscriber's text pager for message notification, use the **username profile text-pager** command in Cisco Unity Express EXEC mode. To remove or deactivate a parameter from the text pager device, use the **no** or **default** form of this command.

```
username username profile vm-notif-profile text-pager
  {address email-address
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text email-text}
```

```
no username username profile vm-notif-profile text-pager
  {address email-address
  enable
  preference {all | urgent}
  schedule day day-of-week active from hh:mm to hh:mm
  text message-text}
```

```
default username username profile vm-notif-profile text-pager preference {all | urgent}
```

Syntax	Description
<i>username</i>	User ID for the voice-mail subscriber who owns the text pager.
<b>address</b> <i>email-address</i>	E-mail address to which an outgoing text notification will be sent.
<b>enable</b>	Enables the device in the subscriber's profile.
<b>preference</b> {all   urgent}	Enables the message notification type for the device. <b>all</b> sends all voice messages to the device. <b>urgent</b> sends only urgent messages to the device.
<b>schedule day</b> <i>day-of-week</i> <b>active from</b> <i>hh:mm</i> to <i>hh:mm</i>	Sets a time slot when the device can receive notifications. Valid values for <i>day-of-week</i> are 1 to 7, where 1 is Sunday, 2 is Monday, and so forth. Use the hour and half-hour on the 24-hour clock for the time. Valid values for <i>hh</i> are 00 to 24 and for <i>mm</i> either 00 or 30.
<b>text</b> <i>message-text</i>	Text of the message that will be appended to the outgoing text pager notification. The message can contain all alphanumeric characters except question mark (?). The maximum message length is 128 characters.

**Defaults**  
Text pager notifications are disabled.  
Default preference is **urgent**.

**Command Modes**  
Cisco Unity Express EXEC

Command History	Cisco Unity Express Release	Modification
	2.3	This command was introduced.

## Usage Guidelines

The system creates one default notification profile with the filename **vm-notif-profile** per subscriber. This filename cannot be changed.

Repeat the command with the **schedule** parameter to configure more than one time slot. This parameter changes only the specified time slots; the configuration for the other time slots is not changed.

An error message appears for the following conditions:

- The subscriber does not exist in the system.
- The subscriber does not have a mailbox.
- The administrator has disabled message notification on a system-wide basis.
- Text paging is enabled before the e-mail address is defined.
- Text paging is enabled and an SMTP server is not configured.
- The system-wide notification preference is set to **urgent** and an attempt is made to set this subscriber's preference to **all**.
- The schedule start time is later than the schedule end time.
- Message text contains a question mark (?).
- Message text is longer than 128 characters.

Using the **no** or **default** form of this command results in the following conditions:

- **no username *username* profile vm-notif-profile text-pager enable** disables the sending of notifications to the device.
- **no username *username* profile vm-notif-profile text-pager address *email-address*** removes the e-mail address assigned to the device and automatically disables the device.
- **no (or default) username *username* profile vm-notif-profile text-pager preference** sets the notification preference to **urgent**.
- **no username *username* profile vm-notif-profile text-pager schedule day *day-of-week* active from *hh:mm* to *hh:mm*** deactivates the sending of notifications for the specified time slot.
- **no username *username* profile vm-notif-profile text-pager text** removes the text associated with this device.

## Examples

The following example configures the cell phone for subscriber user3:

```
se-10-0-0-0# username user3 profile vm-notif-profile text-pager address user1@company.com
se-10-0-0-0# username user3 profile vm-notif-profile text-pager enable
se-10-0-0-0# username user3 profile vm-notif-profile text-pager all
se-10-0-0-0# username user3 profile vm-notif-profile text-pager schedule day 3 active from
08:00 to 10:00
se-10-0-0-0# username user3 profile vm-notif-profile text-pager text "Sales meeting
scheduled in main office conference room C 1:00-3:00 p.m. 4/19/06"
```

## Related Commands

Command	Description
<a href="#">show voicemail notification owner</a>	Displays the voicemail notification configuration for specific subscribers or groups.
<a href="#">username profile (phone devices)</a>	Configures notification parameters for a subscriber's cell phone.

Command	Description
<a href="#">username profile email</a>	Configures notification parameters for a subscriber's e-mail.
<a href="#">username profile num-pager</a>	Configures notification parameters for a subscriber's numeric pager.

