



## Configuring the System Login Banner

---

Use this procedure to configure your system login banner.

---

- Step 1** Choose **System > Login Banner**. The Login Banner window appears.
  - Step 2** Enter the text for the login banner.
  - Step 3** Click **Apply** to save your settings.
-

