



Displaying Cisco Unity Express License Information (9.0 to 9.0.3)

Use this procedure to display Cisco Unity Express license information:

Step 1 Choose **Administration > Licenses**.

The Licenses display appears, showing the following fields:

- Product ID—The Cisco Unity Express hardware installed
 - Serial Number—The serial number for the Cisco Unity Express hardware
 - Feature—The installed license feature
 - Description—Description of the license, such as voice mail mailboxes or IVR
 - Type—Whether the license is a permanent or evaluation license
 - State—Whether the license is Active, Inactive, In Use, or Not in Use
 - Priority—The priority of the license, either High, Medium, or Low
 - Usage—The number of the license that is used
 - Validity Left—Days left that the license is valid (evaluation licenses only)
-

