



---

## A

about the Voice Provisioning Tool [2-3](#)

accessing

audit logs [6-4](#)

product system administrator websites [2-3](#)

the Voice Provisioning Tool website [2-1](#)

accounts

Cisco CallManager provisioning [3-2](#)

Cisco Unity provisioning [3-4](#)

adding

administrators [3-13](#)

product systems

Cisco CallManager [3-1](#)

Cisco Unity [3-3](#)

roles [3-11](#)

Secure Sockets Layer (SSL)

on the VPT web application [4-2](#)

with product systems [4-4](#)

administrators

adding [3-13](#)

deleting [3-14](#)

disabling access [2-5](#)

modifying [3-13](#)

overview [1-2](#)

audit logging

accessing audit logs [6-4](#)

configuring settings [6-3](#)

disk usage for storing log files [6-3](#)

information stored in logs [6-1](#)

overview [1-5](#)

---

## B

backing up the VPT database [5-1](#)

browser security [4-1](#)

---

## C

changing

HTTP port number used to access VPT [2-6](#)

number of search results returned by VPT [2-4](#)

password for another administrator account [3-13](#)

password for your own administrator account [2-2](#)

session timeout length [2-4](#)

Cisco CallManager

adding as a product system [3-1](#)

provisioning account [3-2](#)

using IPSec for securing the connection to [4-12](#)

Cisco Unity

adding as a product system [3-3](#)

provisioning account [3-4](#)

Secure Sockets Layer (SSL)

configuring [4-5](#)

removing [4-10](#)

Configuration window

Audit settings [6-3](#)

Search Results settings [2-4](#)

Security settings

keystore [4-9](#)

session timeout [2-4](#)

configuring

administrators [3-13](#)

audit log settings [6-3](#)

browser security [4-1](#)

product systems [3-1](#)  
 roles [3-11](#)  
 secure communication with product systems [4-4](#)

---

## D

### database

backing up [5-1](#)  
 overview [1-5](#)  
 restoring [5-2](#)

### deleting

administrators [3-14](#)  
 product systems [3-10](#)  
 roles [3-12](#)

disabling administrator access [2-5](#)

---

## F

Full Provisioning role [1-3](#)

---

## G

### Graphical User Interface

accessing [2-1](#)  
 considerations for using [2-2](#)  
 overview [1-1](#)

---

## H

Help [2-3](#)

### HTTP port number used to access VPT

changing [2-6](#)  
 determining [2-1](#)

---

## I

IP Security (IPSec) [4-12](#)

---

## L

logging in [2-2](#)

logging out [2-2](#)

---

## M

### Manage Administrators window

deleting an administrator [3-14](#)  
 disabling administrator access [2-5](#)  
 modifying an administrator [3-13](#)

### Manage Product Systems window

accessing a product system administrative interface  
 from [2-3](#)  
 modifying or deleting a product system [3-9](#)  
 testing a Cisco CallManager product system [3-3](#)  
 testing a Cisco Unity product system [3-9](#)

### modifying

administrators [3-13](#)  
 product systems [3-9](#)  
 roles [3-11](#)

### monitoring

via audit logs [7-1](#)  
 via Windows application event log [7-1](#)

---

## O

online Help [2-3](#)

### overview

administrators [1-2](#)  
 audit logging [1-5](#)  
 database [1-5](#)  
 Graphical User Interface [1-1](#)  
 product systems [1-3](#)  
 roles [1-2](#)  
 voice provisioning [1-4](#)

---

**P**

## passwords

## changing

after login [2-2](#)on another administrator account [3-13](#)security [4-12](#)plug-ins [1-4](#)

## port number used to access VPT

changing [2-6](#)determining [2-1](#)Product SA URL [2-3](#)

## product systems

## adding

Cisco CallManager [3-1](#)Cisco Unity [3-3](#)deleting [3-10](#)modifying [3-9](#)overview [1-3](#)security [4-4](#)


---

**R**

## removing

administrators [3-14](#)product systems [3-10](#)roles [3-12](#)

## Secure Sockets Layer (SSL)

from Cisco Unity product systems [4-10](#)from the VPT web application [4-4](#)restoring the VPT database [5-2](#)Role-Based Access Control (RBAC) overview [1-2](#)

## roles

adding [3-11](#)deleting [3-12](#)modifying [3-11](#)overview [1-2](#)


---

**S**
search results, changing number of [2-4](#)

## Secure Sockets Layer (SSL)

configuring for Cisco Unity product systems [4-4](#)configuring for the VPT web application [4-2](#)removing from Cisco Unity product systems [4-10](#)removing from the VPT web application [4-4](#)

## security

browser [4-2](#)IPSec [4-12](#)password [4-12](#)product system [4-4](#)session timeout length [2-4](#)Super Admin role [1-3](#)


---

**T**

## testing

Cisco CallManager product system, after adding [3-3](#)

Cisco Unity product system

after adding [3-9](#)after enabling SSL [4-10](#)


---

**U**

## URL

Product SA [2-3](#)VPT [2-1](#)using online Help [2-3](#)


---

**V**
View Audit Log window [6-4](#)View-only Provisioning role [1-3](#)

## Voice Provisioning Tool

determining the version of [2-3](#)web address [2-1](#)

---

W

Windows application event log [7-1](#)