



clear Commands

- [clear avc nbar](#), on page 1
- [clear counters](#), on page 1
- [clear cts](#), on page 2
- [clear datapath](#), on page 3
- [clear dot11](#) , on page 3
- [clear logging](#), on page 4

clear avc nbar

To clear AVC NBAR statistics, use the **clear avc nbar** command.

clear avc nbar statistics

Syntax Description	statistics Clears AVC NBAR statistics
Command Modes	Privileged EXEC (#)
Command History	Release Modification 8.1.111.0 This command was introduced.

Examples

The following example shows how to clear AVC NBAR statistics:

```
cisco-ap# clear avc nbar statistics
```

clear counters

To clear 802.11 radio statistics, use the **clear counters** command.

clear countersDot11Radio *interface-number* | **client** | **fast-path profinet** | **wired** *interface-number*
MIB-stats

Syntax Description	Dot11Radio	(Optional) Clears the Dot11 interface statistics.
	<i>interface-number</i>	Dot11Radio interface number; valid value is 0 or 1.
	client	Clears the client statistics.
	fast-path	Clears the controller fast-path statistics.
	profinet	Clears the profinet statistics.
	wired	Clears the wired interface statistics.
	<i>interface-number</i>	Wired interface number, valid value is between 0 and 3.
	MIB-stats	Clears the AP Internal-Switch MIB counters.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	8.1.111.0	This command was introduced.
	8.7	This command was enhanced by adding client , fast-path , profinet , wired parameters.

Examples

The following example shows how to clear 802.11 interface statistics for the interface number specified:

```
cisco-ap# clear counters Dot11Radio 1
```

clear cts

To clear the statistics of Cisco TrustSec Security, use the **clear cts** command.

clear cts role-based counters [**all** | **client** *mac-addr* | **from** *sgt* **to** *dgt*]

Syntax Description	counters	Clears Cisco TrustSec summary counters
	all	Clears all Cisco TrustSec counters
	client <i>mac-addr</i>	Clears the Cisco TrustSec counters for a client MAC address specified in xx:xx:xx:xx:xx:xx format
	from	Specifies the source group tag for filtered traffic
	<i>sgt</i>	Security Group Tag (SGT); valid values are 0 to 65535

to	Specifies the destination group tag for filtered traffic
<i>dgt</i>	Destination Group Tag (DGT); valid values are 0 to 65535

Command Modes Privileged EXEC (#)

Command History **Release** **Modification**

8.1.111.0 This command was introduced.

This example shows you how to clear all the statistics of Cisco TrustSec Security counters:

```
cisco-ap# clear cts role-based counters all
```

clear datapath

To clear the datapath counters or drops, use the **clear datapath** command.

```
clear datapath {drops | statistics}
```

Syntax Description **drops** Clears the datapath drop counters

statistics Clears the datapath counters

Command Modes Privileged EXEC (#)

Command History **Release** **Modification**

8.1.111.0 This command was introduced.

This example shows you how to clear the datapath drop counters:

```
cisco-ap# clear datapath drops
```

clear dot11

To clear the 802.11 configuration, use the **clear dot11** command.

```
clear dot11 sensor
```

Syntax Description **sensor** Clears the sensor configuration and reboots

Command Modes Privileged EXEC (#)

Command History	Release Modification
	8.1.111.0 This command was introduced.

This example shows you how to clear the 802.11 configuration:

```
cisco-ap# clear dot11 sensor
```

clear logging

To clear the logging details, use the **clear logging** command.

clear logging [**capwap** | **message** | **warning**]

Syntax Description	
capwap	(Optional) Clears CAPWAP logging details
message	(Optional) Clears message logging details
warning	(Optional) Clears warnings logging details

Command Modes Privileged EXEC (#)

Command History	Release Modification
	8.1.111.0 This command was introduced.

This example shows you how to clear the CAPWAP logging details:

```
cisco-ap# clear logging capwap
```