



# OSPFv3 Configuration Mode Commands

The OSPFv3 Configuration sub-mode is used to configure the OSPFv3 routing protocol. This mode includes commands that configure OSPFv3 routing parameters.

## Command Modes

Exec > Global Configuration > Context Configuration > OSPFv3 Configuration

**configure > context *context\_name* > router ospfv3**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-ospfv3)#
```



## Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [area, on page 1](#)
- [default-metric, on page 3](#)
- [do show, on page 3](#)
- [end, on page 4](#)
- [exit, on page 4](#)
- [passive-interface, on page 4](#)
- [redistribute, on page 5](#)
- [router-id, on page 6](#)
- [timers spf, on page 7](#)

## area

Configures an Open Shortest Path First Version 3 (OSPFv3) area and enables authentication for that area.

## Product

PDSN

HA

GGSN

## Privilege

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > OSPFv3 Configuration

**configure > context *context\_name* > router ospfv3**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-ospfv3)#
```

**Syntax Description**

```
[ no ] area { decimal_value | ipv4address } default-cost default_integer_value |
stub [ no-summary ] | virtual-link virtuallink_neighbour_Ipv4_address [
dead-interval virtuallink_dead_interval ] [ hello-interval virtuallink_hello_interval
] [ retransmit-interval virtuallink_retransmit_interval ] [ transmit-delay
virtuallink_transmit_delay ]
```

**no**

Disables authentication for the specified area.

***decimal\_value* | *ipv4address***

*decimal\_value*: Specifies the identification number of the area where authentication will be enabled as an integer from 0 through 4294967295.

*ipv4address*: Specifies the IP address of the area where authentication will be enabled in IPv4 dotted-decimal notation.

**default-cost *default\_integer\_value***

Sets the OSPFV3 authentication area's default cost as an integer from 1 through 16777215.

**stub [ no-summary ]**

Sets the OSPFV3 stub area. Only Router-LSAs, Network-LSAs, Inter-area Prefix-LSAs, Intra-area Prefix-LSAs and Link-LSAs are allowed in a Stub area.

**no-summary** Does not inject inter-area routes into stub area.

**virtual-link *virtuallink\_neighbour\_Ipv4\_address***

Configures a virtual link to the authentication area.

*virtuallink\_neighbour\_Ipv4\_address* is the IPv4 address for the virtual link of the authenticated area in dotted-decimal notation.

The following interval timers can be set for the virtual link:

- **dead-interval *virtuallink\_dead\_interval***: Sets the virtual link dead-interval (in seconds) as an integer from 1 through 65535.
- **hello-interval *virtuallink\_hello\_interval***: Sets the virtual link hello interval (in seconds) as an integer from 1 through 65535.
- **retransmit-interval *virtuallink\_retransmit\_interval***: Sets the virtual link retransmit interval (in seconds) as an integer from 1 through 3600.
- **transmit-delay *virtuallink\_transmit\_delay***: Sets the virtual link transmit delay (in seconds) as an integer from 1 through 3600.

**Usage Guidelines**

Use this command to establish OPSFv3 areas and enable authentication.

**Example**

The following command enables authentication for an OSPFv3 area defined by the IP address 192.168.100.10 with default cost of 256

```
area 192.168.100.10 default-cost 256
```

## default-metric

Configures the default metric value for routes redistributed from another protocol into Open Shortest Path First Version 3 (OSPFv3).

**Product**

PDSN

HA

GGSN

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > OSPFv3 Configuration

```
configure > context context_name > router ospfv3
```

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-ospfv3)#
```

**Syntax Description**

```
[ no ] default-metric default_metric_integer_value
```

**no**

Disables the default metric.

**default\_metric\_integer\_value**

Specifies the default metric as an integer from 1 through 16777214.

**Usage Guidelines**

Use this command to configure OPSFv3 default metric.

**Example**

The following command configures OSPFv3 default metric to 256

```
default-metric 256
```

## do show

Executes all **show** commands while in Configuration mode.

**end**

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `do show`

---

**Usage Guidelines** Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

---

## end

Exits the current configuration mode and returns to the Exec mode.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `end`

---

**Usage Guidelines** Use this command to return to the Exec mode.

## exit

Exits the current mode and returns to the parent configuration mode.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `exit`

---

**Usage Guidelines** Use this command to return to the parent configuration mode.

## passive-interface

Configures an interface as being OSPFv3 passive. If a network interface is configured as passive, it will not receive or send any OSPFv3 packets.

<b>Product</b>	PDSN HA GGSN
<b>Privilege</b>	Security Administrator, Administrator
<b>Command Modes</b>	Exec > Global Configuration > Context Configuration > OSPFv3 Configuration <b>configure &gt; context <i>context_name</i> &gt; router ospfv3</b> Entering the above command sequence results in the following prompt: [local]host_name(config-ospfv3)#
<b>Syntax Description</b>	<b>[ no ] passive-interface <i>interface_name</i></b>  <b>no</b> Disables the passive interface.  <b><i>interface_name</i></b> Specifies an OSPFv3 passive interface as an alphanumeric string of 1 through 79 characters.
<b>Usage Guidelines</b>	Use this command to configure an OPSFv3 passive interface in this context.  <b>Example</b> The following command configures the <i>OSPF-if1</i> interface to be OSPFv3 passive. <b>passive-interface OSPF-if1</b>

## redistribute

Redistributes routes from other protocols to OSPFv3 neighbors using the OSPFv3 protocol.

<b>Product</b>	PDSN HA GGSN
<b>Privilege</b>	Security Administrator, Administrator
<b>Command Modes</b>	Exec > Global Configuration > Context Configuration > OSPFv3 Configuration <b>configure &gt; context <i>context_name</i> &gt; router ospfv3</b> Entering the above command sequence results in the following prompt: [local]host_name(config-ospfv3)#

**Syntax Description**

```
[ no ] redistribute { connected | static } redistribute connected [ metric
metric_value [ metric-type external_metric_type ] [ route-map route_map_name ] ] [
metric-type external_metric_type [ route-map route_map_name ] ] [ route-map
route_map_name ] static [ metric metric_value [ metric-type external_metric_type ] [
route-map route_map_name ] ] [ metric-type external_metric_type [ route-map
route_map_name ] ] [ route-map route_map_name ]
```

**no**

Disables the route redistribution.

**connected**

Redistributes connected routes.

**static**

Redistributes static routes.

**metric *metric\_value***

Specifies the OSPFv3 default metric value as an integer from 0 through 16777214.

**metric-type *external\_metric\_type***

Specifies the OSPFv3 external metric type as the integer 1 or 2

**route-map *route\_map\_name***

Specifies a route map as an alphanumeric string of 1 through 79 characters.

**Usage Guidelines**

Use this command to configure OPSFv3 redistribution of connected or static routes.

**Example**

The following command configures OSPFv3 redistribution of connected routes.

```
redistribute connected metric 45 metric-type 1 route-map rt
```

## router-id

Sets the OSPFv3 router ID for the Open Shortest Path First Version 3 (OSPFv3) routing process.

**Product**

PDSN  
HA  
GGSN

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > OSPFv3 Configuration

**configure > context** *context\_name* > **router ospfv3**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-ospfv3) #
```

---

### Syntax Description

[ **no** ] **router-id** *router\_id\_ipaddress*

**no**

Disables the router-id.

**router\_id\_ipaddress**

Specifies the router-id an IPv4 address in dotted-decimal notation.

---

### Usage Guidelines

Use this command to configure OPSF v3 router id to the given IPv4 address.

### Example

The following command configures OSPFv3 router id to the given IPv4 address.

```
router-id 11.22.22.21
```

## timers spf

Sets OSPFv3 the delay in the time between the detection of a topology change and when the SPF algorithm actually runs.

---

### Product

PDSN

HA

GGSN

---

### Privilege

Security Administrator, Administrator

---

### Command Modes

Exec > Global Configuration > Context Configuration > OSPFv3 Configuration

**configure > context** *context\_name* > **router ospfv3**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-ospfv3) #
```

---

### Syntax Description

[ **no** ] **timers spf** *spf\_delay\_timer\_value*

**no**

Disables the SPF delay timer.

**spf\_delay\_timer\_value**

Sets the Shortest Path First (SPF) delay timer (in milliseconds) as an integer from 0 through 4294967295.

**Usage Guidelines**

Use this command to configure the OSPFv3 SPF delay timer.

**Example**

The following command sets OSPFv3 SPF timer.

```
timers spf 256
```