



Remote Server List Configuration Mode Commands

Command Modes

The Remote Server List Configuration Mode manages the list of server addresses to which a context has access.

Exec > Global Configuration > Remote Server List Configuration

configure > **context** *context_name* > **remote-server-list** **name** *list_name*

[*context_name*] *host_name* (config-remote-server-list) #



Important

Available commands or keywords/variables vary based on platform type, product version, and installed license(s).

- [address, on page 1](#)
- [do show, on page 2](#)
- [end, on page 2](#)
- [exit, on page 3](#)

address

Configures or removes an IP address to a remote server.

Product

All

Privilege

Security Administrator, Administrator

Command Modes

Exec > Global Configuration > Remote Server List Configuration

configure > **context** *context_name* > **remote-server-list** **name** *list_name*

[*context_name*] *host_name* (config-remote-server-list) #

Syntax Description

address *remote-ip-address* **netmask** *ip_netmask*

no address *remote-ip-address* **netmask** *ip_netmask*

no

Removes the specified IP address from the Remote Server List.

remote-ip-address netmask ip_netmask

Specifies the IP address and netmask of the remote server in IPv4 dotted-decimal or IPv6 colon-separated-hexadecimal notation.

Usage Guidelines

Use this command to create and maintain a list of remote servers accessible by this context.

Example

```
address 193.154.78.9 netmask 255.255.255.0
```

do show

Executes all **show** commands while in Configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

do show

Usage Guidelines

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

end

Usage Guidelines Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product All

Privilege Security Administrator, Administrator

Syntax Description `exit`

Usage Guidelines Use this command to return to the parent configuration mode.

■ exit