



show hd raid verbose

- [show hd raid verbose](#), on page 1

show hd raid verbose

Table 1: show hd raid verbose Command Output Descriptions

Field	Description
HD RAID	
State	The following conditions apply to the RAID function: Available (clean): At least one disk is ready Available (active): Disk resynchronizing Not Available
Degraded	The following conditions apply: No: Both disks are ready Yes: One disk is ready
UUID	Universal Identification number
Size	Drive size in bytes
Action	The following conditions apply: Idle: Neither resynchronizing nor rebuilding RAID Recovering (dd% done) Rebuilding Resynching (dd% done) Checking (dd% done) Repairing (dd% done)
Disk	Disk name

Field	Description
	<p>The following conditions apply to the disk:</p> <p>State:</p> <p>In-sync componentSpare component: Rebuilding RAIDValid image of UUID: Different imageNot used: Set by AdminFaulty componentInvalid partition or imageUnknown partition or image</p> <p>Created Date image created</p> <p>Updated Date image updated</p> <p>Events Interval event count</p> <p>Model Disk model number</p> <p>Serial Number Disk serial number</p> <p>Location Disk location</p> <p>Size Disk size in bytes</p> <p>Partitions Total number of partitions</p> <p>Partition Partition size in bytes and sectors for each partition</p>