



show chassis-throughput

This chapter includes the **show chassis-throughput** command output table.

- [show chassis-throughput, on page 1](#)

show chassis-throughput

Table 1: show chassis-throughput Command Output Descriptions

| Field | Description |
|--------------------|---|
| Chassis Throughput | Indicates the configured throughput of the chassis. |
| Card/Cpu | Indicates individual distribution of throughput on per card, per CPU basis. |
| Throughput | Indicates the throughput for the individual card/CPU. |

