



## show gtpc-load-control-profile full all

- [show gtpc-load-control-profile full all, on page 1](#)

## show gtpc-load-control-profile full all

This chapter includes the output of the **show gtpc-load-control-profile full all** command.

**Table 1: show gtpc-load-control-profile full all Command Output Descriptions**

Field	Description
GTP-C Load Control Profile Name	The name of this configured Load Control Profile. A string of 1 to 64 alphanumeric characters.
<b>Weightage</b>	
System CPU Utilization Weightage	The weightage, as a percentage of 100, configured for system CPU utilization for this Load Control Profile.
System Memory Utilization Weightage	The weightage, as a percentage of 100, configured for memory utilization for this Load Control Profile.
License Session Utilization Weightage	The weightage, as a percentage of 100, configured for license session utilization for this Load Control Profile.
<b>Inclusion Frequency</b>	
Change Factor	The change factor, as a percentage of 1 to 20, configured for this Load Control Profile.
Advertisement Interval	The configured advertisement-interval for this Load Control Profile. Valid entries are from 0 to 3600 seconds. The default is 300 seconds.
<b>Load control information Handling</b>	
Homer	Indicates if load control information handling is enabled for the home PLMN.

Field	Description
Visitor	Indicates if load control information handling is enabled for the visited PLMN.
<b>Load control information Publishing</b>	
Homer:	Indicates if load control information publishing is enabled for the home PLMN.
Visitor	Indicates if load control information publishing is enabled for the visited PLMN.
<b>Load Threshold</b>	
Threshold	The load threshold setting configured for this node.