



# LTE Forbidden Tracking Area Configuration Mode Commands

---

The LTE Forbidden Tracking Area Configuration Mode is used to create and manage forbidden tracking area code (TAC) configurations.

## Command Modes

Exec > Global Configuration > LTE Policy Configuration > LTE HO Restriction List Configuration > LTE Forbidden Tracking Area Configuration

**configure > lte-policy > ho-restrict-list *list\_name* > forbidden tracking-area plmnid *plmn\_id***

Entering the above command sequence results in the following prompt:

```
[local]host_name(forbidden_ta)#
```



## Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [end](#), on page 2
- [exit](#), on page 3
- [tac](#), on page 4

# end

Exits the current configuration mode and returns to the Exec mode.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `end`

---

**Usage Guidelines** Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**exit**

---

**Usage Guidelines**

Use this command to return to the parent configuration mode.

# tac

Configures a tracking area code (TAC) or area codes where a UE, associated with this LTE policy, is restricted from participating in a handover scenario.

---

**Product** MME

---

**Privilege** Administrator

---

**Command Modes** Exec > Global Configuration > LTE Policy Configuration > LTE HO Restriction List Configuration > LTE Forbidden Tracking Area Configuration

**configure** > **lte-policy** > **ho-restrict-list** *list\_name* > **forbidden tracking-area plmnid** *plmn\_id*

Entering the above command sequence results in the following prompt:

```
[local]host_name(forbidden_ta)#
```

---

**Syntax Description** [ **no** ] **tac** *area\_code* +

**no**

Removes a configured forbidden handover area code or area codes from this policy. If no tracking area code is specified, then all tracking area codes are removed.

**area\_code**

Specifies a tracking area code or area codes from which UEs are restricted from participating in a handover as an integer from 0 to 65535. Multiple area codes can be entered (up to 128 in a single line, separated by spaces).

**+**

Indicates that multiple area codes up to 128 in a single line, separated by spaces, can be entered in this command.

---

**Usage Guidelines** Use this command to configure tracking area codes that will be forbidden to UEs associated with this LTE policy.

## Example

The following command configures eight tracking area codes (1, 2, 3, 4, 5, 6, 7, 8) where a UE, associated with this LTE policy, is restricted from participating in a handover scenario:

```
tac 1 2 3 4 5 6 7 8
```