



# MIP HA Assignment Table Configuration Mode Commands

---

## Command Modes

The Mobile IP HA Assignment Table Configuration Mode is used to assign specific Home Agent (HA) IP addresses to ranges of Mobile Node (MN) IP addresses.

Exec > Global Configuration > Context Configuration > MIP HA Assignment Table

**configure** > **context** *context\_name* > **mobile-ip ha assignment-table** *table\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-mobile-ip-ha-assignment)#
```



## Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [end](#), on page 2
- [exit](#), on page 3
- [hoa-range](#), on page 4

# end

Exits the current configuration mode and returns to the Exec mode.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Syntax Description** `end`

---

**Usage Guidelines** Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**exit**

---

**Usage Guidelines**

Use this command to return to the parent configuration mode.

# hoa-range

This command assigns ranges of Mobile Node (MN) IP addresses to specific Home agent IP addresses.

---

**Product**

HA

---

**Privilege**

Security Administrator, Administrator

---

**Command Modes**

Exec &gt; Global Configuration &gt; Context Configuration &gt; MIP HA Assignment Table

**configure** > **context** *context\_name* > **mobile-ip ha assignment-table** *table\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-mobile-ip-ha-assignment)#
```

---

**Syntax Description**

**[ no ] hoa-range** *ip\_address ip\_address2* **ha** *ip\_address3*

**no**

Removes the specified Home Agent assignment from the assignment table.

***ip\_address ip\_address2***

Specifies a range of MN IP addresses. *ip\_address* and *ip\_address2* must be specified in IPv4 dotted-decimal or IPv6 colon-separated notation.

***ha ip\_address3***

Specifies the IP address of the Home Agent to assign to MNs that are within the specified range. *ip\_address3* must be specified in IPv4 dotted-decimal or IPv6 colon-separated notation.

---

**Usage Guidelines**

Use this command to assign ranges of MN IP addresses to specific HAs.



**Important**

A maximum of eight MIP HA assignment tables can be configured per context with a maximum of eight MIP HA assignment tables across all contexts.



**Important**

A maximum of 256 non-overlapping hoa-ranges can be configured per MIP HA Assignment table with a maximum of 256 non-overlapping hoa-ranges across all MIP HA Assignment tables.

---

**Example**

The following command assigns any MN IP address that falls in the range of *192.168.100.0* through *192.168.101.0* to the HA with the IP address of *192.168.200.10*:

```
hoa-range 192.168.100.0 192.168.101.0 ha 192.168.200.10
```