



Discontinuation of ORBEM Configuration Support

- [Feature Summary and Revision History, on page 1](#)
- [Feature Changes, on page 2](#)

Feature Summary and Revision History

Summary Data

Applicable Product(s) or Functional Area	All
Applicable Platform(s)	<ul style="list-style-type: none">• ASR 5500• VPC-DI• VPC-SI
Feature Default	Disabled – Configuration Required
Related Changes in This Release	Not applicable
Related Documentation	<ul style="list-style-type: none">• <i>ASR 5500 System Administration Guide</i>• <i>Command Line Interface Reference</i>• <i>Ultra Gateway Platform System Administration Guide</i>• <i>VPC-DI System Administration Guide</i>• <i>VPC-SI System Administration Guide</i>

Revision History



Important

Revision history details are not provided for features introduced before releases 21.2 and N5.1.

Revision Details	Release
With this release onwards, the orbem CLI command is discontinued and no longer recommended for use.	21.16
First introduced.	Pre 21.2

Feature Changes

Previous Behavior: In releases earlier to 21.16, the **orbem** CLI command was supported.

New Behavior: With Release 21.16 onwards, the **force** keyword has to be appended to the **orbem** CLI command to enter the ORBEM mode and enable the feature. The **orbem** keyword is now hidden.



Note

Support for the end-of-life ORBEM/WEM feature will be fully discontinued in future releases.
