

MSISDN Group Configuration Mode Commands

The MSISDN Group Configuration Mode provides commands to configure discrete list and range of Mobile Station International Subscriber Directory Number (MSISDN) numbers.

Command Modes

Exec > Global Configuration > MSISDN Group Configuration

configure > msisdn-group group_name

Entering the above command sequence results in the following prompt:

[context_name]host_name(msisdn-group)#



Important

Available commands or keywords/variables vary based on platform type, product version, and installed license(s).

- do show, on page 1
- end, on page 2
- exit, on page 2
- msisdn cc, on page 2
- range, on page 3

do show

Executes all **show** commands while in Configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

do show

Usage Guidelines

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.



Caution

There are some Exec mode show commands which are too resource intensive to run from Config mode. These include: do show support collection, do show support details, do show support record and do show support summary. If there is a restriction on a specific show command, the following error message is displayed:

Failure: Cannot execute 'do show support' command from Config mode.

end

Exits the current configuration mode and returns to the Exec mode.

All **Product**

Security Administrator, Administrator **Privilege**

end **Syntax Description**

Usage Guidelines

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

All **Product**

Security Administrator, Administrator **Privilege**

exit **Syntax Description**

Use this command to return to the parent configuration mode. **Usage Guidelines**

msisdn cc

This command configures the discrete list of MSISDN numbers.

MME Product

SGSN

Administrator **Privilege**

Exec > Global Configuration > MSISDN Group Configuration **Command Modes**

configure

Entering the above command sequence results in the following prompt:

[local]host name(msisdn-group)#

Syntax Description

msisdn cc cc_value number value
no msisdn cc cc_value number value

no

Deletes the specified MSISDN numbers.

cc cc_value

cc is the country code of the subscriber. cc value is a three digit number between 1 and 999.

number value

This keyword allows up to 500 MSISDNs to be configured per group. value is 1 to 14 digit MSISDN number.

Usage Guidelines

Use this command to specify the discrete list of MSISDN numbers (Combination of discrete and range line is 20 per group).

Example

The following command configures the CC as 334 and MSISDN as 12345678901234:

msisdn cc 334 number 12345678901234

range

This command configures the range of MSISDN numbers.

Product

MME

SGSN

Privilege

Administrator

Command Modes

Exec > Global Configuration > MSISDN Group Configuration

configure

Entering the above command sequence results in the following prompt:

[local]host name(msisdn-group)#

Syntax Description

range cc cc_value number first start_range last end_range
no range cc cc_value number first start_range last end_range

no

Deletes the specified MSISDN numbers.

cc cc_value

cc is the country code of the subscriber. cc_value is a three digit number between 1 and 999.

number first start_range last end_range

Specifies the MSISDN range. start_range and end_range are 1 to 14 digit MSISDN numbers.

Usage Guidelines

Use this command to configure the MSISDN range.

Example

The following command configures the CC as 334 and MSISDN range as 12345678901234 and 23456789012341:

range cc 334 number first 12345678901234 last 23456789012341