



## show version

This chapter describes the outputs of the **show version** command.

- [show version verbose, on page 1](#)

## show version verbose

This command displays information about the StarOS software currently running on the system.

**Table 1: show version verbose Command Output Descriptions**

Field	Description
Image Version:	Identifies the StarOS version running on this platform.
Image Branch Version:	<i>StarOS releases prior to 16.1 only:</i> Identifies the StarOS version using its CDETS branch numbering scheme. Format = NNN.NNN(NNN). For example "015.000(001)".
Image Build Number:	<i>StarOS release 16.1 onwards:</i> Displays build number or build type (text string).
Image Description:	Brief text string that describes this build. For example, "Deployment_Build".
Image Date:	The date the software image was generated. Format = DoW MMM DD hh:mm:ss TZ YYYY. For example, "Tue Apr 23 00:45:12 EDT 2013".
Boot Image:	The pathname for the bootable image that is currently running. For example, "/flash/<image_filename>.bin".
Source Commit ID:	A 40-character string that corresponds to the Git commit identifier (SHA-1 hash) for the build.
Kernel Version:	The StarOS kernel version number. For example, "2.6.38-staros-v3-51074-deb-64".
Kernel Machine Type:	The StarOS machine (CPU) type. For example, "x86_64" (64-bit version of the Intel x86 instruction set).



---

**Important**

When you run the **show version** command without the **verbose** keyword, Kernel Version and Kernel Machine Type are not displayed.

---