



## TFTP Configuration Mode Commands

---

The TFTP configuration mode is used to manage the TFTP (Trivial File Transfer Protocol) servers for the current context.

---

### Command Modes

Exec > Global Configuration > Context Configuration > Tunnel TFTP Configuration

**configure > context** *context\_name* > **server tftpd**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-tftpd) #
```



---

### Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

---

- [do show, on page 2](#)
- [end, on page 3](#)
- [exit, on page 4](#)
- [max servers, on page 5](#)

# do show

Executes all **show** commands while in Configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**do show**

---

**Usage Guidelines**

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.



---

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

---

# end

Exits the current configuration mode and returns to the Exec mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**end**

---

**Usage Guidelines**

Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**exit**

---

**Usage Guidelines**

Use this command to return to the parent configuration mode.

## max servers

Configures the maximum number of TFTP servers that can be started within any 60-second interval. If this limit is reached, the system waits two minutes before trying to start any more servers.

---

**Product** All

---

**Privilege** Security Administrator, Administrator

---

**Command Modes** Exec > Global Configuration > Context Configuration > Tunnel TFTP Configuration

**configure > context *context\_name* > server tftpd**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-tftpd)#
```

---

**Syntax Description** **max servers** *count*

***count***

Specifies the maximum number of TFTP servers that can be spawned in any 60-second interval. *count* must be an integer from 1 through 100. Default: 40

---

**Usage Guidelines** Use this command to set the number of servers to tune the system response, as a heavily loaded system may need more servers to support the incoming requests.

The converse would be true in that a system can benefit by reducing the number of servers such that TFTP services do not cause excessive system impact to other services.

### Example

The following command sets the maximum number of TFTP servers to 30:

```
max servers 30
```

max servers