



Unnumbered Interface Configuration Mode Commands

Command Modes

The Unnumbered Interface Configuration Mode creates an unnumbered IP interface within a specified context. An unnumbered interface enables IP processing without assigning an explicit IP address to the interface. In StarOS this type of interface supports an untagged BFD port. The only parameter for this type of interface is a text description.

Exec > Global Configuration > Context Configuration > Ethernet Interface Configuration

configure > context *context_name* > **interface** *interface_name* **unnumbered**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-if-unnumbered) #
```



Important

Available commands or keywords/variables vary based on platform type, product version, and installed license(s).

- [description, on page 1](#)
- [end, on page 2](#)
- [exit, on page 2](#)

description

Sets the descriptive text for the current interface.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

description *text*
no description

no

Clears the description for the interface.

end

text

Specifies the descriptive text as an alphanumeric string of 0 through 79 characters.

Usage Guidelines

Set the description to provide useful information on the interface's primary function, services, end users, etc. Any information useful may be provided.

Example

description sampleInterfaceDescriptiveText

end

Exits the current configuration mode and returns to the Exec mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

end

Usage Guidelines

Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

exit

Usage Guidelines

Use this command to return to the parent configuration mode.