



Feature Defaults Quick Reference

- [Feature Defaults](#), on page 1

Feature Defaults

The following table indicates what features are enabled or disabled by default.

Feature	Default
Bearer Re-establishment	Disabled - Configuration Required
Customized Interface between MME/SGSN and GMPC	Disabled - Configuration Required
CUTO TODR Enhancements with IMSI, FLOW-ID and ULI Information	Disabled - Configuration Required
Deprecation of Manual Scaling	Disabled - Configuration Required
Events Monitoring	Disabled - Configuration Required
HSS and AuC Interworking Configuration Enhancement	Enabled - Always-on
Ignoring SAI, RAI, or CGI in Change Notification Request Messages	Disabled - Configuration Required
Migrating 3G to 4G Context	Enabled - Configuration Required
Non-IP Data Over SCEF	Disabled - Configuration Required
NR UE Security Capability IE for 5G Security Support on MME	Enabled - Configuration Required
N26 Interface Support	Enabled - Always-on
Rewrite TTL on Downlink Packets	Disabled - Configuration Required
Routing Based Realm Name S6B	Disabled - Configuration Required
Supporting Larger Source to Target Container IE in Handover	Enabled - Always On
Support for aaa-acct-arch Bulkstats Counter at System Level	Enabled - Always On

