



IPNE Service Configuration Mode Commands

Command Modes

The IPNE Service Configuration Mode is used to configure and manage the IPNE Service.

Exec > Global Configuration > Context Configuration > IPNE Service Configuration

configure > **context** *context_name* > **ipne-service** *ipne_service_name*

Entering the above command sequence results in the following prompt:

```
[ context_name]host_name (config-ipne-service)#
```



Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).



Important

For information on common commands available in this configuration mode, refer to the [Common Commands](#) chapter.

- [ipne-endpoint](#), on page 1

ipne-endpoint

Creates and configures an IPNE endpoint and enters the IPNE endpoint configuration mode. An IPNE endpoint is a combination of a local IPP address, a peer address and, optionally, a port.

Product

MME

Privilege

Security Administrator, Administrator

Command Modes

Exec > Global Configuration > Context Configuration > IPNE Service Configuration

configure > **context** *context_name* > **ipne-service** *ipne_service_name*

Entering the above command sequence results in the following prompt:

```
[ context_name]host_name (config-ipne-service)#
```

Syntax Description

[no] **ipne-endpoint**

no

Causes the system to delete the IPNE endpoint configuration from the IPNE service configuration.

Usage Guidelines

Use this command to create an IPNE endpoint and to enter the IPNE endpoint sub-configuration mode.

Example

Use the following command to access commands to configure the IPNE endpoint:

```
ipne-endpoint
```