

# **Security Configuration Mode Commands**

The Security configuration mode is a sub-mode of the Global Configuration mode. This sub-mode enables you to define or modify the connection with the Talos Intelligence content-filtering server and configure URL categorization parameters.

**Command Modes** 

#### configure > security

Entering the above command sequence results in the following prompt:

[local]host\_name(config-security)#

Exec > Global Configuration > Security Configuration

**Important** The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- category, on page 2
- end, on page 3
- exit, on page 4
- server, on page 5

### category

Adds or removes a URL categorization server.

<b>(</b>	
Important	This is a license-controlled feature. For more information, contact your Cisco account or support representative.
Product	- All
Privilege	Security Administrator, Administrator
Command Modes	Exec > Global Configuration > Security Configuration
	configure > security
	Entering the above command sequence results in the following prompt:
	<pre>[local]host_name(config-security)#</pre>
Syntax Description	[ no ] category server server_name
	no
	Removes the specified URL categorization server.
	server_name
	Specifies the name of the URL categorization server. <i>server_name</i> must be an alpha and/or numberic string from 1 through 31 characters that is case sensitive.
Usage Guidelines	Use this command to create or remove a URL categorization server from the Security configuration mode.

### end

Exits the current configuration mode and returns to the Exec mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	end
Usage Guidelines	Use this command to return to the Exec mode.

## exit

Exits the current mode and returns to the parent configuration mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	exit
Usage Guidelines	Use this command to return to the parent configuration mode.

#### server

This command creates or specifies a Talos Security Intelligence (TSI) server entry and enters the TSI Server Configuration mode.

<b>(</b>	
Important	This is a license-controlled feature. For more information, contact your Cisco account or support representative.
Product	All
Privilege	Security Administrator, Administrator
Command Modes	Exec > Global Configuration > Security Configuration
	configure > security
	Entering the above command sequence results in the following prompt:
	[local]host_name(config-security)#
Syntax Description	[ no ] server talos-intelligence server_name
	по
	Removes the specified Talos Security Intelligence server.
	server_name
	Specifies the name of the Talos Security Intelligence server to create, configure, or remove. <i>server_name</i> must be an alpha and/or numeric string from 1 through 31 characters that is case sensitive.
Usage Guidelines	Use this command to create, configure, or remove a Talos Security Intelligence server from the Security configuration mode.
	Entering this command results in the following prompt:
	<pre>[local]host_name(config-server-tsi)#</pre>
	The various parameters available for configuration of a TSI server entry are defined in the <i>TSI Server Configuration Mode Commands</i> chapter.

server