



Certificate Policy Configuration Mode Commands

Configure the context level name to be used for the IKEv2 Security Association Certificate Policy for the current context.

Command Modes Exec > Global Configuration > Context Configuration > Certificate Policy Configuration

configure > context *context_name* **Certificate Policy Configuration** *service_name*

Entering the above command sequence results in the following prompt:

[*context_name*]*host_name*(config-cert-policy) #

- [do show, on page 1](#)
- [end, on page 2](#)
- [exit, on page 2](#)
- [id, on page 2](#)

do show

Executes all **show** commands while in Configuration mode.

Product All

Privilege Security Administrator, Administrator

Syntax Description **do show**

Usage Guidelines Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.



Caution There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

Failure: Cannot execute 'do show support' command from Config mode.

end

end

Exits the current configuration mode and returns to the Exec mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	end
Usage Guidelines	Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	exit
Usage Guidelines	Use this command to return to the parent configuration mode.

id

Configures ID for cert-entry.

Product	SecGW
Privilege	Security Administrator, Administrator
Command Modes	Exec > Global Configuration > Context configure > context <i>context_name</i> ikev2-ikesa <i>ikev2_sec_para</i> Entering the above command sequence results in the following prompt: <pre>[local]host_name(config-cert-policy)#</pre>
Syntax Description	<pre>epdg-s2b-gtpv2 send <i>value</i> match-criteria { common-name <i>value</i><i>value</i> </pre> <pre>domain-name <i>value</i> <i>value</i> }</pre> <p>id <i>value</i></p> <p><i>value</i>: is an integer between 1 and 64.</p>

match-criteria

Configures the match criteria to be configured and used for peer using cert as authorization for given Crypto Template.

common-name valuevalue

Configures the entry with match criteria as common-name to be matched with CN in received Certificate.

value: is a string of size 1 through 64.

domain-name valuevalue

Configure the entry with match criteria as domain name to be matched with domain in received Certificate.

value: is a string of size 1 through 64.

Usage Guidelines

Use this command to Enable/Disable the inclusion of the "UE Local IP Address" and "UE UDP Port" AVPs in the GTPv2 Create Session Request message from ePDG to PGW.

Example

Use the following command to configure ID for certificate entry as 4 with match criteria as domain name dom1.

```
id 4 match-criteria domain-name dom1
```

 id