



Remote Secret List Configuration Mode Commands

Command Modes

The Remote Secret List Configuration Mode manages the list of for storing remote secrets based on ID type.

Exec > Global Configuration > Remote Secret List Configuration

> **crypto remote-secret-list** *listname*

```
[local_context]host_name(config-remote-server-list)#
```

- [do show, on page 1](#)
- [end, on page 2](#)
- [exit, on page 2](#)
- [remote-id, on page 2](#)

do show

Executes all **show** commands while in Configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

do show

Usage Guidelines

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.



Caution

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

end

end

Exits the current configuration mode and returns to the Exec mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	end
Usage Guidelines	Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	exit
Usage Guidelines	Use this command to return to the parent configuration mode.

remote-id

Configures the remote pre-shared key based on the ID type.

Product	WSG
Privilege	Security Administrator
Command Modes	Exec > Global Configuration > Remote Secret List Configuration > crypto remote-secret-list listname [<i>local_context</i>] <i>host_name</i> (config-remote-server-list)#
Syntax Description	remote-id id-type { der-asn1-dn fqdn ip-addr key-id rfc822-addr } id id_value secret [encrypted] key key_value no remote-id id-type { der-asn1-dn fqdn ip-addr key-id rfc822-addr } id id_value no Removes the specified ID from the remote secret list.

id-type { der-asn1-dn | fqdn | ip-addr | key-id | rfc822-addr }

Configures the NAI IDr type parameter. If no id-type is specified, then **rfc822-addr** is assumed.

- **der-asn1-dn**: configures NAI Type DER_ASN1_DN (Distinguished Encoding Rules, ASN.1 encoding, Distinguished Name)
- **fqdn**: configures NAI Type ID_FQDN (Internet Fully Qualified Domain Name).
- **ip-addr**: configures NAI Type ID_IP_ADDR (IP Address).
- **key-id**: configures NAI Type ID_KEY_ID (opaque octet string).
- **rfc822-addr**: configures NAI Type ID_RFC822_ADDR (RFC 822 email address).

secret [encrypted] key *key_value*

Specifies the use of an encrypted or plain text secret key. *key_value* is an alphanumeric string of 1 through 255 bytes or a hexadecimal string of 16 to 444 bytes.

Usage Guidelines

Use this command to enter up to 1000 entries in the remote secret list. Each entry is designated by ID type and ID value. Repeat the command sequence to add entries to the list.

Example

The following command enters an ip address in the remote secret list:

```
remote-id id-type ip-addr id 10.1.1.1
```

remote-id