



RANAP Cause Code Group Configuration Mode

Commands in this mode enable the operator to define multiple cause codes for the 3G service.

Command Modes

Exec > Global Configuration > LTE Policy Configuration > RANAP Cause Code Configuration

configure > lte-policy > cause-code-group *group_name* **protocol ranap**

Entering the above command sequence results in the following prompt:

```
[local] host_name(ranap-cause-code)
```



Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).

- [cause](#), on page 1
- [do show](#), on page 2
- [end](#), on page 3
- [exit](#), on page 3

cause

Enables the operator to specify one or more cause codes for the 3G service.

Product

SGSN

Privilege

Security Administrator, Administrator

Command Modes

Exec > Global Configuration > LTE Policy Configuration > RANAP Cause Code Configuration

configure > lte-policy > cause-code-group *group_name* **protocol ranap**

Entering the above command sequence results in the following prompt:

```
[local] host_name(ranap-cause-code)
```

Syntax Description

cause *cause_code*

no cause *cause_code*

no

When included with the command, the specified cause code is deleted from the group. If all cause codes are deleted from the group then the group is automatically deleted.

cause_code

Enter an integer from 1 to 512 to identify a cause code. Valid options are listed in 3GPP TS 25.413 v11.5.0 (or later version), subsection on *Cause* in section for *Radio Network Layer Related IEs*.

Usage Guidelines

A maximum of 16 RANAP protocol cause codes can be defined per group. Note that under each cause code group the maximum number of cause codes (ranap+bssgp+s1ap) that can be supported is 16.

Benefit of using the cause code group for 3G service is

- *if* the RANAP cause code configured by the operator matches with the cause received in the Iu-Release Request message, and
- *if* the Subscriber Overcharging Protection feature is enabled for 3G service in the SGSN-Service configuration,
- *then* the S4-SGSN includes ARRL (i.e., Abnormal Release of Radio Link) bit in Release Access Bearer Request message initiated on Iu-Release.

Example

Repeat the command to define multiple cause codes for the group.

```
cause 27
cause 121
cause 200
```

do show

Executes all **show** commands while in Configuration mode.

Product

All

Privilege

Security Administrator, Administrator

Syntax Description

do show

Usage Guidelines

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

end

Exits the current configuration mode and returns to the Exec mode.

| | |
|---------------------------|--|
| Product | All |
| Privilege | Security Administrator, Administrator |
| Syntax Description | end |
| Usage Guidelines | Use this command to return to the Exec mode. |

exit

Exits the current mode and returns to the parent configuration mode.

| | |
|---------------------------|--|
| Product | All |
| Privilege | Security Administrator, Administrator |
| Syntax Description | exit |
| Usage Guidelines | Use this command to return to the parent configuration mode. |

■ exit