



# RoHC Profile Compression Configuration Mode Commands

---

The RoHC Profile Compression Configuration Mode is used to configure RoHC (Robust Header Compression) Compressor parameters. RoHC is not supported on GGSN.

## Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name *profile\_name* > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```



## Important

The availability of commands, keywords and variables in this mode are dependent on platform type, product version, and installed license(s).

- [context-timeout](#), on page 2
- [do show](#), on page 3
- [end](#), on page 3
- [exit](#), on page 3
- [ipid-history-size](#), on page 4
- [max-jitter-cd](#), on page 4
- [max-sliding-window](#), on page 5
- [multiple-ts-stride](#), on page 6
- [new-context-blocking-time](#), on page 6
- [num-pkts-ts](#), on page 7
- [num-pkts-u-mode](#), on page 8
- [num-updates-ir](#), on page 9
- [optimistic-repeats](#), on page 9
- [rtp-sn-p](#), on page 10
- [rtp-sn-p-override](#), on page 11
- [rtp-time-stride](#), on page 12
- [rtp-ts-deviation](#), on page 13
- [rtp-ts-stride](#), on page 13
- [sliding-window-ts](#), on page 14

- [total-jitter-ipv4](#), on page 15
- [total-jitter-ipv6](#), on page 16
- [unimode-timeout-to-fo-state](#), on page 16
- [unimode-timeout-to-ir-state](#), on page 17
- [use-calculated-rtp-time-stride](#), on page 18
- [use-calculated-rtp-ts-stride](#), on page 18
- [use-ipid-override](#), on page 19
- [use-optimized-talkspurt](#), on page 20
- [use-optimized-transience](#), on page 21
- [use-timer-based-compression](#), on page 21
- [use-uncomp-profile](#), on page 22

## context-timeout

Context timeout in seconds.

---

### Product

HSGW  
PDSN

---

### Privilege

Administrator

---

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure** > **rohc-profile profile-name profile\_name** > **compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp) #
```

---

### Syntax Description

**context-timeout** *seconds*  
**default context-timeout**

#### **default**

Returns the command to its default value.

#### **seconds**

Specifies the context timeout value (in seconds) as an integer from 0 through 100.

Default: 20

---

### Usage Guidelines

Use this command to set the context timeout.

#### **Example**

The following command sets the context timeout to 10 seconds:

```
context-timeout-period 10
```

# do show

Executes all **show** commands while in Configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**do show**

---

**Usage Guidelines**

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.




---

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

---

# end

Exits the current configuration mode and returns to the Exec mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**end**

---

**Usage Guidelines**

Use this command to return to the Exec mode.

# exit

Exits the current mode and returns to the parent configuration mode.

---

**Product**

All

---

**Privilege**

Security Administrator, Administrator

---

**Syntax Description**

**exit**

---

**Usage Guidelines**

Use this command to return to the parent configuration mode.

## ipid-history-size

Specifies the number of IP-IDs of previously sent packets to store. An IP ID is a 16-bit header field that stores IPv4 Identification information.

---

**Product** HSGW  
PDSN

---

**Privilege** Administrator

---

**Command Modes** Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

---

**Syntax Description** **ipid-history-size** *number*  
**default ipid-history-size**

### default

Returns the command to its default value.

### number

Specifies the number of IP IDs to store as an integer from 1 through 32.

Default: 8

---

**Usage Guidelines** Use this command to set the number of IP IDs to store in the history.

### Example

The following command sets the history size to 24 IP-IDs:

```
ipid-history-size 24
```

## max-jitter-cd

Specifies the upper boundary of jitter expected on the communication channel between the compressor and decompressor.

---

**Product** HSGW  
PDSN

---

**Privilege** Administrator

**Command Modes** Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description** **max-jitter-cd** *num\_ms*  
**default max-jitter-cd**

**default**

Returns the command to its default value.

**num\_ms**

Specifies the number of milliseconds for the maximum jitter setting as an integer from 0 through 999999999.

Default: 150

**Usage Guidelines** Use this command to set the maximum amount of jitter allowed on the communication channel between compressor and decompressor.

**Example**

The following command sets the jitter limit to 1000 ms (1 second):

```
max-jitter-cd 1000
```

## max-sliding-window

Specifies the width of the sliding window for W-LSB (Windows-based Least Significant Bits) encoded values.

**Product** HSGW  
 PDSN

**Privilege** Administrator

**Command Modes** Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description** **max-sliding-window** *size*  
**default max-sliding-window**

**default**

Returns the command to its default value.

**size**

Specifies the size of the sliding window as an integer from 1 through 1000.

Default: 6

**Usage Guidelines**

Use this command to set the size of the sliding window used to compute jitter for W-LSB encoded values.

**Example**

The following command sets the sliding window size to 500:

```
max-sliding-window 500
```

## multiple-ts-stride

Enables or disables the use of repeated transmission of RTS\_STRIDE for timer-based compression.

**Product**

HSGW

PDSN

**Privilege**

Administrator

**Command Modes**

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description**

[ no ] **multiple-ts-stride**

**no**

Disables the use of repeated transmission of RTS\_STRIDE for time-based compression.

**Usage Guidelines**

Use this command to enable or disable a gateway's ability to repeatedly transmit RTS\_STRIDE for timer-based compression.

## new-context-blocking-time

Specifies the time period in seconds for blocking the establishment of new contexts after the compressor has received a feedback reject.

**Product**

HSGW

PDSN

**Privilege**

Administrator

**Command Modes** Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp) #
```

**Syntax Description** **new-context-blocking-time** *seconds*  
**default context-timeout**

**default**

Returns the command to its default value.

**seconds**

Specifies the context blocking time (in seconds) as an integer from 0 through 100.

Default: 20

**Usage Guidelines** Use this command to set the context blocking time after the compressor has received a feedback reject.

**Example**

The following command sets the context blocking time to 10 seconds:

```
new-context-blocking-time 10
```

## num-pkts-ts

Specifies the number packets per RTP timestamp (TS).

**Product** HSGW  
PDSN

**Privilege** Administrator

**Command Modes** Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp) #
```

**Syntax Description** **num-pkts-ts** *num\_pkts*  
**default num-pkts-ts**

**default**

Returns the command to its default value.

**num\_pkts**

Specifies the number of packets for the timestamp as an integer from 0 through 999.

Default: 6

**Usage Guidelines**

Use this command to set the number of packets for each RTP timestamp (TS).

**Example**

The following command sets the number of packets per timestamp to 50:

```
num-pkts-ts 50
```

## num-pkts-u-mode

Specifies the number of packets sent when operating in U-Mode (unidirectional mode).

**Product**

HSGW

PDSN

**Privilege**

Administrator

**Command Modes**

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description**

```
num-pkts-u-mode num_pkts
```

```
default num-pkts-u-mode
```

**default**

Returns the command to its default value.

**num\_pkts**

Specifies the number of packets sent in U-Mode as an integer from 0 through 999.

Default: 1

**Usage Guidelines**

Use this command to set the number of packets sent when in U-Mode.

**Example**

The following command sets the number of packets for U-Mode to 50:

```
num-pkts-u-mode 50
```



## num-updates-ir

Configures the number of IR (Initiation and Refresh state) updates.

---

### Product

HSGW  
PDSN

---

### Privilege

Administrator

---

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

---

### Syntax Description

**num-updates-ir** *num\_pkts*  
**default num-updates-ir**

#### default

Returns the command to its default value of 4.

#### *num\_pkts*

Specifies the number of IR updates as an integer from 0 through 999.

Default: 4

---

### Usage Guidelines

Use this command to set the number of IR updates.

#### Example

The following command sets the number of IR updates to 30:

```
num-updates-ir 30
```

## optimistic-repeats

Specifies the number of repeated packets to send to the decompressor. For transition from the FO (First Order) to the SO (Second Order) state, the compressor should be confident that the decompressor has all the parameters needed to decompress according to a fixed pattern. The compressor obtains its confidence about decompressor status by sending several packets with the same information according to the lower compression state. If the decompressor receives any of these packets, it is in sync with the compressor.

---

### Product

HSGW  
PDSN

**Privilege**

Administrator

**Command Modes**

Exec &gt; Global Configuration &gt; RoHC Profile Configuration &gt; RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description****optimistic-repeats** *num\_pkts*  
**default optimistic-repeats****default**

Returns the command to its default value.

**num\_pkts**

Specifies the number of packets to repeat with the same information to assure synchronization with the decompressor.

*num\_pkts* must be an integer from 0 through 10.

Default: 6

**Usage Guidelines**

Use this command to set the number of packets to repeat to the decompressor to assure synchronization before transition states.

**Example**

The following command sets the number of repeated packets to 5:

**optimistic-repeats 5**

## rtp-sn-p

Specifies the value of p in RTP SN (RTP Sequence Number) calculation. Least Significant Bits (LSB) encoding is used for header fields whose values are usually subject to small changes. With LSB encoding, the k least significant bits of the field value are transmitted instead of the original field value, where k is a positive integer. After receiving k bits, the decompressor derives the original value using a previously received value as reference (*v\_ref*). The scheme is guaranteed to be correct if the compressor and the decompressor each use interpretation intervals as follows:

- In which the original value resides
- And in which the original value is the only value that has the exact same k least significant bits as those transmitted.

The interpretation interval can be described as a function:

 $f(v\_ref, k)$ . Let  $f(v\_ref, k) = [v\_ref - p, v\_ref + (2^k - 1) - p]$ 

Where p is an integer.

<b>Product</b>	HSGW PDSN
<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name <i>profile_name</i> &gt; compression-options</b> Entering the above command sequence results in the following prompt: <code>[context_name]host_name(config-rohcprofile-profile_name-comp) #</code>
<b>Syntax Description</b>	<b>rtp-sn-p</b> <i>p_value</i> <b>default rtp-sn-p</b>  <b>default</b> Returns the command to its default value.  <b><i>p_value</i></b> Specifies the value of p in the RTP SN calculation as an integer from 0 through 999. Default: 6
<b>Usage Guidelines</b>	Use this command to set the value for p when performing the RTP SN calculation.  <b>Example</b> The following command sets the value of p to 100: <b>rtp-sn-p 100</b>

## rtp-sn-p-override

Enables an override of p in the RTP SN calculation. This is disabled by default.

<b>Product</b>	HSGW PDSN
<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name <i>profile_name</i> &gt; compression-options</b> Entering the above command sequence results in the following prompt: <code>[context_name]host_name(config-rohcprofile-profile_name-comp) #</code>
<b>Syntax Description</b>	[ <b>default</b>   <b>no</b> ] <b>rtp-sn-p-override</b>

**default**

Returns the command to its default value of disabled.

**no**

Disables overriding p in RTP SN calculation.

**Usage Guidelines**

Use this command to enable an override of p in RTP SN calculation.

**Example**

The following command enables the override of p in the RTP SN calculation:

```
rtp-sn-p-override
```

## rtp-time-stride

Sets the time interval used for one TS (RTP Time Stamp) stride. This interval is used when timer-based encoding is enabled.

**Product**

HSGW  
PDSN

**Privilege**

Administrator

**Command Modes**

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description**

```
rtp-time-stride num_ms  
default rtp-time-stride
```

**default**

Returns the command to its default value.

**num\_ms**

Specifies the number of milliseconds to use for TS\_STRIDE as an integer from 0 through 999999999.

Default: 20

**Usage Guidelines**

Use this command to set the length of the TS\_STRIDE in milliseconds.

**Example**

The following command sets TS\_STRIDE to 100ms:

```
rtp-time-stride 100
```

## rtp-ts-deviation

Sets the maximum percentage of deviation allowed for input RTP packets for timer-based compression.

---

### Product

HSGW  
PDSN

---

### Privilege

Administrator

---

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure > rohc-profile profile-name *profile\_name* > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp) #
```

---

### Syntax Description

**rtp-ts-deviation** *percentage*  
**default rtp-ts-deviation**

#### default

Returns the command to its default value of 25.

#### *percentage*

Specifies the maximum percentage of deviation allowed for input RTP packets for timer-based compression as an integer value from 0 through 100.

Default: 25

---

### Usage Guidelines

Use this command to set the maximum percentage of deviation allowed for input RTP packets for timer-based compression.

#### Example

The following command sets the percentage to 30:

```
rtp-ts-deviation 30
```

## rtp-ts-stride

Specifies the amount by which TS (RTP time stamp) is incremented. This value is used for Scaled RTP TS encoding.

---

### Product

HSGW  
PDSN

<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name profile_name &gt; compression-options</b> Entering the above command sequence results in the following prompt: <pre>[context_name]host_name(config-rohcprofile-profile_name-comp)#</pre>
<b>Syntax Description</b>	<pre><b>rtp-ts-stride</b> num_ms</pre> <pre><b>default rtp-ts-stride</b></pre> <p><b>default</b></p> <p>Returns the command to its default value of 160.</p> <p><b>num_ms</b></p> <p>Specifies the number of milliseconds to use incrementing TS as an integer from 0 through 999999999.          Default: 160</p>
<b>Usage Guidelines</b>	Use this command to set the amount by which TS is incremented for Scaled RTP TS encoding.
	<p><b>Example</b></p> <p>The following command sets amount by which TS is incremented to 100ms:</p> <pre><b>rtp-ts-stride 100</b></pre>

## sliding-window-ts

Sets the sliding window used to compute jitter.

<b>Product</b>	HSGW PDSN
<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name profile_name &gt; compression-options</b> Entering the above command sequence results in the following prompt: <pre>[context_name]host_name(config-rohcprofile-profile_name-comp)#</pre>
<b>Syntax Description</b>	<pre><b>sliding-window-ts</b> size</pre> <pre><b>default sliding-window-ts</b></pre> <p><b>default</b></p> <p>Returns the window to its default value of 4.</p>

**size**

Specifies the size of the sliding window as an integer from 1 through 1000.

Default: 4

**Usage Guidelines**

Use this command to set the size of the sliding window used to compute jitter for the current RoHC profile.

**Example**

The following command sets the sliding window size to 500:

```
sliding-window-ts 500
```

## total-jitter-ipv4

Specifies the total jitter allowed after compression for IPv4.

**Product**

HSGW

PDSN

**Privilege**

Administrator

**Command Modes**

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

**Syntax Description**

```
total-jitter-ipv4 time  
default total-jitter-ipv4
```

**default**

Returns the command to its default value of 270.

**time**

Specifies the time interval to use (in milliseconds) as an integer from 0 through 999999999.

Default: 270

**Usage Guidelines**

Use this command to set the jitter limit after compression.

**Example**

The following command sets the jitter after compression limit to 900 ms:

```
total-jitter-ipv4 900
```

## total-jitter-ipv6

Specifies the total jitter allowed after compression for IPv6.

---

### Product

HSGW  
PDSN

---

### Privilege

Administrator

---

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

---

### Syntax Description

**total-jitter-ipv6** *time*  
**default total-jitter-ipv6**

#### **default**

Returns the command to its default value 580.

#### **time**

Specifies the total jitter interval allowed (in milliseconds) as an integer from 0 through 999999999.

Default: 580

---

### Usage Guidelines

Use this command to set the jitter limit after compression.

#### **Example**

The following command sets the jitter after compression limit to 900 ms:

```
total-jitter-ipv6 900
```

## unimode-timeout-to-fo-state

Specifies the time period in seconds before falling back to the FO (First Order) state.

---

### Product

HSGW  
PDSN

---

### Privilege

Administrator

---

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name profile\_name > compression-options**



Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp) #
```

---

**Syntax Description**

**unimode-timeout-to-fo-state** *num\_ms*  
**default unimode-timeout-to-fo-state**

**default**

Returns the command to its default value of 3.

***num\_ms***

Specifies the timeout period (in seconds) as an integer from 0 through 10.

Default: 3

---

**Usage Guidelines**

Use this command to set the timeout before falling back to the FO state when in Unimode.

**Example**

The following command sets the fall back timeout to 2 seconds:

```
unimode-timeout-to-fo-state 2
```

## unimode-timeout-to-ir-state

Specifies the time period in seconds before falling back to the IR (Initiation and Refresh) state.

---

**Product**

HSGW  
PDSN

---

**Privilege**

Administrator

---

**Command Modes**

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp) #
```

---

**Syntax Description**

**unimode-timeout-to-ir-state** *num\_ms*  
**default unimode-timeout-to-ir-state**

**default**

Returns the command to its default value of 5.

***num\_ms***

Specifies the timeout period in seconds as an integer from 0 through 20.

Default: 5

### Usage Guidelines

Use this command to set the timeout before falling back to the IR state when in Unimode.

### Example

The following command sets the fall back timeout to 3 seconds:

```
unimode-timeout-to-ir-state 3
```

## use-calculated-rtp-time-stride

Overrides the configured value of rtp-time-stride with a calculated value.

### Product

HSGW  
PDSN

### Privilege

Administrator

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration  
**configure > rohc-profile profile-name *profile\_name* > compression-options**

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

### Syntax Description

[ **default** | **no** ] **use-calculated-rtp-time-stride**

#### default

Returns the command to its default value of enabled.

#### no

Disables the use of calculated RTP time stride override.

### Usage Guidelines

This command overrides the configured value of rtp-time-stride with a calculated value.

### Example

The following command overrides the configured value of rtp-time-stride.

```
use-calculated-rtp-time-stride
```

## use-calculated-rtp-ts-stride

Overrides the configured value of rtp-ts-stride with a calculated value.

<b>Product</b>	HSGW PDSN
<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name profile_name &gt; compression-options</b> Entering the above command sequence results in the following prompt: <code>[context_name]host_name(config-rohcprofile-profile_name-comp) #</code>
<b>Syntax Description</b>	<b>[ default   no ] use-calculated-rtp-ts-stride</b>  <b>default</b> Returns the command to its default value of enabled.  <b>no</b> Disables the use of calculated RTP TS time stride override.
<b>Usage Guidelines</b>	This command overrides the configured value of rtp-ts-stride with a calculated value.  <b>Example</b> The following command overrides the configured value of rtp-ts-stride. <b>use-calculated-rtp-ts-stride</b>

## use-ipid-override

Enables or disables overriding the IP-ID (IPv4 Identification header field).

<b>Product</b>	HSGW PDSN
<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name profile_name &gt; compression-options</b> Entering the above command sequence results in the following prompt: <code>[context_name]host_name(config-rohcprofile-profile_name-comp) #</code>
<b>Syntax Description</b>	<b>[ default   no ] use-ipid-override</b>  <b>default</b> Returns the command to its default value of disabled.

**no**

Disables the IP-ID override.

**Usage Guidelines**

Use this command to enable overriding of the IP-ID.

**Example**

The following command enables the IP-ID override feature:

**use-ipid-override**

The following command disables the IP-ID override feature:

**no use-ipid-override**

The following command also disables the IP-ID override feature:

**default use-ipid-override**

## use-optimized-talkspurt

Enables or disables the use of optimized talkspurt.

**Product**

HSGW

PDSN

**Privilege**

Administrator

**Command Modes**

Exec &gt; Global Configuration &gt; RoHC Profile Configuration &gt; RoHC Profile Compression Configuration

**configure > rohc-profile profile-name profile\_name > compression-options**

Entering the above command sequence results in the following prompt:

*[context\_name]host\_name(config-rohcprofile-profile\_name-comp) #***Syntax Description****[ default | no ] use-optimized-talkspurt****default**

Returns the command to its default value of enabled.

**no**

Disables the use of optimized talkspurt.

**Usage Guidelines**

Use this command to enable and disable the use of optimized talkspurt

**Example**

The following command enables the use of optimized talkspurt:

**use-optimized-talkspurt**

The following command disables the use of optimized talkspurt:

```
no use-optimized-talkspurt
```

## use-optimized-transience

Enables or disables the use of optimized transience.

---

### Product

HSGW  
PDSN

---

### Privilege

Administrator

---

### Command Modes

Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration

```
configure > rohc-profile profile-name profile_name > compression-options
```

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-rohcprofile-profile_name-comp)#
```

---

### Syntax Description

```
[ default | no ] use-optimized-transience
```

#### default

Returns the command to its default value of enabled.

#### no

Disables the use of optimized transience.

---

### Usage Guidelines

Use this command to enable or disable the use of optimized transience.

#### Example

The following command enables the use of optimized transience.

```
use-optimized-transience
```

The following command disables the use of optimized transience.

```
no use-optimized-transience
```

## use-timer-based-compression

Enables or disables timer-based compression of the RTP time stamp (TS) at the compressor.

---

### Product

HSGW  
PDSN

<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name <i>profile_name</i> &gt; compression-options</b> Entering the above command sequence results in the following prompt: <pre>[context_name]host_name(config-rohcprofile-profile_name-comp)#</pre>
<b>Syntax Description</b>	<b>[ default   no ] use-timer-based-compression</b>  <b>default</b> Returns the command to its default value of enabled.  <b>no</b> Disables the use of timer-based compression.
<b>Usage Guidelines</b>	Use this command to enable or disable the use of timer-based compression.

**Example**

The following command enables the use of timer-based compression.

```
use-timer-based-compression
```

The following command disables the use of timer-based compression.

```
no use-timer-based-compression
```

## use-uncomp-profile

Enables or disables the use of the Uncompressed Profile (0x0000) if required at the compressor.

<b>Product</b>	HSGW PDSN
<b>Privilege</b>	Administrator
<b>Command Modes</b>	Exec > Global Configuration > RoHC Profile Configuration > RoHC Profile Compression Configuration <b>configure &gt; rohc-profile profile-name <i>profile_name</i> &gt; compression-options</b> Entering the above command sequence results in the following prompt: <pre>[context_name]host_name(config-rohcprofile-profile_name-comp)#</pre>
<b>Syntax Description</b>	<b>[default   no ] useS-uncomp-profile</b>  <b>default</b> Returns the command to its default value of disabled.

**no**

Disables the use of the Uncompressed Profile.

---

**Usage Guidelines**

Use this command to enable or disable the use of the Uncompressed Profile.

**Example**

The following command enables the use of the Uncompressed Profile.

```
use-uncomp-profile
```

The following command disables the use of the Uncompressed Profile.

```
no use-uncomp-profile
```

**use-uncomp-profile**