



Common Commands

This chapter describes the common commands available in each CLI configuration mode.

- [do show, on page 1](#)
- [end, on page 1](#)
- [exit, on page 2](#)

do show

Executes all **show** commands while in Configuration mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	do show
Usage Guidelines	Use this command to run all Exec mode show commands while in Configuration mode. It is not necessary to exit the Config mode to run a show command.

The pipe character | is only available if the command is valid in the Exec mode.



Caution There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

Failure: Cannot execute 'do show support' command from Config mode.

end

Exits the current configuration mode and returns to the Exec mode.

Product	All
---------	-----

Privilege	Security Administrator, Administrator
Syntax Description	<code>end</code>
Usage Guidelines	Use this command to return to the Exec mode.

exit

Exits the current mode and returns to the parent configuration mode.

Product	All
Privilege	Security Administrator, Administrator
Syntax Description	<code>exit</code>
Usage Guidelines	Use this command to return to the parent configuration mode.