

PCC-Quota Service Configuration Mode Commands

| | (| | |
|--------------|-------------|---|--|
| Important | | This configuration mode is supported from StarOS Release 12.1 onward. | |
| Command Mode | (IP) use | e PCC-Quota Service Configuration mode provides a mechanism for Intelligent Policy Control Function CF) to manage the external interfaces required for quota management purpose. The PCC-Quota service es Gx interface towards PCEF/DPI node for Volume-Reporting-Over-Gx (VRoGx) for Quota management a messaging based on a Diameter dictionary. This mode exists within Context Configuration mode. | |
| | | ec > Global Configuration > Context Configuration > PCC Service Configuration > PCC Quota Service nfiguration | |
| | cor | <pre>hfigure > context context_name > pcc-quota-service service_name</pre> | |
| | ¢ | | |
| _ | Important | The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s). | |
| | (| | |
| - | Important | For information on common commands available in this configuration mode, refer to the Common Commands chapter. | |
| | | associate pcc-service, on page 1 diameter dictionary, on page 2 diameter origin end-point, on page 3 max total-charging-sessions, on page 4 | |

associate pcc-service

This command is used to associate a pre-configured PCC-Service with a PCC-Quota service for IPCF configuration.

| Configuration Configuration configure > context context_name > pcc-quota-service service_name Syntax Description associate pcc-service pcc_service_name [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. | Id Modes Exec > Global Configuration > Context Configuration > PCC Service Configuration > PCC Quota Service Configure > context context_name > pcc-quota-service service_name Description associate pcc-service pcc_service_name [no] associate pcc-service NO Removes/disassociate the configured PCC-service from this PCC-Quota service instance configured for IPCF configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. | Product | - IPCF |
|---|--|--------------------|---|
| Configuration Configuration configure > context context_name > pcc-quota-service service_name Syntax Description associate pcc-service pcc_service_name [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanum | Configuration configure > context context_name > pcc-quota-service service_name associate pcc-service pcc_service_name [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configured for IPCF configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | Privilege | Security Administrator, Administrator |
| Syntax Description associate pcc-service pcc_service_name [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanum | Description associate pcc-service pcc_service_name [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configured for IPCF configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | Command Modes | |
| [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanum | [no] associate pcc-service no Removes/disassociate the configured PCC-service from this PCC-Quota service instance configured for IPCF configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | | configure > context <i>context_name</i> > pcc-quota-service <i>service_name</i> |
| Removes/disassociate the configured PCC-service from this PCC-Quota service instance configuration. <i>pcc_service_name</i> Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. The <i>pcc_service_name</i> is name of a predefined PCC-Service instance and must be an alphanum | Removes/disassociate the configured PCC-service from this PCC-Quota service instance configured for IPCF configuration. <i>pcc_service_name</i> Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The <i>pcc_service_name</i> is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | Syntax Description | |
| <pre>configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanum</pre> | configuration. pcc_service_name Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. Guidelines Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | | no |
| Specifies the name of a pre-configured PCC-service configured in Context Configuration mode configuration. The <i>pcc_service_name</i> is name of a predefined PCC-Service instance and must be an alphanum | Specifies the name of a pre-configured PCC-service configured in Context Configuration mode for IPCF configuration. The <i>pcc_service_name</i> is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | | |
| configuration. The <i>pcc_service_name</i> is name of a predefined PCC-Service instance and must be an alphanum | configuration. The pcc_service_name is name of a predefined PCC-Service instance and must be an alphanumerical string from 1 through 63 characters. Guidelines Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | | pcc_service_name |
| | from 1 through 63 characters. Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | | |
| | | | |
| Usage Guidelines Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. | | Usage Guidelines | Use this command to associate a pre-configured PCC-Service instance for IPCF configuration. |
| | Important For more information on PCC-Service configuration, refer <i>PCC-Service Configuration Mode Commands</i> . | | |
| Important For more information on PCC-Service configuration, refer PCC-Service Configuration Material | | Impo | For more information on PCC-Service configuration, refer <i>PCC-Service Configuration Mode Commands</i> . |
| Example | | | Following command binds a PCC-Service named <i>pcc_svc1</i> with in a PCC-Quota service. |

associate pcc-service pcc_svc1

Following command removes an associated PCC-Service named pcc_svc1 from a PCC-Quota service.

no associate pcc-service pcc_svc1

diameter dictionary

This command is used to assign a 3GPP Rel. 8 Gx standard Diameter dictionary for **VRoGx** messaging with a PCC-Quota service for IPCF configuration.

| Product | IPCF |
|---------------|---|
| Privilege | Security Administrator, Administrator |
| Command Modes | Exec > Global Configuration > Context Configuration > PCC Service Configuration > PCC Quota Service Configuration |

| | <pre>configure > context_name > pcc-quota-service service_name</pre> |
|--------------------|--|
| Syntax Description | [no]diameter dictionary standard |
| | no |
| | Removes the assigned a 3GPP Rel. 8 Gx standard Diameter dictionary for VRoGx messaging with a PCC-Quota service for IPCF configuration. |
| Usage Guidelines | Use this command to assign a 3GPP Rel. 8 Gx standard Diameter dictionary for VRoGx messaging in PCC-Quota service for quota management. |
| | Example |
| | Following command sets the PCC-Quota service to use 3GPP Rel. 8 standard dictionary over Gx |

Following command sets the PCC-Quota service to use 3GPP Rel. 8 standard dictionary over **Gx** interface and **VRoGx** supported quota management related messaging in a PCC-Quota service:

diameter dictionary standard

diameter origin end-point

This command is used to bind/associate a pre-configured Diameter host/realm (SSC/SPR) over **Sp** interface with a PCC-Quota service to be used for subscriber quota management.

| Product | IPCF |
|--------------------|--|
| Privilege | Security Administrator, Administrator |
| Command Modes | Exec > Global Configuration > Context Configuration > PCC Service Configuration > PCC Quota Service Configuration |
| | <pre>configure > context context_name > pcc-quota-service service_name</pre> |
| Syntax Description | diameter origin endpoint dia_endpoint_name no diameter origin endpoint |
| | no |
| | Removes the associated Diameter Origin Endpoint configuration from PCC-Quota service instance configured for IPCF configuration. |

any

Sets the PCC-Quota service instance to use any available PCEF/DPI node over **Sp** interface for quota management.

dia_endpoint_name

The *dia_endpoint_name* is a predefined Diameter origin endpoint node and must be an alphanumerical string from 1 through 63 characters.

Usage Guidelines Use this command to bind the SSC/SPR node over **Sp** interface by associating a pre-configured Diameter Origin Endpoint with a PCC-Quota service.

The Diameter origin endpoint must be a pre-configured instance in the Context Configuration Mode. For more information on Diameter origin endpoint configuration, refer *Diameter Endpoint Configuration Mode Commands* chapter.

Example

Following command associates a pre-configured Diameter endpoint node configuration named *ssc1* with a PCC-Quota service for subscriber quota management.

```
diameter origin endpointssc1
```

Following command removes the pre-associated Diameter endpoint node configuration named *ssc1* with a PCC-Quota service.

no diameter origin endpoint

max total-charging-sessions

This command is used configure the maximum limit of the charging sessions allowed in a PCC-Quota service instance on IPCF.

| Product | IPCF |
|--------------------|---|
| Privilege | Security Administrator, Administrator |
| Command Modes | Exec > Global Configuration > Context Configuration > PCC Service Configuration > PCC Quota Service Configuration |
| | <pre>configure > context context_name > pcc-quota-service service_name</pre> |
| Syntax Description | max total-charging-sessions max_session default max total-charging-sessions |
| | default |
| | Sets the maximum charging sessions allowed in PCC-Quota service instance to default value of charging sessions. |
| | max_session |
| | Default: 1 |
| | Specifies the maximum number of charging sessions configured in PCC-Quota service to allow to be connected in PCC-Quota service instance. |
| | max_session must be an integer between 0 and 113. |
| Usage Guidelines | Use this command to set the maximum number of charging sessions allowed by a PCC-Quota service instance on IPCF. |

Example

Following command sets the maximum number of charging sessions allowed in PCC-Quota service instance to 10000.

default max total-charging-sessions