



# Plugin Configuration Mode Commands

You enter this mode using the **plugin** command in the Global Configuration mode.

## Command Modes

This chapter describes the commands available in the Plugin Configuration Mode. This mode is associated with the Dynamic Software Upgrade (DSU) process described in the *System Administration Guide*.

Exec > Global Configuration > Plugin Configuration

**configure** > **plugin** *plugin\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-plugin-plugin_name)#
```



### Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).



### Important

For information on common commands available in this configuration mode, refer to the [Common Commands](#) chapter.

- [attribute](#), on page 1
- [module priority](#), on page 2

## attribute

This command is not supported in this release.

### Product

All

### Privilege

Security Administrator, Administrator

### Command Modes

Exec > Global Configuration > Plugin Configuration

**configure** > **plugin** *plugin\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-plugin-plugin_name)#
```

**Syntax Description** **attribute** *attribute\_name attribute\_value*

**Usage Guidelines** The command is not supported in this release.

## module priority

Configures the priority in the Version Priority List (VPL) for a specified version of a plugin module.

**Product** ADC

**Privilege** Security Administrator, Administrator

**Command Modes** Exec > Global Configuration > Plugin Configuration

**configure** > **plugin** *plugin\_name*

Entering the above command sequence results in the following prompt:

```
[context_name]host_name(config-plugin-plugin_name)#
```

**Syntax Description** **module priority** *number version plugin\_version attribute attribute\_name attribute\_value*  
**no module priority** *number*

**no**

Removes the configured priority in the module priority list.

**priority** *number*

Specifies the priority of the plugin module as an integer from 1 through 100. Priority "1" has the highest priority.

**version** *plugin\_version*

Specifies the version number of the plugin module. The version number is derived from the filename of the downloaded plugin.

**attribute** *attribute\_name attribute\_value*

Specifies an attribute value pair.

*attribute\_name* specifies the name of an attribute value pair as an alphanumeric string from 1 through 255 characters.

*attribute\_value* specifies the value of an attribute value pair as an alphanumeric string from 1 through 255 characters.

**Usage Guidelines** Assign a priority number to a specific version of patch for the corresponding plugin. The priority number in the module priority list determines which version will be loaded when the **update module** command is used.

The **show plugin** command displays the VPL configuration status of this plugin module.

**Example**

The following command sets the priority of p2p plugin module version *1.17.4340* to 2 where the filename was **libp2p-1.2.0.so.tgz**:

```
module priority 2 version 1.2.0
```

■ module priority