



Network Service Virtual Connection Configuration Mode Commands

Command Modes	<p>The Network Service Virtual Connection (NSVC) configuration mode is a sub-mode of the Network Service Entity (NSE) - Peer NSEI (for Frame Relay) configuration mode. The NSVC sub-mode creates a configuration instance for a specific NSVC, within the Gb interface, between a BSS and an SGSN in a 2.5G GPRSFrame Relay network connection.</p> <p>Exec > Global Configuration > Network Service Entity - Frame Relay Peer NSEI Configuration > NSVC Configuration</p> <p>configure > network-service-entity peer-nsei <i>peer_nsei</i> framerelay > ns-vc <i>nsvc_id</i></p> <p>Entering the above command sequence results in the following prompt:</p> <pre>[local]host_name(nse-fr-peer-nsei-nse_id-nsvci-nsvc_instance)#</pre>
Important	<p>The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).</p>
Important	<p>For information on common commands available in this configuration mode, refer to the Common Commands chapter.</p>

