



show gtpc-load-control-profile full all

- [show gtpc-load-control-profile full all, on page 1](#)

show gtpc-load-control-profile full all

This chapter includes the output of the **show gtpc-load-control-profile full all** command.

Table 1: show gtpc-load-control-profile full all Command Output Descriptions

Field	Description
GTP-C Load Control Profile Name	The name of this configured Load Control Profile. A string of 1 to 64 alphanumeric characters.
Weightage	
System CPU Utilization Weightage	The weightage, as a percentage of 100, configured for system CPU utilization for this Load Control Profile.
System Memory Utilization Weightage	The weightage, as a percentage of 100, configured for memory utilization for this Load Control Profile.
License Session Utilization Weightage	The weightage, as a percentage of 100, configured for license session utilization for this Load Control Profile.
Inclusion Frequency	
Change Factor	The change factor, as a percentage of 1 to 20, configured for this Load Control Profile.
Advertisement Interval	The configured advertisement-interval for this Load Control Profile. Valid entries are from 0 to 3600 seconds. The default is 300 seconds.
Load control information Handling	
Homer	Indicates if load control information handling is enabled for the home PLMN.
Visitor	Indicates if load control information handling is enabled for the visited PLMN.

Field	Description
Load control information Publishing	
Homer:	Indicates if load control information publishing is enabled for the home PLMN.
Visitor	Indicates if load control information publishing is enabled for the visited PLMN.
Load Threshold	
Threshold	The load threshold setting configured for this node.