



Preface

This preface describes the audience, organization, and conventions of the Cisco 5760 Wireless LAN Controller CleanAir Configuration Guide. It also provides information on how to obtain other documentation. This chapter includes the following sections:

- [Audience, page i](#)
- [Document Organization, page i](#)
- [Conventions, page i](#)
- [Purpose, page ii](#)
- [Related Documentation, page iii](#)
- [Obtaining Documentation and Submitting a Service Request, page iii](#)

Audience

This guide is for the networking professional managing the Catalyst 3850 switch, hereafter referred to as the switch module. Before using this guide, you should have experience working with the Cisco IOS software and be familiar with the concepts and terminology of Ethernet and local area networking.

Document Organization

Conventions

This publication uses these conventions to convey instructions and information:

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) means optional elements.
- Braces ({{}}) group required choices, and vertical bars (|) separate the alternative elements.

Purpose

- Braces and vertical bars within square brackets ([{ | }]) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in screen font.
- Information you enter is in boldface screen font
- Nonprinting characters, such as passwords or tabs, are in angle brackets (<>).

Notes, cautions, and warnings use these conventions and symbols:

**Note**

Means reader take note. Notes contain helpful suggestions or references to materials not contained in this manual.

Purpose

This guide provides the information that you need about the CleanAir feature that have been created or changed for use with the Catalyst 3850 switch.

This guide provides procedures for configuring the Cisco CleanAir feature for the access point and the controller.

This guide does not describe system messages you might encounter or how to install your switch. For more information, see the Catalyst 3850 Switch System Message Guide for this release and the Catalyst 3850 Switch Hardware Installation Guide.

For documentation updates, see the release notes for this release.

This guide provides the information that you need about the Radio Resource Management feature that have been created or changed for use with the Catalyst 3850 switch.

This guide provides procedures for configuring the Radio Resource Management feature for the access point and the controller.

This guide does not describe system messages you might encounter or how to install your switch. For more information, see the Catalyst 3850 Switch System Message Guide for this release and the Catalyst 3850 Switch Hardware Installation Guide.

For documentation updates, see the release notes for this release.

This guide provides the information that you need about the Multicast feature that have been created or changed for use with the Catalyst 3850 switch.

This guide provides procedures for configuring the Multicast feature for the access point and the controller.

This guide does not describe system messages you might encounter or how to install your switch. For more information, see the Catalyst 3850 Switch System Message Guide for this release and the Catalyst 3850 Switch Hardware Installation Guide.

For documentation updates, see the release notes for this release.

Related Documentation

For additional information about wireless LAN technology documentation, see the following guides:

-

Obtaining Documentation and Submitting a Service Request

Obtaining Documentation and Submitting a Service Request