



Cisco Universal Small Cell 8x18 Dual-Mode Module

- [Information About Cisco Universal Small Cell 8x18 Dual-Mode Module, page 1](#)
- [Configuring Cisco Universal Small Cell 8x18 Dual-Mode Module, page 2](#)
- [Configuring USC8x18 Dual-Mode Module in Different Scenarios, page 3](#)

Information About Cisco Universal Small Cell 8x18 Dual-Mode Module

Cisco Universal Small Cell 8x18 Dual-Mode Module is an external module (4G/LTE) that can be plugged into the Cisco Aironet 3600I APs or Cisco Aironet 3700I APs. The following features are available:

- You can configure VLAN tagging for the external module's traffic for the following modes:

Mode	Native VLAN	Non-Native VLAN
FlexConnect Local Switching	Supported	Supported
Local Mode Central Switching	Supported	Supported

- The module can be powered up by the PoE+ power supply
- Co-existence detection and warning when Wi-Fi in 2.4 GHz and 3G/4G module are enabled
- The module's inventory details are available on the Cisco WLC GUI at **Wireless > Access Points > Access Point name > Inventory**.
- Supported on the following Cisco Wireless Controller models:
 - Cisco 2504 WLC
 - Cisco 5508 WLC
 - Cisco 5520 WLC

- Cisco Flex 7510 WLC
- Cisco 8510 WLC
- Cisco 8540 WLC
- Cisco Virtual Controller
- Cisco WiSM2

- Supported on the following Cisco Access Point models:
 - Cisco Aironet 3600I AP
 - Cisco Aironet 3700I AP

Restrictions

Cisco Universal Small Cell 8x18 Dual-Mode Modules are not supported on the following Cisco Access Point models:

- Cisco Aironet 3600E AP
- Cisco Aironet 3700E AP

For more information about Cisco Universal Small Cell 8x18 Dual-Mode modules, see <http://www.cisco.com/c/en/us/support/wireless/universal-small-cell-8000-series/tsd-products-support-series-home.html>.

Configuring Cisco Universal Small Cell 8x18 Dual-Mode Module

Configuring Cisco Universal Small Cell 8x18 Dual-Mode Module (GUI)

Step 1 Choose **Wireless > Access Points > All APs**.

Step 2 Click the AP name.

The **All APs > Details** page is displayed.

Step 3 In the **Advanced** tab, check or uncheck the **External Module Status** check box.

You might be prompted with a co-existence warning when Wi-Fi in 2.4-GHz and 3G/4G module are enabled.

Configuring Cisco Universal Small Cell 8x18 Dual-Mode Module (CLI)

- Enable or disable the Cisco USC 8x18 Dual-Mode Module by entering this command:

```
config ap module3G {enable | disable} ap-name
```

You might be prompted with a co-existence warning when Wi-Fi in 2.4-GHz and 3G/4G module are enabled.

Configuring USC8x18 Dual-Mode Module in Different Scenarios

Configuring VLAN Tagging for USC8x18 Dual-Mode Module in FlexConnect Local Switching (GUI)

Step 1 Choose **Wireless > Access Points > All APs**.

Step 2 Click the AP name.

The **All APs > Details** page is displayed.

Step 3 In the **FlexConnect** tab, check the **VLAN Support** check box and enter the number of the native VLAN on the remote network (such as 100) in the **Native VLAN ID** box.

Step 4 To enable FlexConnect Local Switching with VLAN ID that is other than 0:

- Enable **FlexConnect Local Switching** under **External Module**.
- Enter a value between 2 and 4096 in the **VLAN ID** box.
- Click **Apply**.

Step 5 To enable FlexConnect local switching with VLAN ID equal to 0:

- Enable **FlexConnect Local Switching** under **External Module**.
- Click **Apply**.

Step 6 To remove the FlexConnect local switching per AP configuration, click **Remove AP Specific Config**.

Step 7 Save the configuration.

Configuring VLAN Tagging for USC8x18 Dual-Mode Module in FlexConnect Local Switching (CLI)

- **config ap flexconnect module-vlan enable ap-name**—Enables FlexConnect local switching for external module with native VLAN
- **config ap flexconnect module-vlan remove ap-name**—Removes the AP specific external module VLAN configuration
- **config ap flexconnect module-vlan enable ap-name vlan vlan-id**—Enables FlexConnect local switching with non-native VLAN for the external module
- **show ap module summary {ap-name | all}**—Displays detailed information about the external module.
- **show ap inventory {ap-name | all}**—Displays information about the AP's inventory and the external module, if the module is present
- **show ap flexconnect module-vlan ap-name**—Displays status of FlexConnect local switching and VLAN ID value

- **show ap config general ap-name**—Displays information about the external module info, if the module is present.

Configuring VLAN Tagging for USC8x18 Dual-Mode Module in FlexConnect Group Local Switching (GUI)

Step 1 Choose Wireless > FlexConnect Groups.

Step 2 Click New, enter the FlexConnect group name, and click **Apply**.

Step 3 On the **FlexConnect Groups > Edit** page, in the **FlexConnect APs** area, click **Add AP**.

Step 4 You can either select an AP from a list of APs associated with the Cisco WLC or directly specify the Ethernet MAC address of the AP that is associated with the Cisco WLC.

Step 5 Click **Add**.

Step 6 To enable FlexConnect Local Switching with VLAN ID:

- Enable **FlexConnect Local Switching** under **External Module Configuration**.
- Enter a value between 2 and 4096 in the **VLAN ID** box.
- Click **Apply**.

Step 7 Save the configuration.

Configuring VLAN Tagging for USC8x18 Dual-Mode Module in FlexConnect Group Local Switching (CLI)

- **config flexconnect group group-name module-vlan enable vlan vlan-id**—Enables FlexConnect local switching for the FlexConnect group
- **config flexconnect group group-name module-vlan disable**—Disables the FlexConnect local switching for the FlexConnect group
- **show flexconnect group detail group-name module-vlan**—Displays status of the FlexConnect local switching and VLAN ID in the group

Configuring USC8x18 Dual-Mode Module in Local Mode Central Switching (GUI)

Step 1 Create a Remote LAN.

For instructions to create a remote LAN, see the *Configuring Remote LANs* chapter under *WLANS*.

Step 2 On the **WLANS > Edit** page, click the **Security** tab.

Step 3 In the **Layer 2** sub-tab, uncheck the **MAC Filtering** check box.

Note Remote LAN should be configured only with open security. 802.1X security is not supported.

Step 4 To see the current state of the 3G/4G client, choose **Monitor > Clients** to open the **Clients** page.

Step 5 Save the configuration.

Configuring USC8x18 Dual-Mode Module in Local Mode Central Switching (CLI)

- Create a Remote LAN.

For instructions to create a remote LAN, see the *Configuring Remote LANs* chapter under *WLANS*.

- **config interface 3g-vlan *interface-name* {enable | disable}**—Enables or disables the 3G/4G-VLAN interface
- **show interface detailed *interface-name***—Displays status of the 3G/4G-VLAN flag
- **show client summary ip**—Displays status of the 3G/4G clients

