



FlexConnect AP Easy Admin

- [Information About FlexConnect AP Easy Admin, on page 1](#)
- [Configuring FlexConnect AP Easy Admin on the Controller \(GUI\), on page 1](#)
- [Configuring FlexConnect AP Easy Admin on the Controller \(CLI\), on page 2](#)

Information About FlexConnect AP Easy Admin

The FlexConnect AP Easy Admin enables unified AP GUI access and configure the following parameters to connect to the controller:

- AP IP address—Static or DHCP IP address.
- WLC IP address priming—Ability to configure the primary, secondary, and tertiary WLC, and their IP addresses.
- CAPWAP preferred DNS configuration.
- PPPoE—Enabling of FlexConnect submode and configuring the username and password for PPPoE server authentication.
- TFTP—AP image upgrade through TFTP.

Configuring FlexConnect AP Easy Admin on the Controller (GUI)

Procedure

- Step 1** Choose **Wireless > Access Points > Global Configuration**.
- The **Global Configuration** page is displayed.
- Step 2** In the **AP Easy Configuration** section, select the **Enable Global AP Easy Configuration** check box.
- Note** Easy Configuration is only applicable to IOS AP 702/1530/1600/1700/2700/3600/3700.
- Step 3** Click **Apply**.
-

Configuring FlexConnect AP Easy Admin on the Controller (CLI)

Procedure

Step 1 Enable or disable AP Easy Admin on the Cisco WLC by entering this command:

```
config network ap-easyadmin {enable | disable}
```

Step 2 View the network summary and to verify the status of AP easy admin feature by entering this command:

```
show network summary
```
