



## FlexConnect AP Easy Admin

---

- [FlexConnect AP Easy Admin, on page 1](#)
- [Configuring FlexConnect AP Easy Admin on the Controller \(GUI\), on page 1](#)
- [Configuring FlexConnect AP Easy Admin on the Controller \(CLI\), on page 2](#)

## FlexConnect AP Easy Admin

The FlexConnect AP Easy Admin enables unified AP GUI access and configure the following parameters to connect to the controller:

- AP IP address: Static or DHCP IP address.
- WLC IP address priming: Ability to configure the primary, secondary, and tertiary WLC, and their IP addresses.
- CAPWAP preferred DNS configuration.
- PPPoE: Enabling of FlexConnect submode and configuring the username and password for PPPoE server authentication.
- TFTP: AP image upgrade through TFTP.

## Configuring FlexConnect AP Easy Admin on the Controller (GUI)

### Procedure

---

**Step 1** Choose **Wireless > Access Points > Global Configuration**.

The **Global Configuration** page is displayed.

**Step 2** In the **AP Easy Configuration** section, check the **Enable Global AP Easy Configuration** check box.

**Note** Easy Configuration is only applicable to the following Cisco Wave 1 (IOS-based) APs: 702, 1530, 1700, 2700, and 3700.

**Step 3** Click **Apply**.

---

## Configuring FlexConnect AP Easy Admin on the Controller (CLI)

### Procedure

---

**Step 1** Enable or disable AP Easy Admin on the Cisco WLC by entering this command:

```
config network ap-easyadmin {enable | disable}
```

**Step 2** View the network summary and to verify the status of AP easy admin feature by entering this command:

```
show network summary
```

---