



Clear Commands: a to l

- [clear advanced](#), on page 2
- [clear acl counters](#), on page 3
- [clear ap config](#), on page 4
- [clear ap eventlog](#), on page 5
- [clear ap join stats](#), on page 6
- [clear arp](#), on page 7
- [clear ap tsm](#), on page 8
- [clear atf](#), on page 9
- [clear avc statistics](#), on page 10
- [clear client tsm](#), on page 12
- [clear config](#), on page 13
- [clear ext-webauth-url](#), on page 14
- [clear location rfid](#), on page 15
- [clear location statistics rfid](#), on page 16
- [clear locp statistics](#), on page 17
- [clear login-banner](#), on page 18
- [clear lwapp private-config](#), on page 19

clear advanced

To reset EDCA parameters, packet parameters, or optimized roaming statistics to their default values, use **clear advanced** command.

```
clear advanced { 802.11a | 802.11b } { optimized-roaming stats | packet | edca-parameter }
```

Syntax Description

802.11a	Specifies the 802.11a network.
802.11b	Specifies the 802.11b network.
optimized-roaming stats	Clear the 802.11a optimized roaming statistics.
packet	Clear the 802.11a packet parameters configuration.
edca-parameter	Clear the 802.11a edca-parameter configuration.

Command Default

None

The following example shows how to reset edca-parameter values to default:

```
(Cisco Controller) >clear advanced 802.11a optimized-roaming stats
```

```
(Cisco Controller) >clear advanced 802.11a packet
```

```
(Cisco Controller) >clear advanced 802.11a edca-parameter
```

clear acl counters

To clear the current counters for an Access Control List (ACL), use the **clear acl counters** command.

clear acl counters *acl_name*

Syntax Description	<i>acl_name</i>	ACL name.
Command Default	None	
Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the current counters for acl1:

```
(Cisco Controller) >clear acl counters acl1
```

clear ap config

To clear (reset to the default values) a lightweight access point's configuration settings, use the **clear ap config** command.

clear ap config *ap_name*

Syntax Description	<i>ap_name</i>	Access point name.
Command Default	None	
Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

Usage Guidelines

Entering this command does not clear the static IP address of the access point.

The following example shows how to clear the access point's configuration settings for the access point named ap1240_322115:

```
(Cisco Controller) >clear ap config ap1240_322115
Clear ap-config will clear ap config and reboot the AP. Are you sure you want continue?
(y/n)
```

clear ap eventlog

To delete the existing event log and create an empty event log file for a specific access point or for all access points joined to the controller, use the **clear ap eventlog** command.

```
clear ap eventlog {specific ap_name | all}
```

Syntax Description	specific	Specifies a specific access point log file.
	<i>ap_name</i>	Name of the access point for which the event log file is emptied.
	all	Deletes the event log for all access points joined to the controller.
Command Default	None	
Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to delete the event log for all access points:

```
(Cisco Controller) >clear ap eventlog all
This will clear event log contents for all APs. Do you want continue? (y/n) :y
All AP event log contents have been successfully cleared.
```

clear ap join stats

To clear the join statistics for all access points or for a specific access point, use the **clear ap join stats** command.

```
clear ap join stats {all | ap_mac}
```

Syntax Description

all Specifies all access points.

ap_mac Access point MAC address.

Command Default

None

Command History

Release

7.6

Modification

This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the join statistics of all the access points:

```
(Cisco Controller) >clear ap join stats all
```

clear arp

To clear the Address Resolution Protocol (ARP) table, use the **clear arp** command.

clear arp

Syntax Description This command has no arguments or keywords.

Command Default None

Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the ARP table:

```
(Cisco Controller) >clear arp
Are you sure you want to clear the ARP cache? (y/n)
```

Related Commands

- clear transfer**
- clear download datatype**
- clear download filename**
- clear download mode**
- clear download serverip**
- clear download start**
- clear upload datatype**
- clear upload filename**
- clear upload mode**
- clear upload path**
- clear upload serverip**
- clear upload start**
- clear stats port**

clear ap tsm

To clear the Traffic Stream Metrics (TSM) statistics of clients associated to an access point, use the **clear ap tsm** command.

```
clear ap tsm {802.11a | 802.11b} cisco_ap all
```

Syntax Description

802.11a Clears 802.11a TSM statistics of clients associated to an access point.

802.11b Clears 802.11b TSM statistics of clients associated to an access point.

cisco_ap Cisco lightweight access point.

all Clears TSM statistics of clients associated to the access point.

Command Default

None

Command History

Release	Modification
7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear 802.11a TSM statistics for all clients of an access point:

```
(Cisco Controller) >clear ap tsm 802.11a AP3600_1 all
```


clear atf

To clear Cisco Airtime Fairness configuration or statistics, use the **clear atf** command.

```
clear atf {config | statistics}
```

Syntax Description

config Clears Cisco ATF configuration

statistics Clears Cisco ATF statistics

Command History

Release Modification

8.1 This command was introduced

The following is a sample output of the **clear atf config** command:

```
(Cisco Controller) >clear atf config
```

clear avc statistics

To clear Application Visibility and Control (AVC) statistics of a client, guest LAN, remote LAN, or a WLAN use the **clear avc statistics** command.

```
clear avc statistics {client {all | client-mac} | guest-lan {all | guest-lan-id} | remote-lan {all | remote-lan-id} | wlan {all | wlan-id}}
```

Syntax Description

client	Clears AVC statistics of a client.
all	Clears AVC statistics of all clients.
<i>client-mac</i>	MAC address of a client.
guest-lan	Clears AVC statistics of a guest LAN.
all	Clears AVC statistics of all guest LANs.
<i>guest-lan-id</i>	Guest LAN Identifier between 1 and 5.
remote-lan	Clears AVC statistics of a remote LAN.
all	Clears AVC statistics of all remote LANs.
<i>remote-lan-id</i>	Remote LAN Identifier between 1 and 512.
wlan	Clears AVC statistics of a WLAN.
all	Clears AVC statistics of all WLANs.
<i>wlan-id</i>	WLAN Identifier between 1 and 512.

Command Default

None

Command History

Release Modification

7.6 This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the AVC statistics of a client:

```
(Cisco Controller) >clear avc statistics client 00:21:1b:ea:36:60
```

Related Commands

config avc profile create
config avc profile delete
config avc profile rule
config wlan avc
show avc profile
show avc applications

show avc statistics

debug avc error

debug avc events

clear client tsm

To clear the Traffic Stream Metrics (TSM) statistics for a particular access point or all the access points to which this client is associated, use the **clear client tsm** command.

```
clear client tsm { 802.11a | 802.11b } client_mac { ap_mac | all }
```

Syntax Description

802.11a	Specifies the 802.11a network.
802.11b	Specifies the 802.11b network.
<i>client_mac</i>	MAC address of the client.
<i>ap_mac</i>	MAC address of a Cisco lightweight access point.
all	Specifies all access points.

Command Default

None

Command History

Release Modification

7.6 This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the TSM for the MAC address 00:40:96:a8:f7:98:

```
(Cisco Controller) >clear client tsm 802.11a 00:40:96:a8:f7:98 all
```

Related Commands

clear upload start

clear config

To reset configuration data to factory defaults, use the **clear config** command.

clear config

Syntax Description This command has no arguments or keywords.

Command Default None

Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to reset the configuration data to factory defaults:

```
(Cisco Controller) >clear config
Are you sure you want to clear the configuration? (y/n)
n
Configuration not cleared!
```

Related Commands

- clear transfer
- clear download datatype
- clear download filename
- clear download mode
- clear download serverip
- clear download start
- clear upload datatype
- clear upload filename
- clear upload mode
- clear upload path
- clear upload serverip
- clear upload start
- clear stats port

clear ext-webauth-url

To clear the external web authentication URL, use the **clear ext-webauth-url** command.

clear ext-webauth-url

Syntax Description This command has no arguments or keywords.

Command Default None

Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the external web authentication URL:

```
(Cisco Controller) >clear ext-webauth-url
URL cleared.
```

Related Commands

- clear transfer
- clear download datatype
- clear download filename
- clear download mode
- clear download serverip
- clear download start
- clear upload datatype
- clear upload filename
- clear upload mode
- clear upload path
- clear upload serverip
- clear upload start
- clear stats port

clear location rfid

To clear a specific Radio Frequency Identification (RFID) tag or all of the RFID tags in the entire database, use the **clear location rfid** command.

```
clear location rfid {mac_address | all}
```

Syntax Description

<i>mac_address</i>	MAC address of a specific RFID tag.
--------------------	-------------------------------------

all	Specifies all the RFID tags in the database.
------------	--

Command Default

None

Command History

Release Modification

7.6	This command was introduced in a release earlier than Release 7.6.
-----	--

The following example shows how to clear all the RFID tags in the database:

```
(Cisco Controller) >clear location rfid all
```

Related Commands

clear location statistics rfid

config location

show location

show location statistics rfid

clear location statistics rfid

To clear Radio Frequency Identification (RFID) statistics, use the **clear location statistics rfid** command.

clear location statistics rfid

Syntax Description This command has no arguments or keywords.

Command Default None

Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear RFID statistics:

```
(Cisco Controller) >clear location statistics rfid
```

Related Commands

- config location**
- show location**
- show location statistics rfid**

clear locp statistics

To clear the Location Protocol (LOCP) statistics, use the **clear locp statistics** command.

clear locp statistics

Syntax Description This command has no arguments or keywords.

Command Default None

Command History

Release	Modification
---------	--------------

7.6	This command was introduced in a release earlier than Release 7.6.
-----	--

The following example shows how to clear the statistics related to LOCP:

```
(Cisco Controller) >clear locp statistics
```

Related Commands

- clear nmsp statistics**
- config nmsp notify-interval measurement**
- show nmsp notify-interval summary**
- show nmsp statistics**
- show nmsp status**

clear login-banner

To remove the login banner file from the controller, use the **clear login-banner** command.

clear login-banner

Syntax Description This command has no arguments or keywords.

Command Default None

Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to clear the login banner file:

```
(Cisco Controller) >clear login-banner
```

Related Commands [transfer download datatype](#)

clear lwapp private-config

To clear (reset to default values) an access point's current Lightweight Access Point Protocol (LWAPP) private configuration, which contains static IP addressing and controller IP address configurations, use the **clear lwapp private-config** command.

clear lwapp private-config

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command History

Release	Modification
7.6	This command was introduced in a release earlier than Release 7.6.

Usage Guidelines

Enter the command on the access point console port.

Prior to changing the FlexConnect configuration on an access point using the access point's console port, the access point must be in standalone mode (not connected to a Cisco WLC) and you must remove the current LWAPP private configuration by using the **clear lwapp private-config** command.



Note The access point must be running Cisco Access Point IOS Release 12.3(11)JX1 or later releases.

The following example shows how to clear an access point's current LWAPP private configuration:

```
ap_console >clear lwapp private-config
removing the reap config file flash:/lwapp_reap.cfg
```

clear lwapp private-config