



## Preface

---

- [Document Conventions](#) , on page i
- [Related Documentation](#), on page iii
- [Communications, Services, and Additional Information](#), on page iii

## Document Conventions

This document uses the following conventions:

| Convention                          | Description   |
|-------------------------------------|---|
| <code>^</code> or <code>Ctrl</code> | Both the <code>^</code> symbol and <code>Ctrl</code> represent the Control ( <code>Ctrl</code> ) key on a keyboard. For example, the key combination <code>^D</code> or <code>Ctrl-D</code> means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.) |
| <b>bold font</b>                    | Commands and keywords and user-entered text appear in <b>bold font</b> .  |
| <i>Italic font</i>                  | Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .   |
| <code>Courier font</code>           | Terminal sessions and information the system displays appear in <code>courier font</code> .   |
| <b>Bold Courier font</b>            | <b>Bold Courier font</b> indicates text that the user must enter.   |
| [x]                                 | Elements in square brackets are optional.   |
| ...                                 | An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.   |
|                                     | A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.   |
| [x   y]                             | Optional alternative keywords are grouped in brackets and separated by vertical bars.   |
| {x   y}                             | Required alternative keywords are grouped in braces and separated by vertical bars.   |

| Convention  | Description   |
|-------------|---|
| [x {y   z}] | Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element. |
| string      | A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.   |
| <>          | Nonprinting characters such as passwords are in angle brackets.   |
| [ ]         | Default responses to system prompts are in square brackets.   |
| !, #        | An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.   |

### Reader Alert Conventions

This document may use the following conventions for reader alerts:



**Note** Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



**Tip** Means *the following information will help you solve a problem*.



**Caution** Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



**Timesaver** Means *the described action saves time*. You can save time by performing the action described in the paragraph.



**Warning** IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number provided at the end of each warning statement to locate its translation in the translated safety warnings for this device. Statement 1071

SAVE THESE INSTRUCTIONS

## Related Documentation



---

**Note** Before installing or upgrading the device, refer to the release notes at <https://www.cisco.com/c/en/us/support/wireless/catalyst-9800-series-wireless-controllers/products-release-notes-list.html>.

---

- Cisco Catalyst 9800-40 Wireless Controller documentation, located at:  
<http://www.cisco.com/go/c9800>
- Cisco Catalyst 9800-80 Wireless Controller documentation, located at:  
<http://www.cisco.com/go/c9800>
- Cisco Catalyst 9800-L Wireless Controller documentation, located at:  
<http://www.cisco.com/go/c9800>

## Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions, and services, visit [Cisco DevNet](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

## Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a gateway to the Cisco bug-tracking system, which maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. The BST provides you with detailed defect information about your products and software.

## Documentation Feedback

To provide feedback about Cisco technical documentation, use the feedback form available in the right pane of every online document.

