



EDCA Parameters

- [EDCA parameters, on page 1](#)
- [Configure EDCA parameters \(GUI\), on page 1](#)
- [Configure EDCA parameters \(CLI\), on page 2](#)

EDCA parameters

An Enhanced Distributed Channel Access (EDCA) parameter is a wireless channel access configuration that

- assigns preferential access to voice, video, and other quality of service (QoS) traffic
- differentiates wireless traffic priority through distinct parameter settings, and
- enables customization of wireless performance using controller GUI or CLI interfaces.

Configure EDCA parameters (GUI)

Set global EDCA parameters to optimize channel access for voice, video, and quality-of-service traffic on your wireless networks using GUI.

Procedure

Step 1 Choose **Configuration > Radio Configurations > Parameters**. On this window, you can configure global parameters for 802.11a/n/ac (5 GHz) and 802.11b/g/n (2.4 GHz) radios.

Note

You cannot configure or modify parameters, if the radio network is enabled. Disable the network status in the **Configuration > Radio Configurations > Network** window before proceeding. To apply the EDCA settings to the WLANs, disable and then re-enable the WLANs.

Step 2 In the **EDCA Parameters** section, select an EDCA profile from the **EDCA Profile** drop-down list. Enhanced Distributed Channel Access (EDCA) parameters provide preferential wireless channel access for voice, video, and other QoS traffic.

- Step 3** For 802.11a/n/ac (5 GHz) radios, in the (DFS 802.11h) section, enter the local power constraint. You cannot configure power constraint if the DTPC Support check box on the **Configure > Radio Configurations > Network** page is checked. The valid range is 0 dBm to 30 dBm.
- Step 4** Check the **Channel Switch Announcement Mode** check box, if you want the AP to announce when it is switching to a new channel and the new channel number. The default value is disabled.
- Step 5** Check the **Smart DFS** check box to enable Dynamic Frequency Selection (DFS) and avoid radar signal interference.
- Step 6** Click **Apply**.

Configure EDCA parameters (CLI)

Set EDCA parameters on a wireless controller to optimize Quality of Service (QoS) for different traffic profiles and improve network performance using commands.

Procedure

- Step 1** Enter the global configuration mode.

Example:

```
Device# configure terminal
```

- Step 2** Disable the radio network.

Example:

```
Device(config)# ap dot11 {5ghz | 24ghz | 6ghz} shutdown
```

- Step 3** Enable specific EDCA parameters for the 802.11a, 802.11b/g, or 802.11 6-GHz network.

Example:

```
Device(config)# ap dot11 {5ghz | 24ghz | 6ghz} edca-parameters {client-load-based | custom-voice | fastlane | optimized-video-voice | optimized-voice | svp-voice | wmm-default}
```

Note

The **custom-voice** option is not supported for Cisco Catalyst 9800 Series Wireless Controller .

- **client-load-based**: Enables client load based EDCA configuration.
- **custom-voice**: Enables custom voice parameters for the 802.11a or 802.11b/g network.
- **fastlane**: Enables the fastlane parameters for the 802.11a or 802.11b/g network.
- **optimized-video-voice**: Enables EDCA voice-optimized and video-optimized parameters for the 802.11a or 802.11b/g network. Choose this option when both voice and video services are deployed on your network.
- **optimized-voice**: Enables non-SpectraLink voice-optimized profile parameters for the 802.11a or 802.11b/g network. Choose this option when voice services other than SpectraLink are deployed on your network.

- **syp-voice**: Enables SpectraLink voice-priority parameters for the 802.11a or 802.11b/g network. Choose this option if SpectraLink phones are deployed on your network to improve the quality of calls.
- **wmm-default**: Enables the Wi-Fi Multimedia (WMM) default parameters for the 802.11a or 802.11b/g network. This is the default option. Choose this option when voice or video services are not deployed on your network.

Step 4 Enable the radio network and return to the privileged EXEC mode.

Example:

```
Device(config)# no ap dot11 {5ghz | 24ghz | 6ghz} shutdown
Device(config)# end
```

Step 5 Display the current status of MAC optimization for voice.

Example:

```
Device# show ap dot11 {5ghz | 24ghz | 6ghz} network
```
