



Installing the Power Supply

This chapter describes how to install the power supply for the hardware platform, operating as either a Wireless Controller or Campus Gateway.

The device can be powered using one power supply unit.

The power supply does not have an on/off switch and can only be powered down by removing AC input.

- [Power supply, on page 1](#)
- [Installation guidelines, on page 3](#)
- [Install an AC power supply, on page 4](#)
- [Find the power supply serial number, on page 4](#)

Power supply

This table describes the external power supply.

Table 1: Power supply adapter part number and description

Part number	Description
C9800-AC-110W	110W AC power supply

The 110W AC power supply is an autoranging unit that supports input voltages between 100 and 240 VAC. The power supply adapter uses an 18- AWG power cord for connection to an AC power outlet.

Figure 1: 110W AC power cord



A 6-pin latching DC connector supplies power to the device.

Figure 2: 6-pin latching DC connector



Figure 3: DC power cord**Verify connections**

To verify if the power supply adapter is connected to the power outlet, first turn on the power, then check the LED status.

Figure 4: LED location

This table describes the LED status of the power supply adapter.

Table 2: Power supply adapter LED and description

Power supply adapter LED	Description
Off (LED is off)	No input power
Green	Input power present

Installation guidelines

This section includes the basic installation guidelines for installing a power supply. Read this section before you start the installation procedure. Translations of the warning statements appear in the RCSI guide on Cisco.com.

Observe these guidelines when installing a power supply:

- A power supply that is only partially connected to the device can disrupt the system operation.

**Warning**

Installation of the equipment must comply with local and national electrical codes. **Statement 1074**

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment. **Statement 1030.**

Install an AC power supply

Procedure

-
- Step 1** Connect the power cord to the power supply and to an AC power outlet. Turn on the power at the power source.
- Step 2** Plug the DC cord into the device.
- Step 3** Confirm that the power supply PS OK LED is green.
-

Find the power supply serial number

If you contact Cisco Technical Assistance regarding a power supply, you need to know the serial number. You can find the serial number printed on the external power adapter.